


111878 CHANDELIER SHARD


ASSEMBLY INSTRUCTION

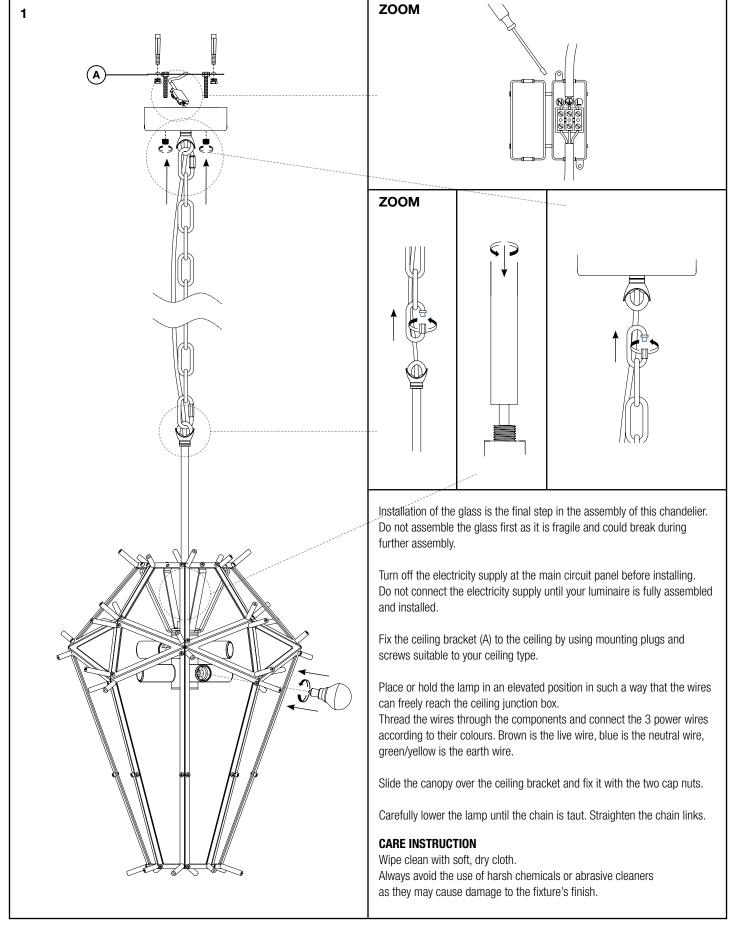



111878 CHANDELIER SHARD

ASSEMBLY INSTRUCTION

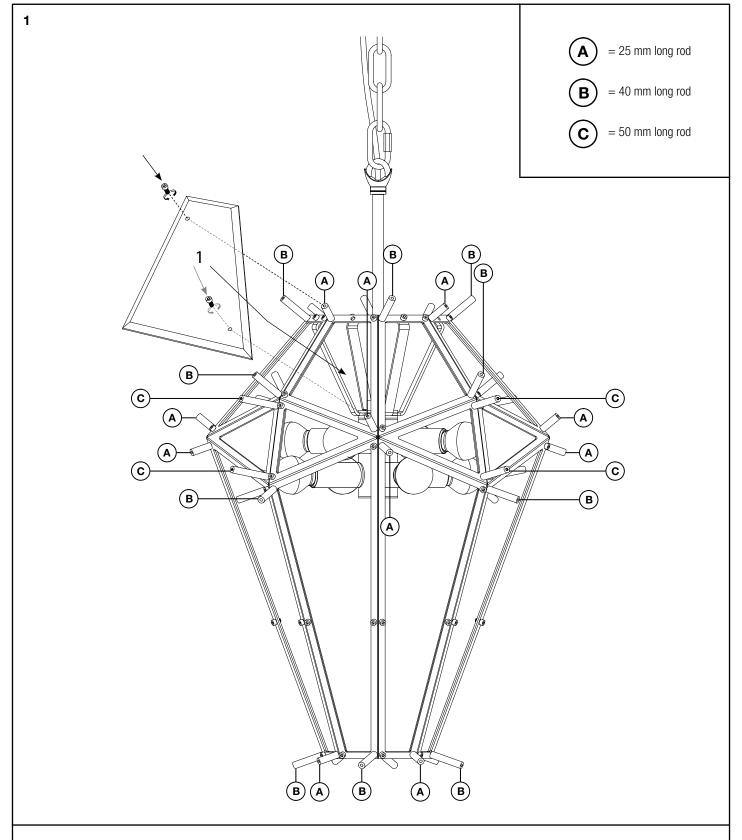

Sort the glass according to the numbers.

Start with glass nr 1 and fix it to the 25 mm long rod. Do not tighten the screws too tight, as it might crack the glass.

Follow the schedule as in pictorials to fix the rest of the glass.

Top layer should be glass 1 to 8 Middle layer should be glass 9 to 12 Bottom layer should be glass 13 to 20



111878 CHANDELIER SHARD

ASSEMBLY INSTRUCTION

