


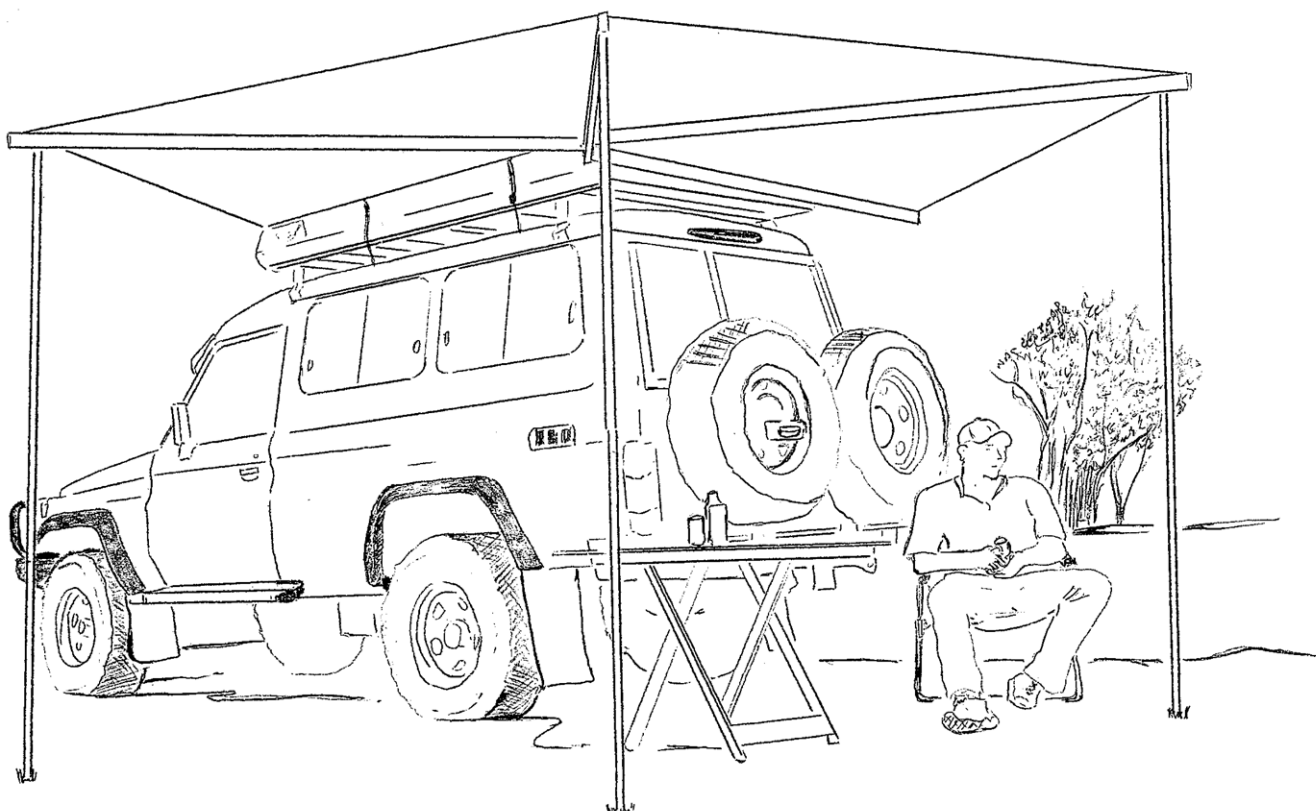

270°

P.O. Box 68323, Bryanston 2021.  
200 Cussonia Park, 3 Ridge Road,  
Laser Park, Honeydew, South Africa.  
Tel: (011) 794-6311 • Fax: (011) 794-6233


## OPERATING INSTRUCTIONS




## HELPFUL HINTS

1. Periodically clean the fabric with water. (Let the fabric dry before rolling it up. This also helps prevent mildew.)  
Cleaning is especially important prior to storing the awning for long periods of time to prevent mildew and stains.
2. Use paraffin wax on Support Arms and Rafter Arms for smoother sliding movement.


## TO OPEN

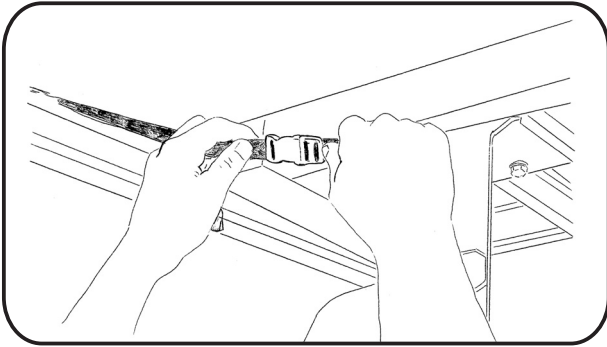


Secure strap provided to your roofrack or bars and then adjust one end by pulling on the strap

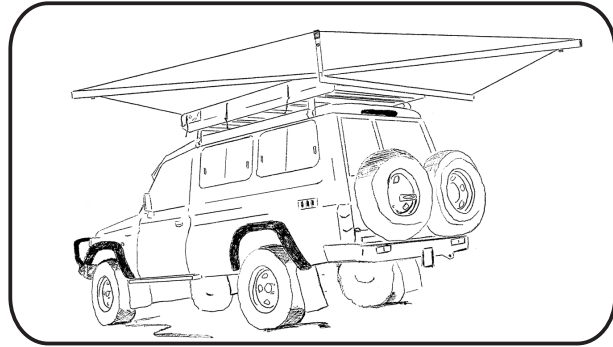


BAT in open position without legs deployed.  
**NB:** The BAT must only be deployed in this manner in fair weather

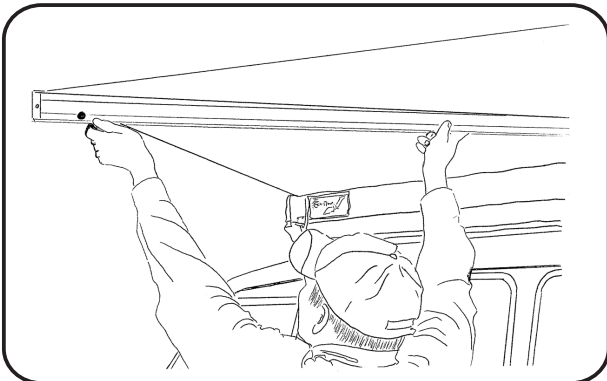


Loosen black button on leg and slide out

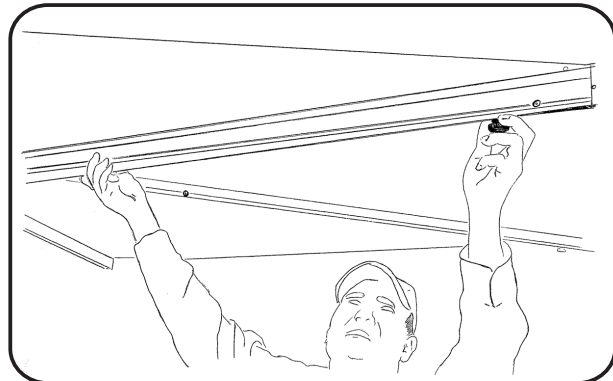


Drop the three BAT legs out from aluminium profile

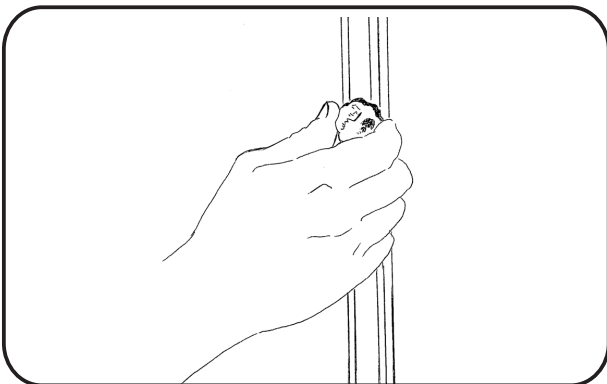

Adjust to correct height and secure black button

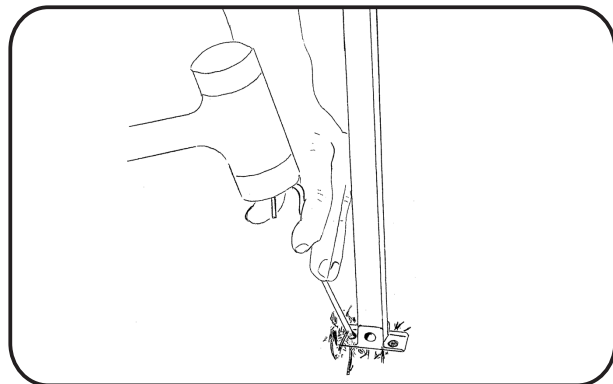


Secure BAT awning leg with pegs provided

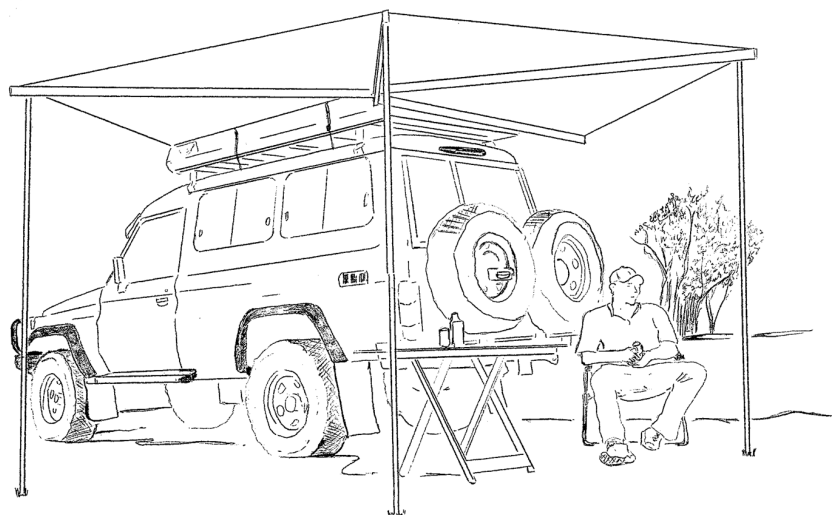


RELAX AND ENJOY!!!


## TO OPEN

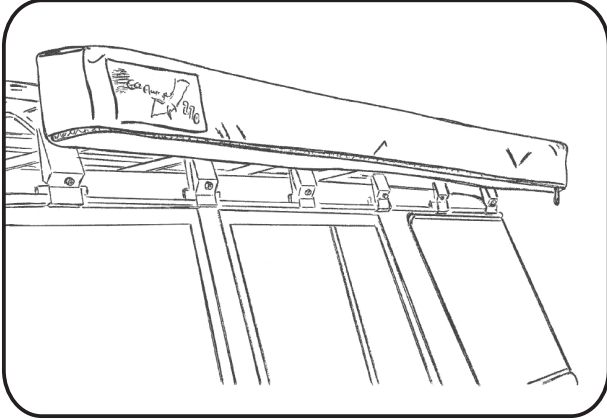


BAT in closed position

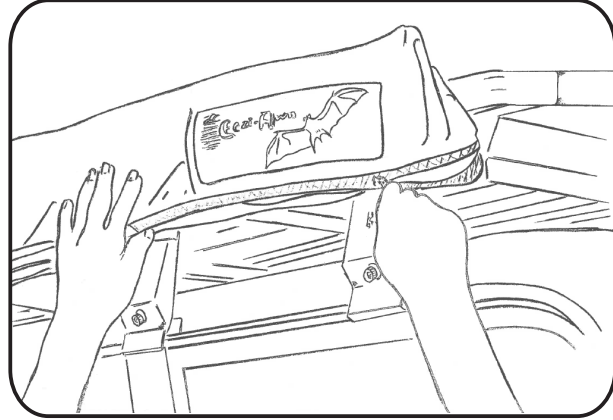


Unzip bag in order to open the BAT

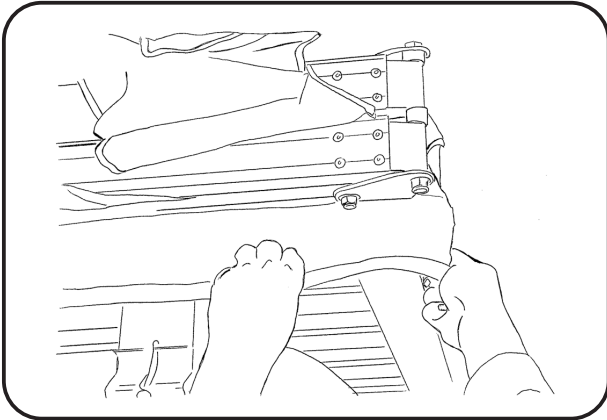


Fold bag back on the hinge side first

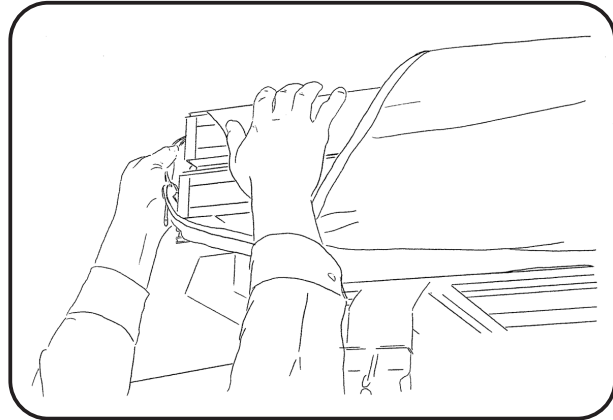


Fold bag back on profile side and loosen retaining strap

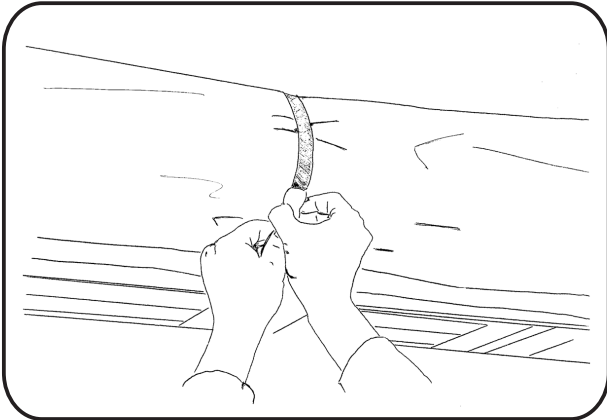


Undo all plastic clips that are retaining fabric in place

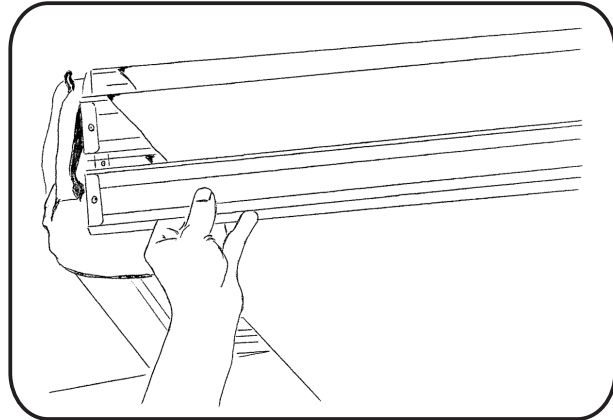


Take hold of aluminium profile

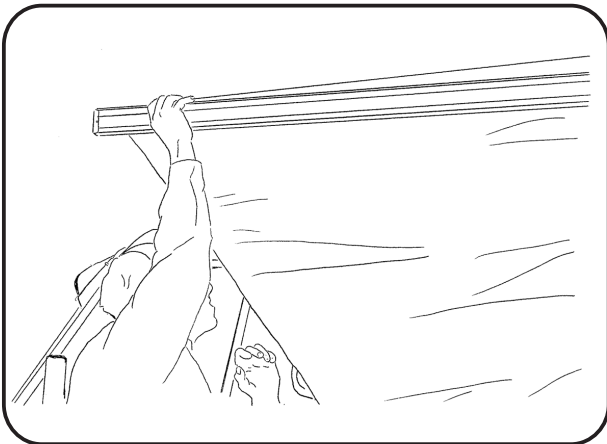

Pull on aluminium profile to release BAT

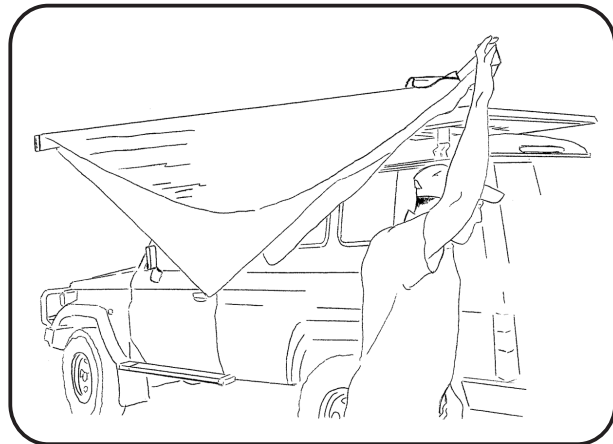


Walk with the profile in your hand in order to deploy the BAT

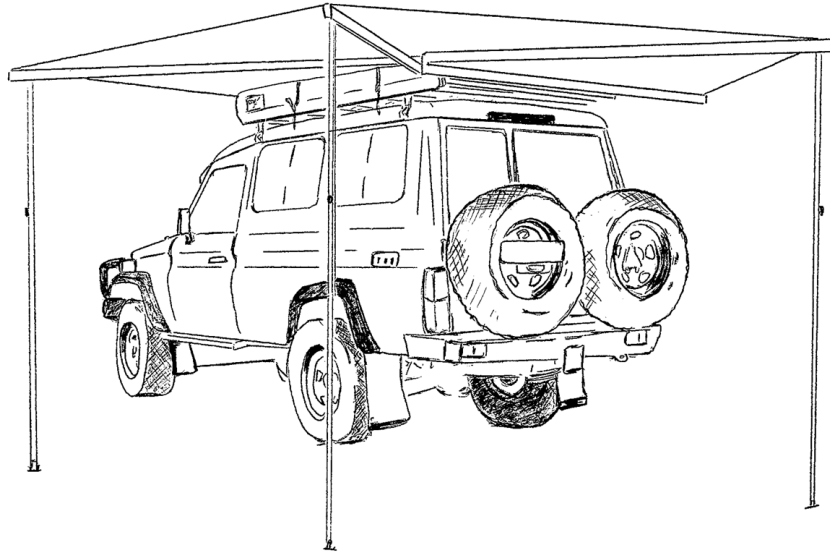


Legs must be deployed and anchored in wind and rain


## TO CLOSE

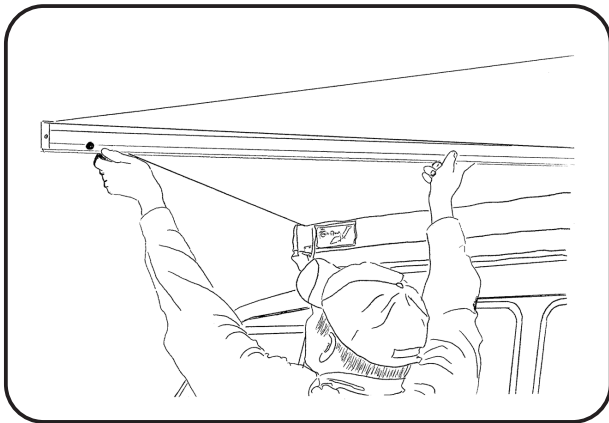


Replace awning legs back into aluminium profile

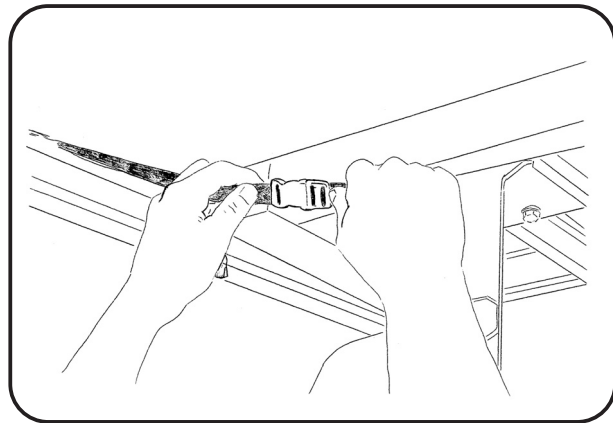


Undo plastic clip on retaining strap

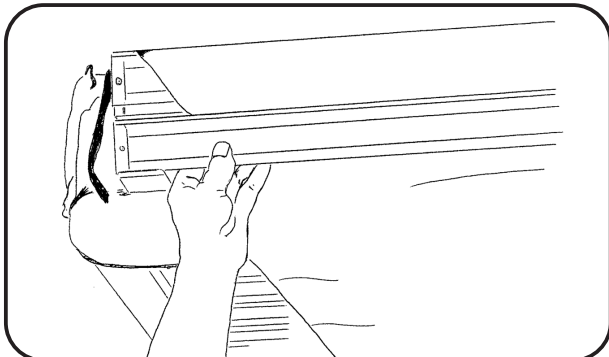


Fold aluminium profiles back into storage position - help guide them so that they sit on top of one another and secure with strap provided

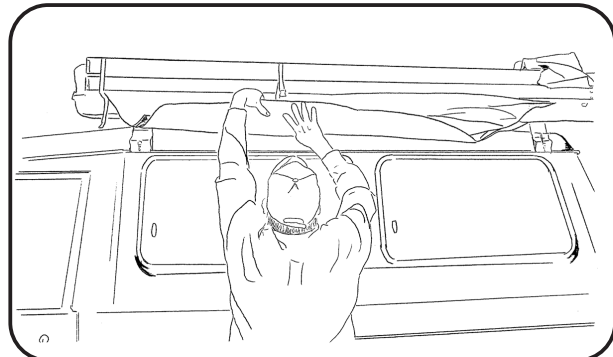

Roll fabric back up and secure with strap provided

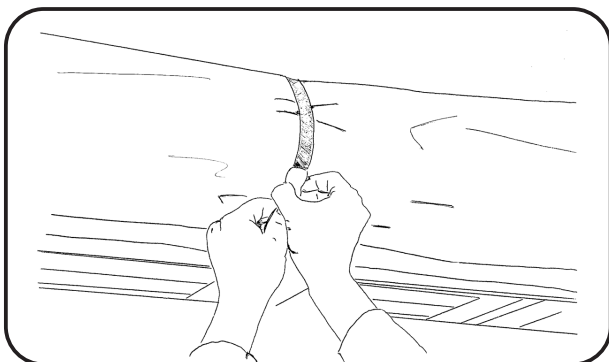


Secure fabric with strap provided

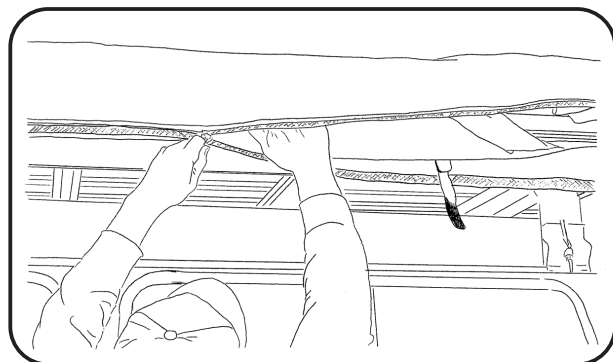


Help with one hand to push fabric in place and close zip




## INSTALLATION

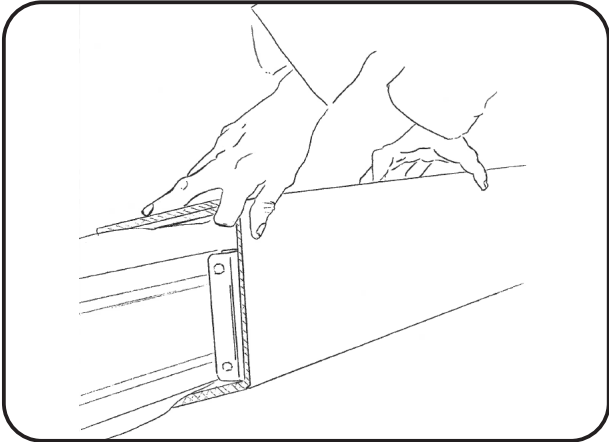


Remove SWIFT from its packaging and place it face down

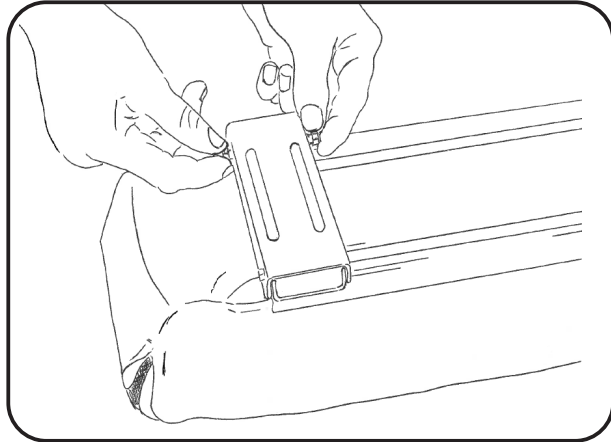


Undo top bracket of kit provided

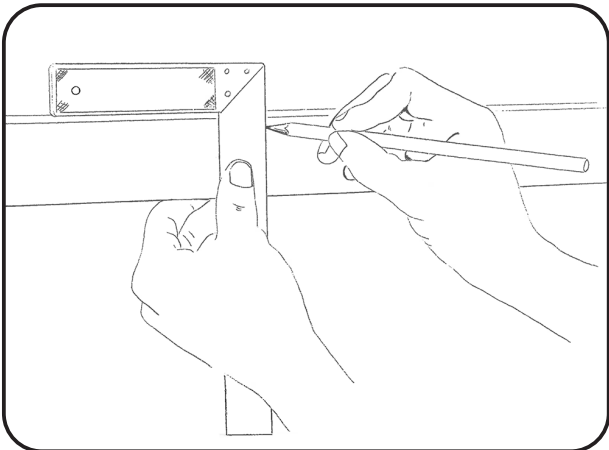


By using a set square, draw a straight line where you would like to mount the front kit to the roofrack

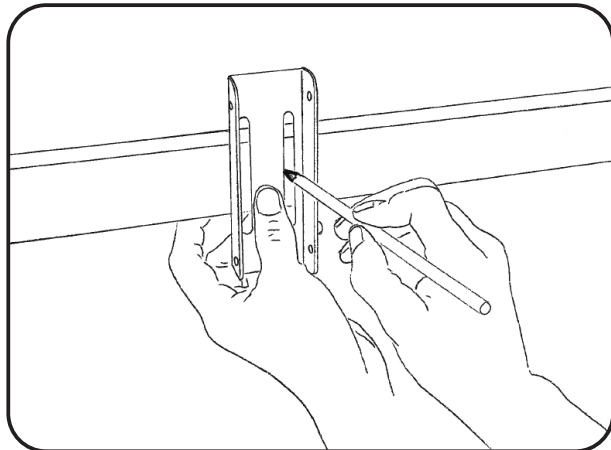

Place the kit into position and mark the holes on the roofrack

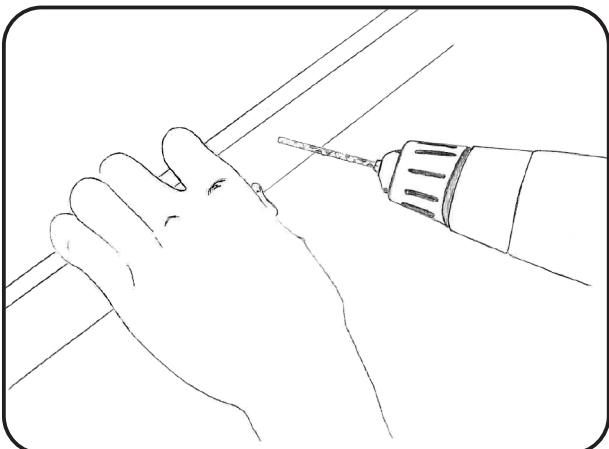

Drill holes in rack by using a 6,5mm drill bit

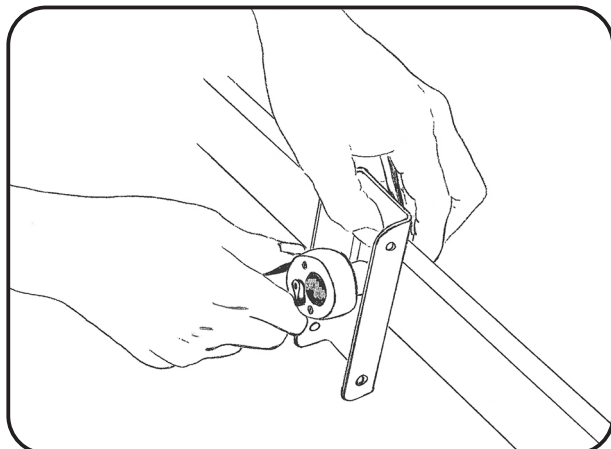


Secure brackets with bolts






## INSTALLATION


Optional extra K9 Roofrack L bracket kit - no drilling required.

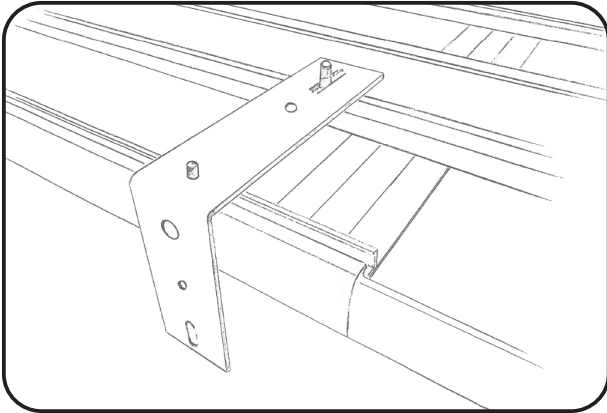




Slide bolts into K9 rack and position L bracket

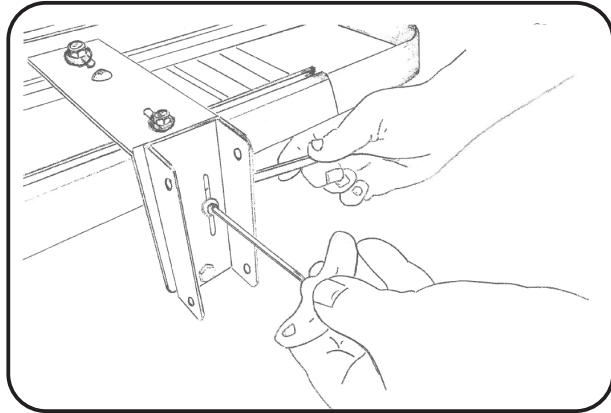

Secure L bracket, gusset in position and tighten with bolts provided

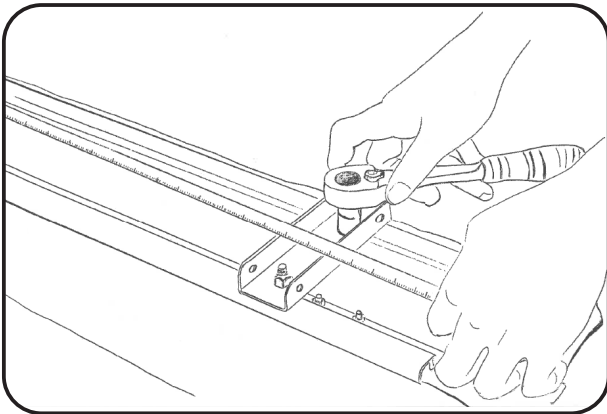

Use a measuring tape to align the kits to the **BAT 270** with the ones you have fitted to your roofrack. Do this by loosening the bolts on the kit. The kit on the hinge side of the **BAT** should never be more than 300mm from the edge. Hold the **BAT** in position and bolt the kits together

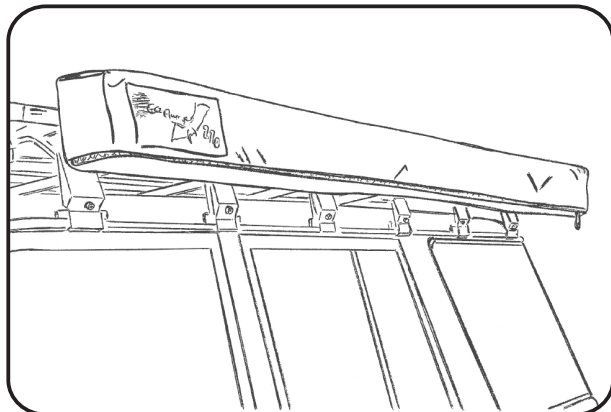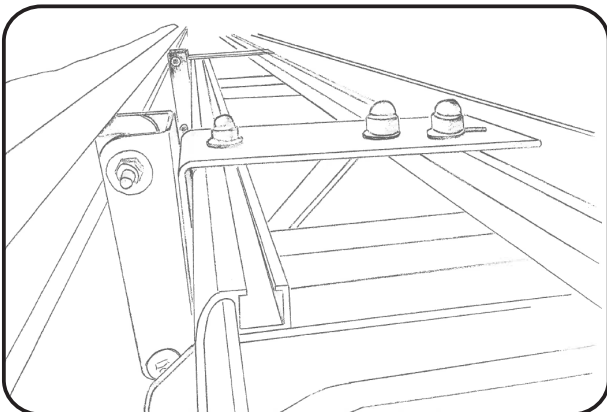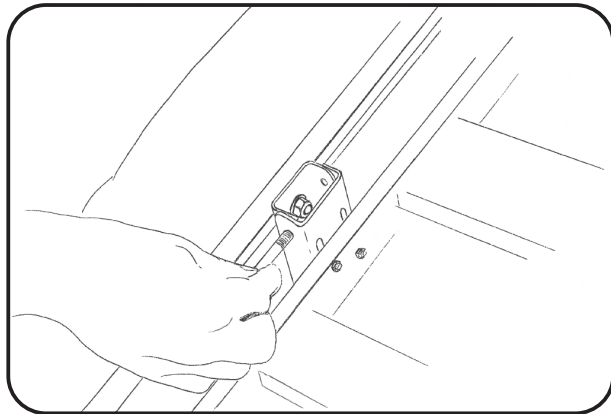

**JOB WELL DONE!**