

Beginners Guide to Potting Up

AutoPot watering systems

1



1-2" layer of washed gravel/
perlite/pH stable clay pebbles.


Place root
control disc
gold face down
in pot



Cover AirDomes 2/3 washed gravel/
perlite/pH stable clay pebbles.

**AirDome
Option**
*see below for the
AirDome benefits

2

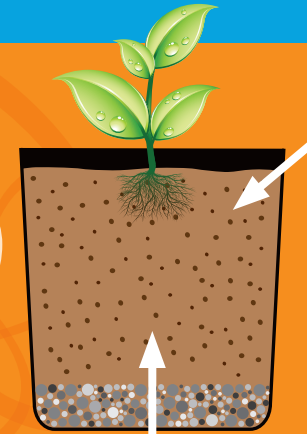


Coco, soil or a mixture of either with perlite or clay pebbles.
See the AutoPot brochure for additional substrate suggestions.

Transplant
young plant




**AirDome
Option**

3

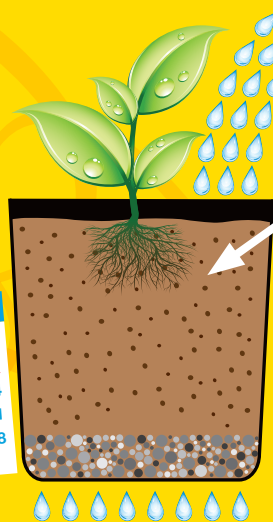

Allow roots
to establish
for 7-10 days
before you turn
system on


Water through.
Allow to drain
outside of the
tray for 15
minutes. Clean
bottom and
side of pots.

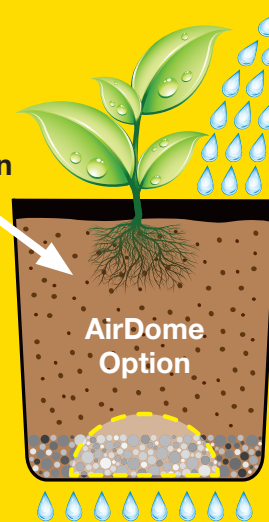

**AirDome
Option**


Calendar						
M	T	W	T	F	S	S
X	X	X	X	X	X	X
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30					

4

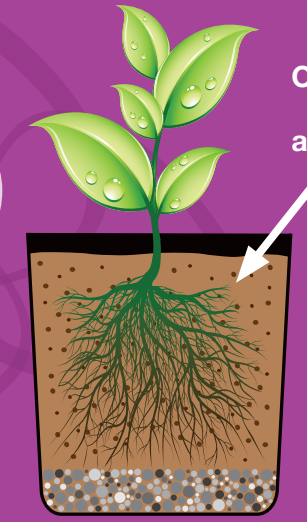

Once roots are
established
after 7-10 days

Turn on the
AutoPot
System.

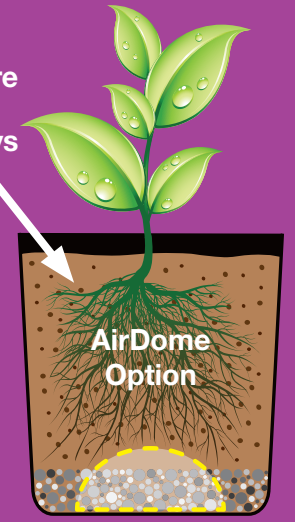

**AirDome
Option**

* **AirDome Benefits:** AirDome has been designed to increase the amount of air around the rootzone of the pot.

If you are lucky enough to have power in your greenhouse this little addition can increase yields by 30%. For more information please visit www.autopot-usa.com