


# STEP ONE


Space posts 36" apart, measuring from inside edge of post. Secure with (4) structural screws per post.

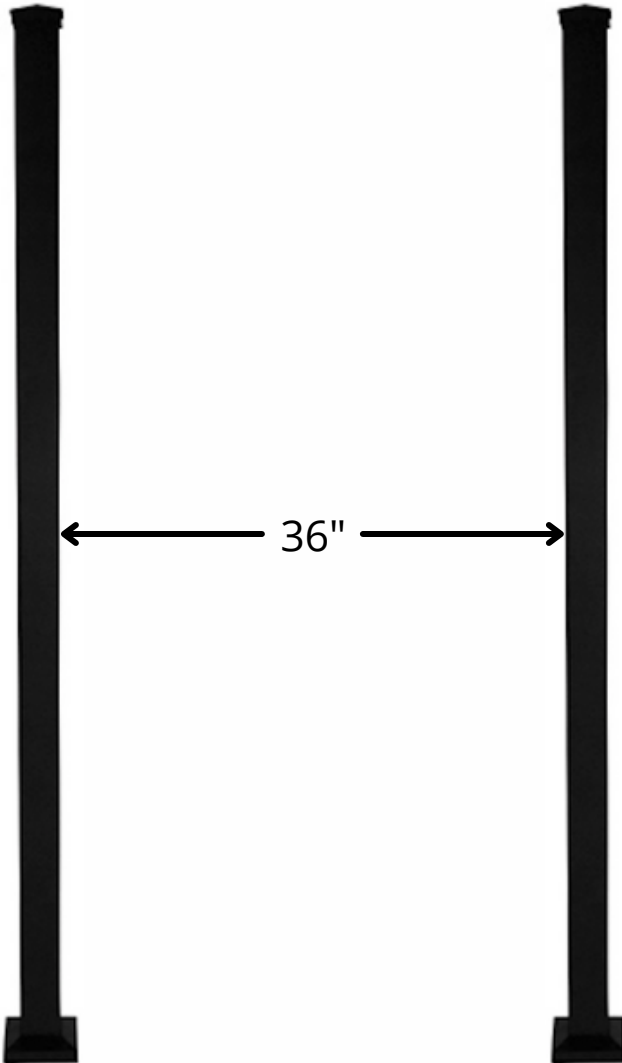

# STEP TWO

Mount post caps over top of post and press down.


Install (2) piece base plate cover around base of post.

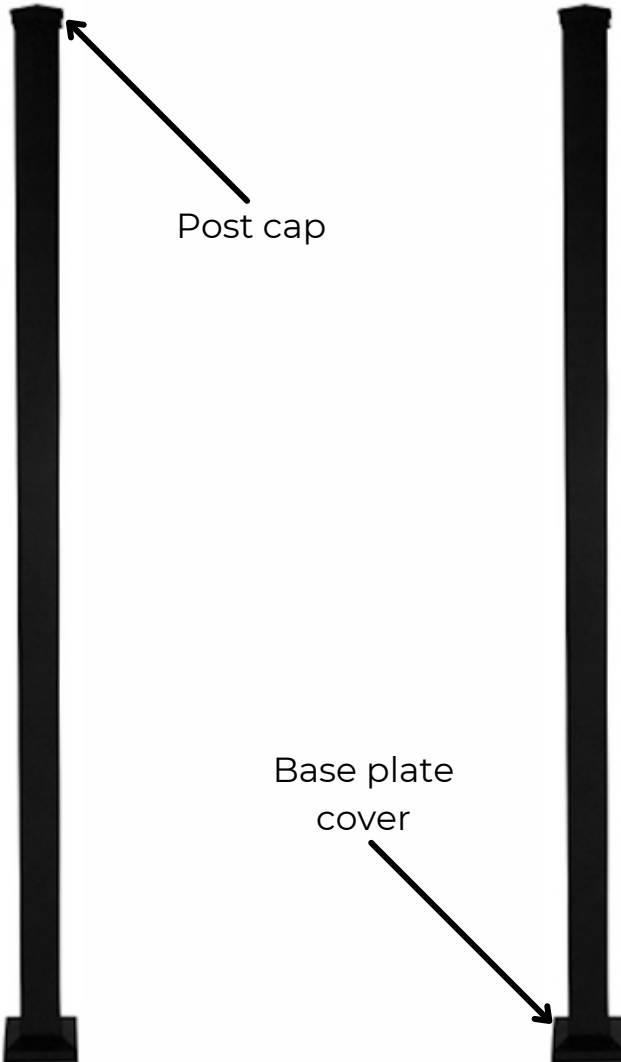

# STEP THREE

Install mounting channel into each post with (10) self-tapping screws provided.

We recommend a 3.25" gap from surface to channel.

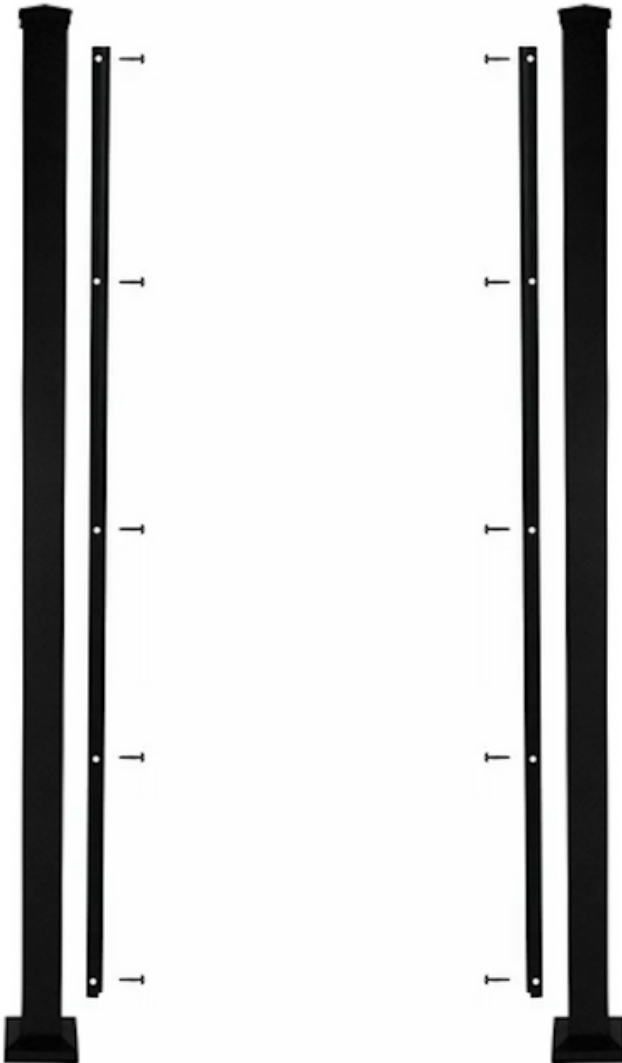

# STEP FOUR

Secure privacy screen to mounting channels through pre-drilled holes with (10) screws and nuts provided.

