


**Wardrobe with Drawer is supplied with the following parts :**

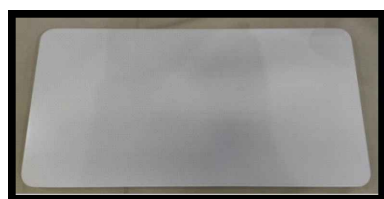

Top  
1 pc



Base  
1 pc



Door  
2 pcs



Side panels  
2 pcs



Back panel  
1 pc



Top shelf  
1 pc




Bottom shelf  
1 pc



Stainless Hanging Rod  
1 pc



Allen Key  
1 pc

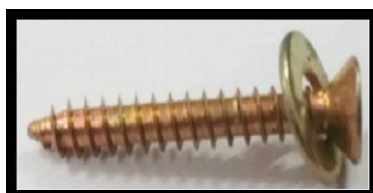

Screw 1 1/4" with washer  
14 pcs



Hand Drill  
Supplied By Customer



Legs  
4 pcs



Screw 5/8 "  
6 pcs



Bolt 20mm  
16 pcs




Bolt 30mm  
4 pcs



Bolt 40mm  
4 pcs


### Step 1

Lay down the Wardrobe, on clean and flat surface.

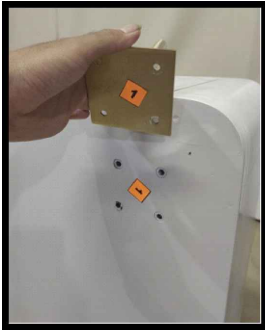


### Step 2

Install left & right panel to the base with 40mm bolt. Then Install bottom shelf inside of the wardrobe.

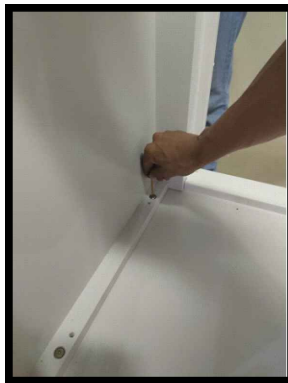

### Step 3

Install back panel to body with 1 1/4" screw + washer.

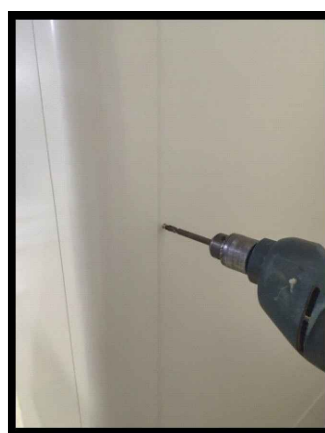

#### Step 4

Install the top profile to the wardrobe with 30mm bolt.



#### Step 5

Install the door to the base with  $\frac{5}{8}$ " screw.



#### Step 6

Install top shelf and hanging rod inside of the wardrobe.



#### Fully Assembled

Wardrobe with Drawer is ready to use

