

Screen Pet Door Conversion Kit

Installation Guide



**Check out our guided
installation video!**

**Scan the *QR* code with your
phone camera or visit:**

petdoors.com/pages/screen-install

Installation Video:



Screen Pet Door

INSTALLATION INSTRUCTIONS

PARTS AND TOOLS

- Roll of protective tape *
- (4) Pairs of magnets *
- Instruction booklet *
- Sharp blade
- Scissors
- Tape measure
- Masking tape
- Pen/Pencil

*included

INSTALLATION VIDEO LINK

- Scan the QR code with your phone camera or visit:
- petdoors.com/pages/screen-install



STEP 1 - PREP YOUR DOOR

Detach your door from the hinges or sliding track and lay it flat on your work table or floor. Make sure your door frame, mesh screen, and work surface are clean.

STEP 2 - APPLY 1ST BOTTOM LAYER OF PROTECTIVE TAPE


Place the loose end of the protective tape flush into one of the bottom corners of the frame. Then slowly roll the rest of the tape roll along the bottom edge of the screen in a straight line, applying light pressure to adhere it to the screen. When you reach the opposite edge of the bottom frame, cut off the tape and press it into the corner.

The tape should be on the screen mesh only. Avoid overlapping the tape or applying it in multiple parts.




STEP 3 - MARK YOUR PET'S HEIGHT

Use a tape measure to find the height of your pet. Measure from their front paws to the highest point on their shoulders while standing.

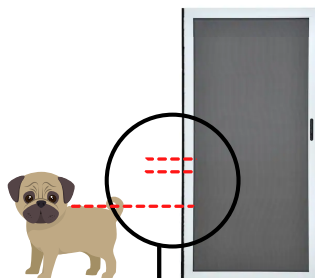


Use the tape measure to mark 4" above your dog's height on the door frame from the bottom of the frame (mark #1) with a pencil. Add another mark 1" above this mark (mark #2). This is your allowance for when you cut the screen off of the door frame in Step #7.

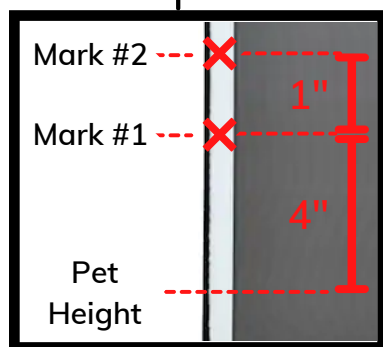

STEP 4 - APPLY 1ST LAYER OF PROTECTIVE TAPE ON SIDE

Apply tape up each side of the door frame, repeating the same steps as Step #2. Make sure that the top of the tape is aligned with mark #2.

Do not overlap the bottom end of the tape with the protective tape already lining the bottom edge of the door.

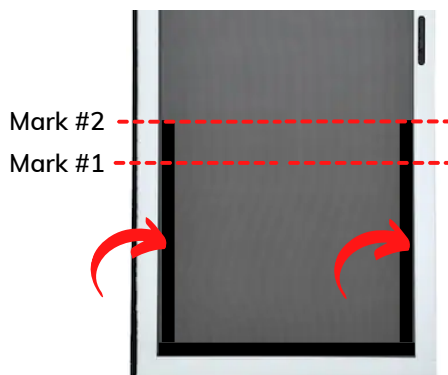

STEP 5 - APPLY 2ND LAYER OF PROTECTIVE TAPE


Flip the door over and repeat Steps #2 and #4. Make sure that this layer of tape is aligned as close as possible to the first layer.

STEP 6 - PRESS DOWN TAPE & REMOVE CLEAR LINER

Flip the door over so that the flat side is down once more. Apply pressure to the tape again to ensure that it adheres firmly. Remove the clear liner on both layers of tape.

STEP 7 - CUT AWAY SCREEN FROM DOOR FRAME


Starting from mark #1 on one side, cut between the tape and the frame with a sharp blade. Go along the entire edge of the frame until you reach the height of mark #1 on the other side (red dotted line for reference).

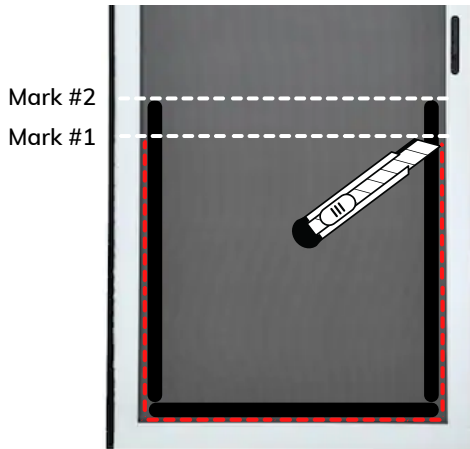

STEP 8 - REINFORCE THE DOOR FLAP

Apply a “patch” of tape horizontally over the top split on the screen, aligning the top of the tape with Mark #2. This should overlap with the tape applied in steps 4 & 5 and a portion of the cut made in step 7.

Do this for left & right sides of the flap, then flip the door over and repeat. Remove the clear liner on the patch.

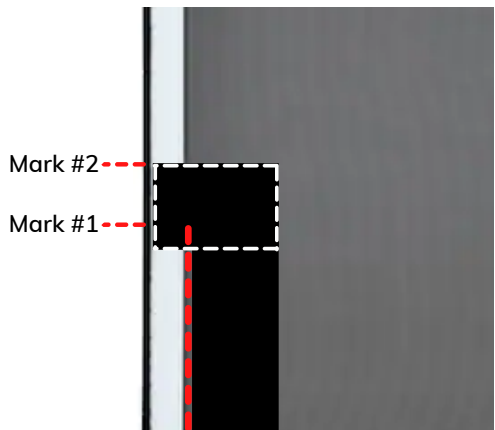


STEP 9 - CLEAN UP EDGES

Use your scissors to trim any frayed edges of the screen that are peaking out from the tape (Do not to cut the tape itself). You can remove excess spline from the frame by prying out the disconnected pieces with a screwdriver.

STEP 10 - ATTACH MAGNETS

On the side of the door that faces outside, tape one-half of each magnet to the bottom edge of the door frame. Make sure that the magnetic side is facing up (Do not press magnets firmly in until after step 11).

Attach the other half of the magnet pair to the bottom of the flap, lining them up with each of the door frame magnets. Make sure that these magnets face down so that the magnets stick together.

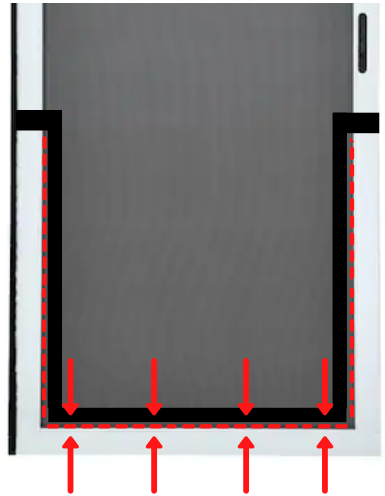

STEP 11 - TEST THE MAGNETS

Test the door flap to make sure that the magnets stick together after use by pushing the flap out and letting it fall back into place. If the magnets do not click back together, realign them so that they will match up.

STEP 12 - INSTALL THE DOOR

Now that your screen pet flap is complete, you can reinstall your door back into its doorway and enjoy!



**Check out our guided
installation video!**

**Scan the QR code
with your phone
camera or visit:**

petdoors.com/pages/screen-install

Installation Video:

