



MODERN | HOUSE | NUMBERS

» QUICKSHIP

PRODUCT DIMENSIONS ALUMINUM AND POWDER COATED NUMBERS

PALM SPRINGS TYPEFACE: NUMBERS 0-9

NPS

	vinyl-only sizes				number width					quantity of pre-drilled stud holes				
	*1"	*2"	*3"	4"	6"	8"	12"	15"	4"	6"	8"	12"	15"	
0	1	2	3	4	6	8	12	15	2	2	2	4	4	
1	0.25	0.50	0.88	1.13	1.66	2.25	3.50	4.13	2	2	2	3	3	
2	0.75	1.38	2.13	2.88	4.27	5.75	8.50	10.63	2	2	2	4	4	
3	0.75	1.50	2.25	2.88	4.40	5.88	8.63	10.75	2	2	2	4	4	
4	0.75	1.63	2.38	3.13	4.68	6.25	9.38	11.75	2	2	2	4	4	
5	0.75	1.38	2.13	2.63	4.20	5.63	8.38	10.50	2	2	2	4	4	
6	0.75	1.50	2.13	2.88	4.32	5.75	8.63	10.75	2	2	2	4	4	
7	0.75	1.38	2.13	2.88	4.27	5.75	8.50	10.63	2	2	2	4	4	
8	0.75	1.38	2.13	2.88	4.26	5.63	8.50	10.63	2	2	2	4	4	
9	0.75	1.50	2.13	2.88	4.32	5.75	8.63	10.75	2	2	2	4	4	

*QUICKSHIP ELIGIBLE*
*QUICKSHIP ELIGIBLE*

>>QUICKSHIP- eligible products leave our warehouse in 3 business days. 6", Palm Springs in brushed aluminum and flat black powder coat only.


0123456789

## QUICKSHIP PRODUCT INSTALLATION GUIDE

### HOUSE | NUMBERS QUICKSHIP DRILLING STENCILS

#### STEP 1

Arrange individual paper stencils in desired order. Gather supplies: tape and ruler (not included). *For horizontal arrangement, go to step 2A. For vertical arrangement, skip to step 3A.*


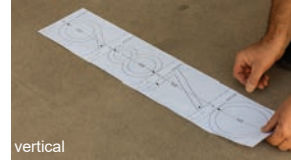


#### STEP 3A: VERTICAL ARRANGEMENT

Align stencils vertically using labeled vertical guideline.

#### STEP 2A: HORIZONTAL ARRANGEMENT

Align stencils horizontally using labeled guidelines at top and bottom.

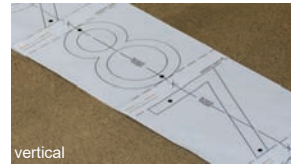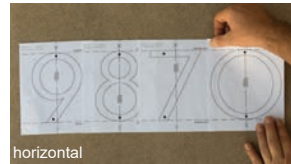

#### STEP 3B: VERTICAL ARRANGEMENT

Align "X" marks on each stencil at top and bottom to achieve equal spacing between each number. Keep vertical guidelines aligned. Overlap of paper stencil edges is to be expected.

#### STEP 2B: HORIZONTAL ARRANGEMENT

Determine your desired spacing between numbers on the available space. Use a ruler to measure space between each number. Overlap of paper stencil edges is to be expected. Skip to step 4.



#### STEP 4

Use clear tape to connect individual stencils together. Keep guidelines straight, maintain your desired spacing. This is your drilling guide. Overlap of paper stencil edges is to be expected.

## INSTALL YOUR ALUMINUM OR POWDER COATED HOUSE NUMBERS

#### STEP 1

Gather supplies: house numbers, stencil, studs, spacers, (not included: tape, epoxy, hammer, rubber mallet, drill, level). Note: masonry, concrete, and stone may require hammer drill.



#### STEP 4

Push studs into pre-drilled holes on the back of the number. Light tapping with a hammer may be required. If so, place on a soft surface. Take care not to scratch the face of the number.

#### STEP 2

Tape stencil at desired location. Use a level to align stencil. Drill holes according to template. Use 11/64" drill bit (specialty 3/16" bit for masonry or rock).



#### STEP 5

Slide spacers over studs and apply epoxy to the end of the exposed studs.

#### STEP 3

Apply epoxy to one end of the stud.



#### STEP 6

Push number into holes. Light tapping with a rubber mallet may be required.

## CARING FOR YOUR ALUMINUM OR POWDER COATED HOUSE NUMBERS

To extend the effective life of your products, clean them every six months, or every three months in coastal or industrial regions.

To clean the product surface, carefully remove any loose deposits. Use a soft cloth and a mild household detergent solution to remove dust, salt, and other deposits (i.e. mild dish detergent diluted with water). Rinse gently with clean fresh water. Dry with non-abrasive, lint-free towel.