

CONVERTING A PYROMANIA INC. FIRE TABLE FROM NATURAL GAS TO PROPANE

1 – Remove the natural gas hose from the flare fitting at the outer bottom of the fire table. Install the propane hose in its place.




2 – Turn the fire table over on its side to gain access to the burner components (CAUTION: pre-place a blanket or rug underneath it to protect the fire table's finish).

3 – Disconnect the stainless steel gas flex line from the natural gas venturi assembly (located underneath the burner) and remove the venturi assembly.



4 - Install the propane venturi assembly (NOTE: Use gas tape on the burner pipe thread, not the fitting between the venturi assembly and the stainless steel flex pipe) and reattach the stainless steel gas flex line onto the venturi assembly.

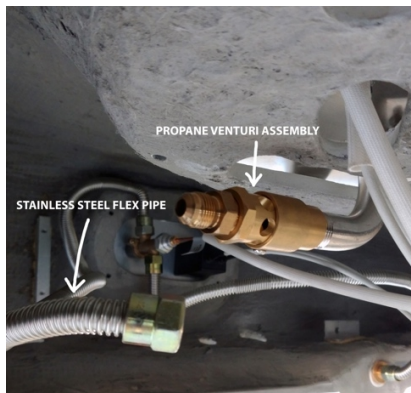

6 – IMPORTANT: Perform a gas leak test on all fittings before using the fire table.