

## Montageanleitung Fernversteller für Racing-Bremshebel

Der Fernversteller passt für die alpha Racing Bremshebel lang und kurz.

- alpha Racing Bremshebel laut Anleitung montieren
- Mit dem mitgelieferten Innensechskantschlüssel das Einstellrädchen abschrauben (Bild 1)
- Hülse für das Kabel auf den Versteller am Bremshebel aufstecken und den Sicherungsstift mit einer Zange durchdrücken. Darauf achten, dass der Stift durch die Bohrung am Versteller verläuft (Bild 2)
- Den Halter am linken Lenkerstummel wie auf Bild 3 gezeigt montieren
- Das Kabel kann auf zwei Arten verlegt werden. Bild 4 zeigt die Montage unter dem Dashboard. Bild 5 zeigt die direkte Verlegung am Kupplungszughalter.
- Das Kabel zuerst in die Hülse am Bremshebel stecken und festschrauben. Dann auf die bevorzugte Weise verlegen und mit einem Seitenschneider auf die richtige Länge ablängen. Kabel nicht zu kurz abschneiden um eventuelle Änderungen an den Lenkerstummeln ausgleichen zu können. Achtung: Hülle des Kabels um ca. 10 mm kürzer abschneiden! (Bild 6)
- Kabel in das Einstellrädchen stecken und mit der Madenschraube sichern. (mitgelieferten Innensechskantschlüssel verwenden)
- Madenschraube an Drehknopf des Halters mit Schraubensicherung mittelfest sichern und einschrauben (Bild 7)
- Funktion des Fernverstellers prüfen
- Freigängigkeit der Lenkung prüfen, Halter darf Verkleidung nicht berühren

## Mounting Instructions Remote Adjuster for Racing Brake-Lever

The Remote adjuster fits on alpha Racing brake levers long and short.

- Mount alpha Racing brake lever according to the mounting instructions
- Demount the adjuster knob with the supplied Allen wrench (Picture 1)
- Put the sleeve for the cable on the adjuster at the brake lever and press the pin through with pliers. Take care, that the pin is in the bore of the adjuster (Picture 2)
- Mount the bracket on the left handle-bar like showed on picture 3
- The cable can be installed in two different ways. Picture 4 shows mounting under the dashboard. Picture 5 shows the direct way on the clutch cable holder.
- First put the cable into the sleeve on the brake lever and fix it with the headless screw. Then mount the cable in the preferred way and cut it to the right length with a wire cutter. Don't cut it to short in order to be able to make changes to the handle-bars. Attention: Cut the outer plastic hose about 10 mm shorter than the cable itself! (Picture 6)
- Put the cable into the adjuster knob on the bracket and fix it with the headless screw (use the supplied Allen wrench)
- Put some bolt adhesive medium strength on the headless screw of the knob-holder and tighten it (Picture 7)
- Check function of the remote adjuster
- Turn steering full angle to the left and to the right and check if all functions work correctly and the bracket doesn't touch the fairing



Bild / Picture 1



Bild / Picture 2



Bild / Picture 3

## CONTACT

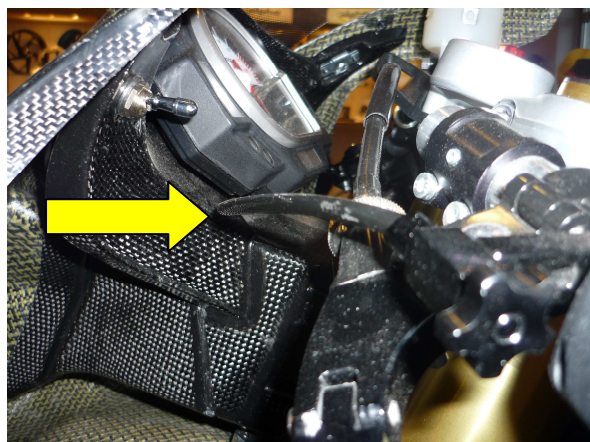


Bild / Picture 4



Bild / Picture 5

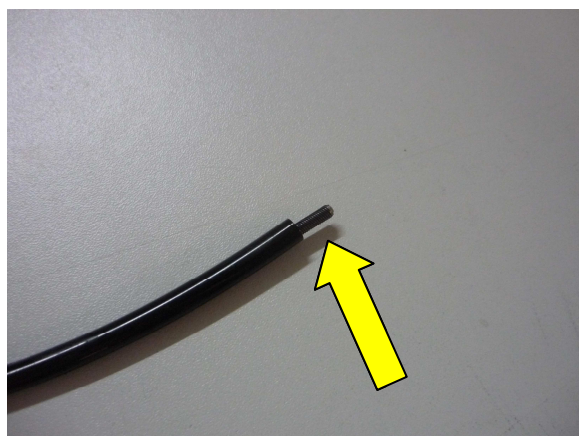


Bild / Picture 6



Bild / Picture 7

## CONTACT