


## Osby In-Desk Socket Installation Guide


## Warning


- 1. The grommet power is designed for light-duty office use (max. 5A or 1.1KW), do NOT use for any other purposes.
- 2. All electrical cables should be fitted by a qualified electrician.
- 3. Do not attach power and/or data cables before fitting.
- 4. Disconnect from mains power before remove/replace optional modules.
- 5. Do not dismantle or remodel the power module.

## Installation


- 1. Make sure the desk top has a pre-cut Ø80 mm cable hole, otherwise use a hole saw to cut one first.
- 2. Unscrew part B from the main body A.
- 3. Place part A through the cable hole.
- 4. Tighten the fixing ring B to secure.

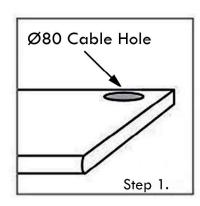

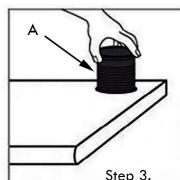

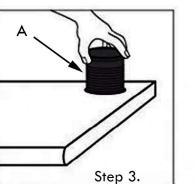



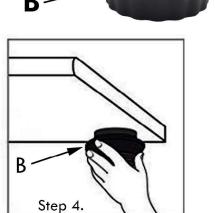

5. To remove/replace the optional RJ45/HDMI module, place part A upside down, then depress the holding clips on the sides of the module

Certifications: CE. BS5733

