
ASSEMBLING INSTRUCTIONS ITEM NO: 194S1209BUE/GRY/RSE-1 ACCENT CHAIR

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

PART	DRAWING	DESCRIPTION	QTY	PART	DRAWING	DESCRIPTION	QTY
A		NASHVILLE ACCENT CHAIR	1 PC	1		BOLT (Ø5/16" *1-1/4")	12 PCS
В		FRONT LEGS	2 PCS	2	O	SPRING WASHER (Ø5/16")	12 PCS
С		BACK LEGS	2 PCS	3	0	FLAT WASHER (Ø5/16")	12 PCS
D		PILLOW	1 PC	4		ALLEN KEY (M4)	1 PC


STEP 1:

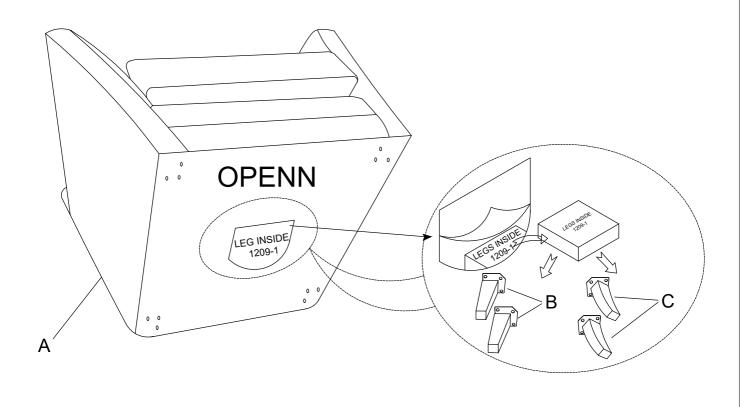


MADE IN VIETNAM Page: 1/2

ASSEMBLING INSTRUCTIONS

ITEM NO: 194S1209BUE/GRY/RSE-1 ACCENT CHAIR

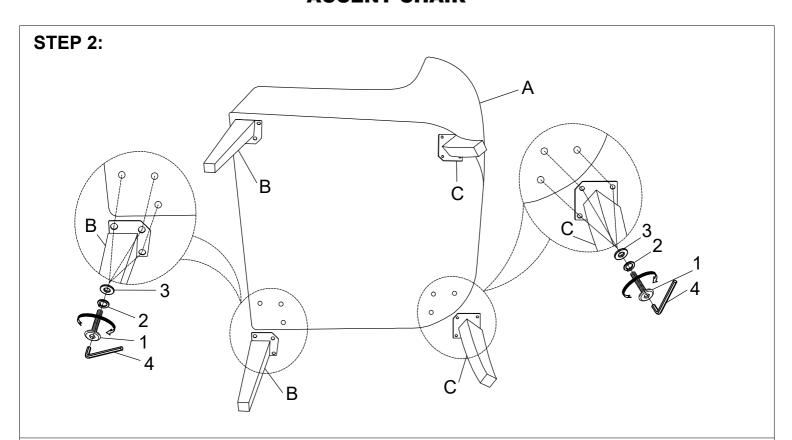

STEP 3: COMPLETED

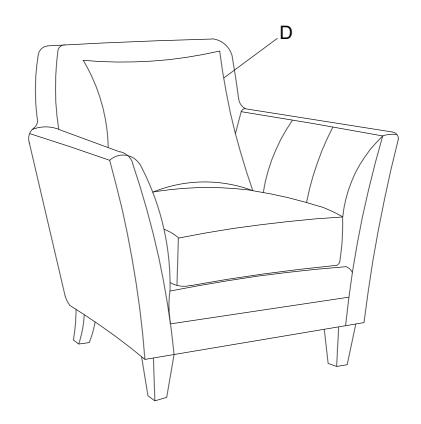

CARE INTRUCTION FOR FABRIC FURNITURE

In order to maintain the original appearance of your funiture, please follow below care procedures.

°Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and / or exposure to headting and air conditioning outlets will fade/damage fabric. Do not place your upholstered furniture too close to windows, radiators, r vents and be sure to use window treatments to block the sun's rays.

°Wipe with a soft brush to remove dust.

MADE IN VIETNAM Page: 2/2