

Assembly Instruction ITEM NO: 194S9469DBR/ NVB-LC LSF Chaise, Push Back Recliner


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.


NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT

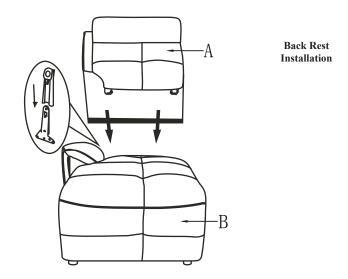

STEP#2

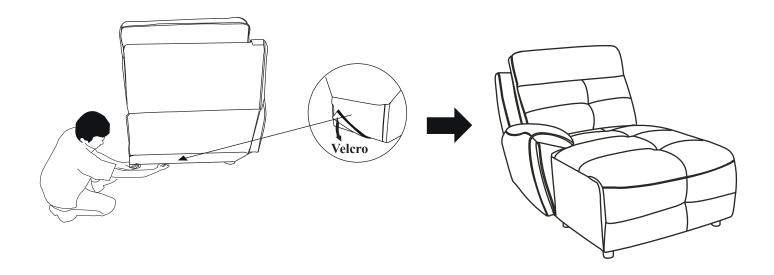

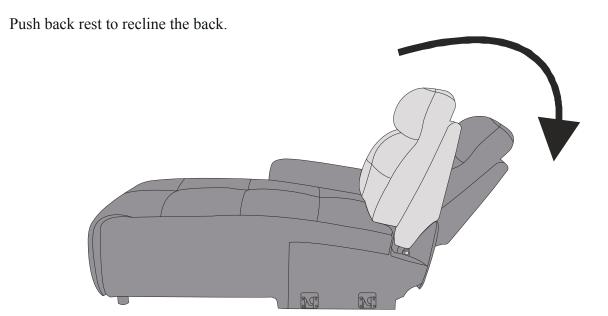

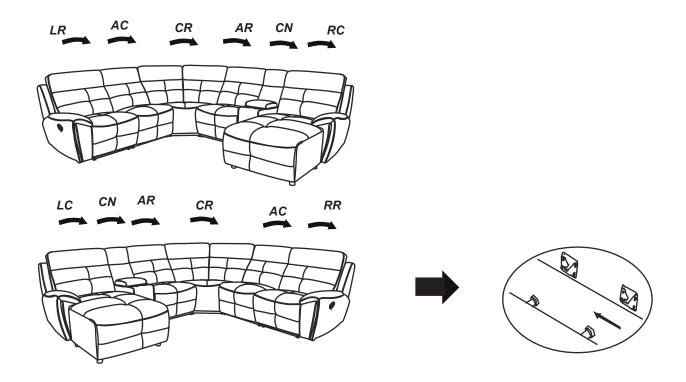


CARE INSTRUCTION FOR POLYESTER:


- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- ⚠ It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.


Assembly Instruction ITEM NO: 194S9469DBR/ NVB-AC Armless Chair

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT

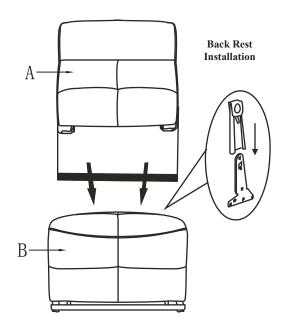

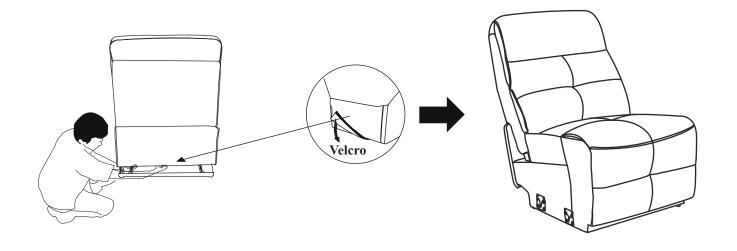

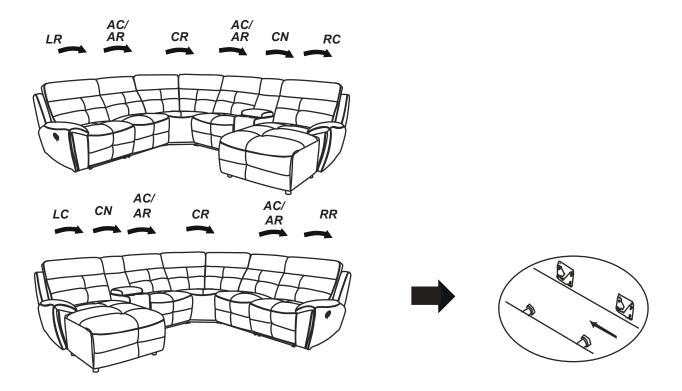

CARE INSTRUCTION FOR POLYESTER:


- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.


Assembly Instruction ITEM NO: 194S9469DBR/ NVB-CN Console


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT
C		3 PC	SCREW

Take out the console back from back of seat, then use 3 pcs screws connect console back and seat in specified holes, tighten by hands.

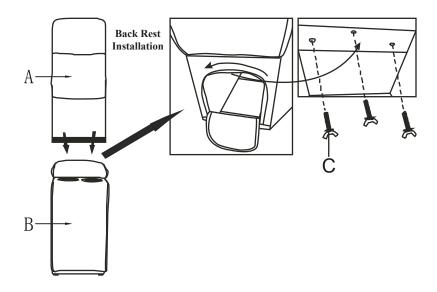

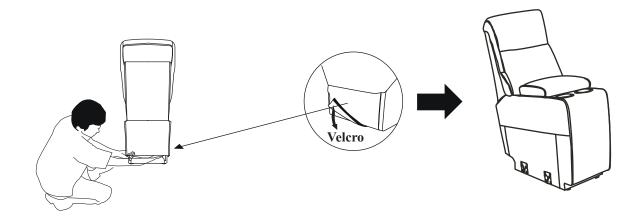

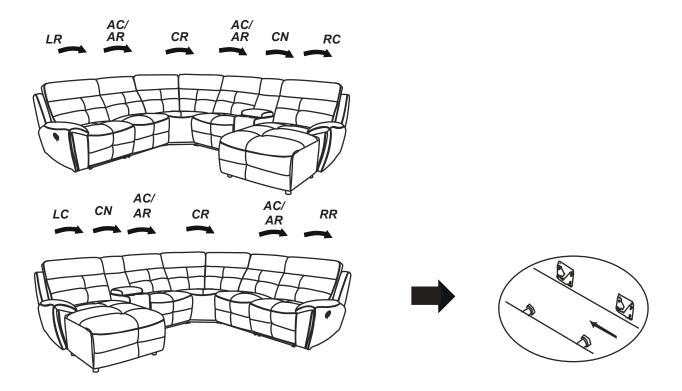


CARE INSTRUCTION FOR POLYESTER:


- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.


Assembly Instruction ITEM NO: 194S9469DBR/NVB-CR Corner Seat

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	LSF BACK REST
В		1 PC	RSF BACK REST
C		1 PC	SEAT

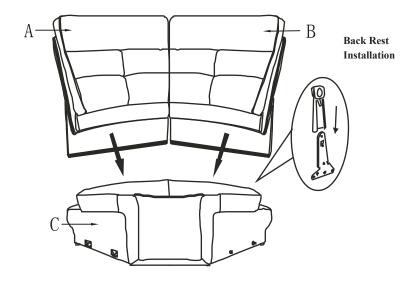

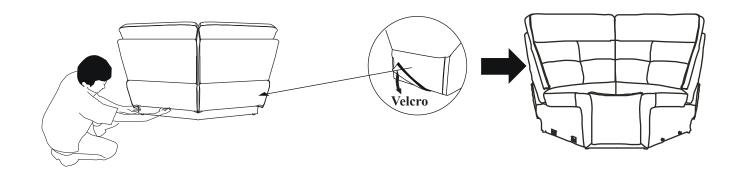

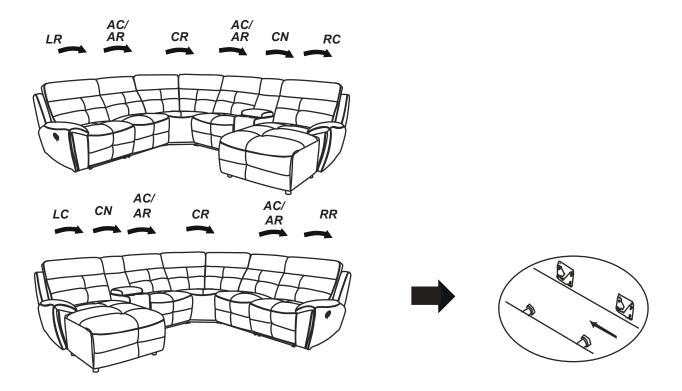


CARE INSTRUCTION FOR POLYESTER:


- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.

Assembly Instruction ITEM NO.: 194S9469DBR/NVB-AR Armless Reclining Chair


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT

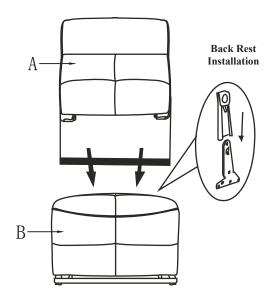

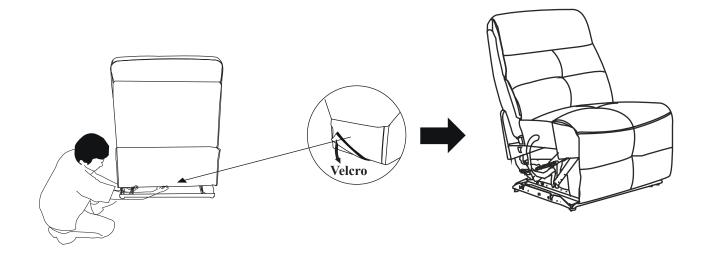


Use the handle to open the recliner.

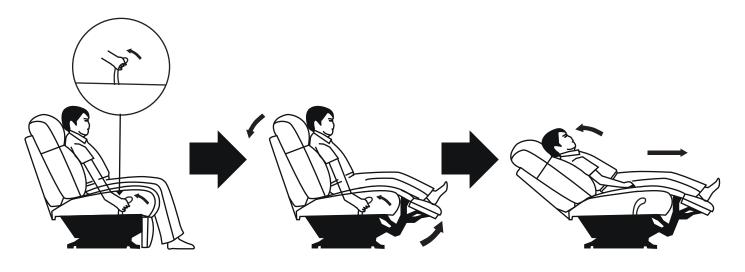

STEP#4

Connect each piece.

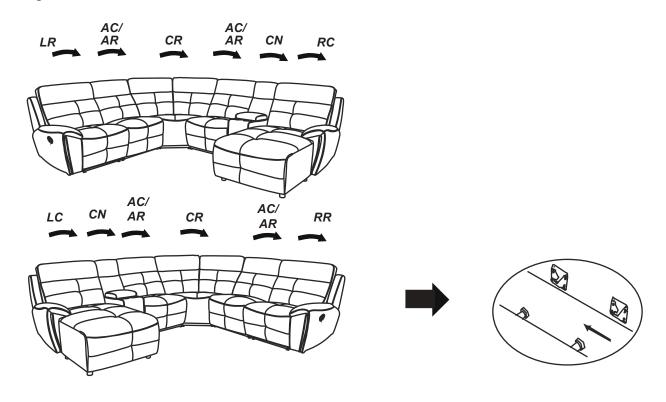


CARE INSTRUCTION FOR POLYESTER:


- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.


Assembly Instruction ITEM NO: 194S9469DBR/ NVB-RR RSF Reclining Chair

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT

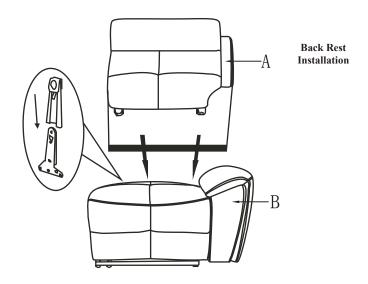

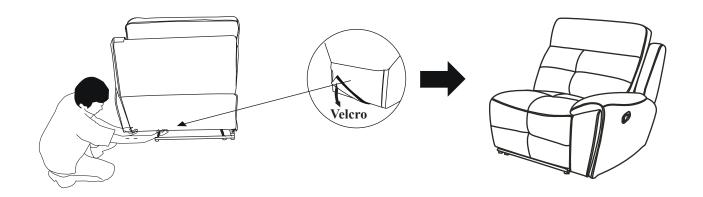

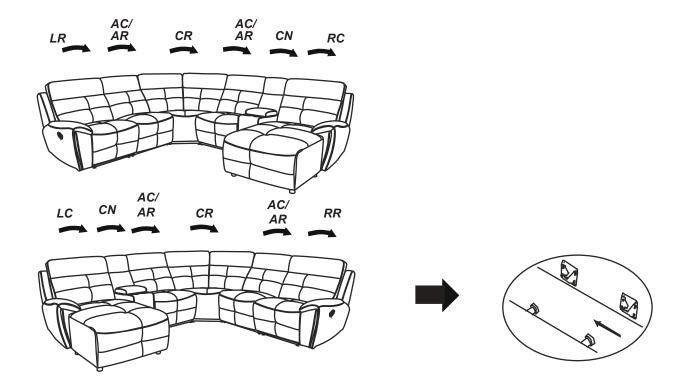

CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.