

RACECOMP

ENGINEERING

2008+ Subaru STI Adjustable Rear Sway Bar Kit

Package Contents:

- 1x Adjustable Rear Sway Bar
- 2x Sway Bar Mount Bushings
- 1x Container of Lubricant

Installation Instructions for Rear Sway Bar:

- 1) Jack up rear of vehicle and place on jack stands or ramps.
- 2) Unbolt end links from rear sway bar by inserting a 5mm hex key into the end of the end link stud, then turning the 14mm nut with a wrench. (See **Figure 1**)



Figure 1

- 3) Remove sway bar bushing mounts (2x 12mm bolts on each side). (See **Figure 2**)



Figure 2

- 4) Remove rear sway bar.
- 5) Thoroughly lubricate inside of RCE urethane sway bar bushings and slide them into place on the RCE rear sway bar. (See **Figure 3**)



Figure 3

- 6) Maneuver RCE sway bar into place.
- 7) Install sway bar bushing mounts.
(See Figure 4). Torque sway bar mount bolts to 18.1 ft-lb.



Figure 4

- 8) Bolt end links to sway bar in the desired position (See Figure 5). Position A is the soft setting, Position B is the hard setting. Torque end link nuts to 33 ft-lb.

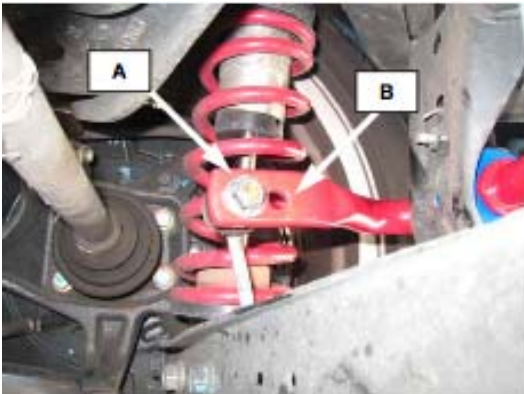


Figure 5

- 9) Verify that the finished installation looks correct, and that the bar fully clears the muffler and suspension components. (See Figure 6)



Figure 6

- 9) Remove car from jack stands or ramps.

NOTE: For noise-free operation, inspect and lubricate sway bar bushings periodically.