



# Ancerre

DESIGNS


VTS-AUDREY-48

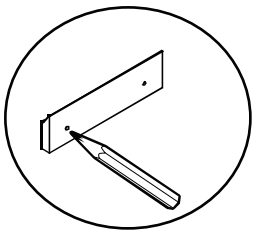


A

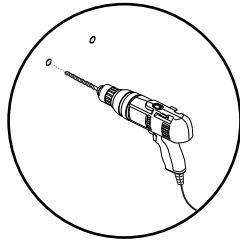


B

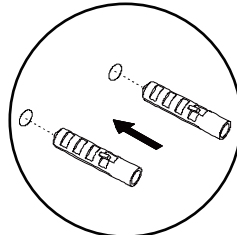


C

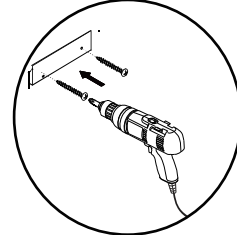


D

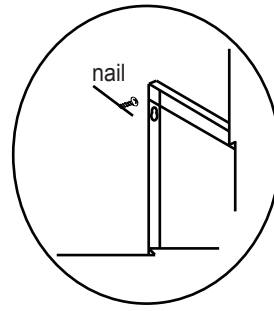


E

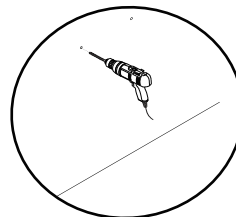

F

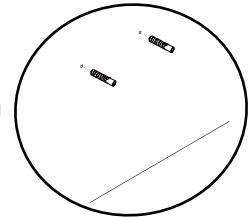


G\*

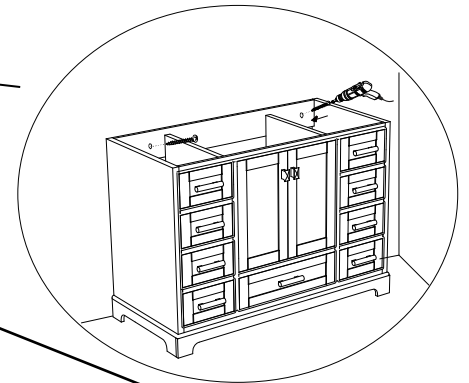

H

Adjustable leg leveler.  
Adjust for level.

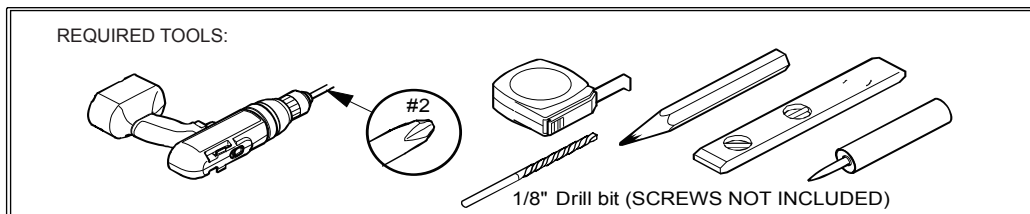


\*SECURE SCREW TO STUDS WHEN POSSIBLE


# Ancerre

DESIGNS


VTS-AUDREY-60

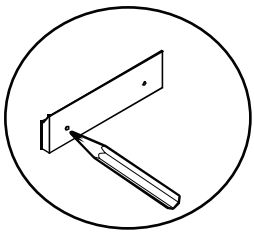


A

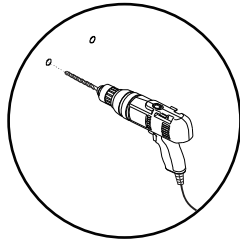



B

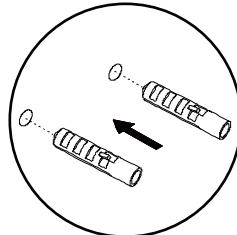


C

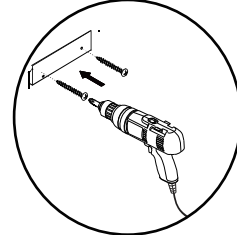


D

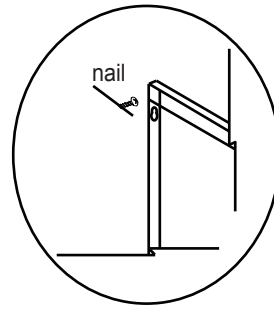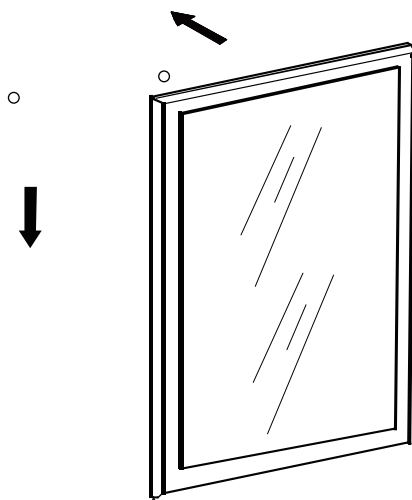


E

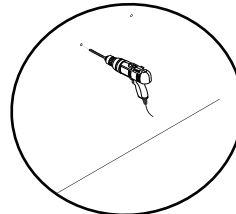


F

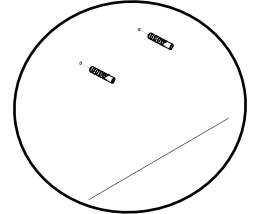


G\*

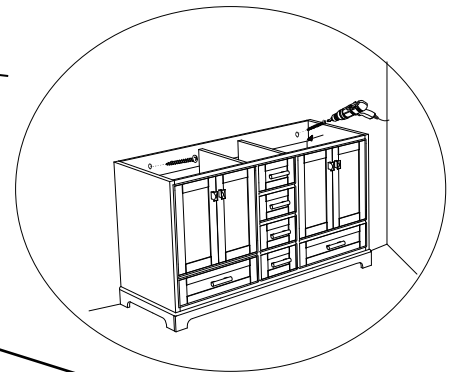

H

 Adjustable leg leveler.  
Adjust for level.

REQUIRED TOOLS:

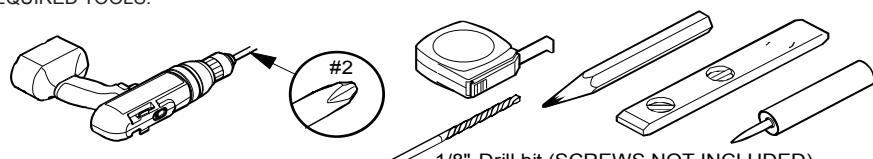


1/8" Drill bit (SCREWS NOT INCLUDED)

\*SECURE SCREW TO STUDS WHEN POSSIBLE


# Ancerre

D E S I G N S


VTS-AUDREY-72

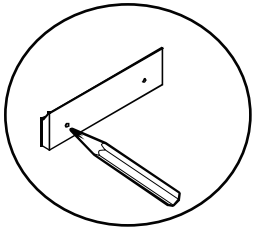


A

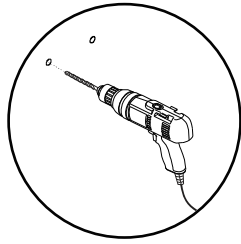



B

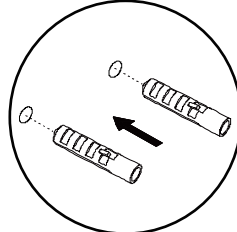


C

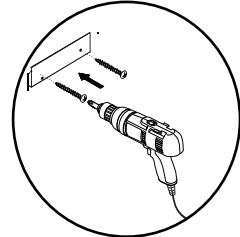


D

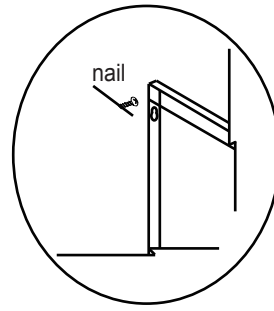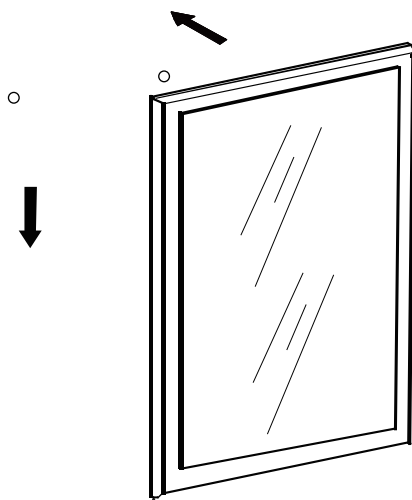



E

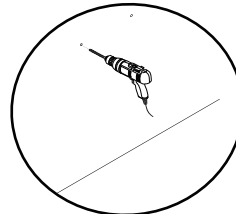

F

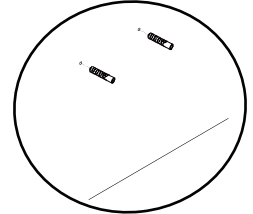


G\*

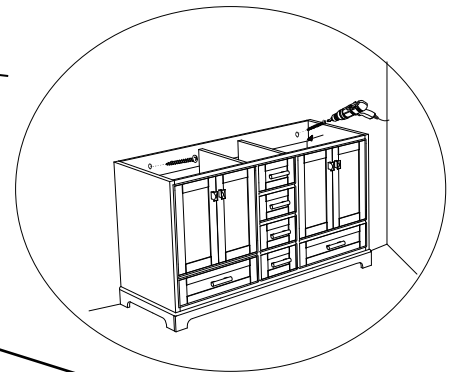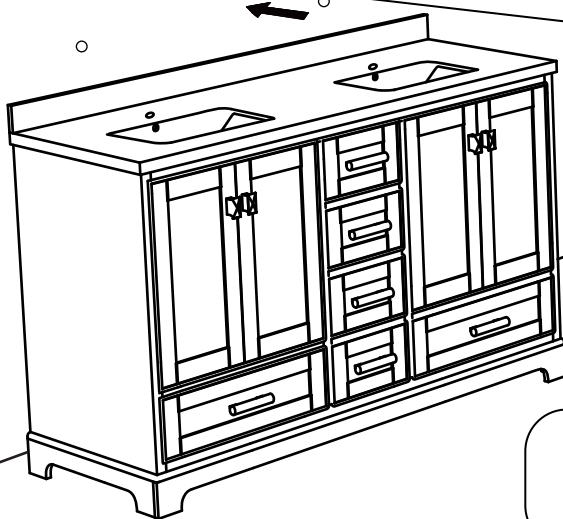

H

Adjustable leg leveler.  
Adjust for level.

REQUIRED TOOLS:

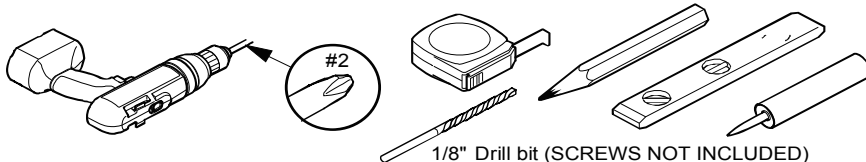

1/8" Drill bit (SCREWS NOT INCLUDED)

\*SECURE SCREW TO STUDS WHEN POSSIBLE