

Vanity Installation




HANDLES

PHILLIPS SCREWDRIVER REQUIRED


Each handle is located inside the cabinets and doors.

Using a Phillips Head Screwdriver, unscrew each handle then screw the handles properly on the outside of the drawers and cabinets.

Before

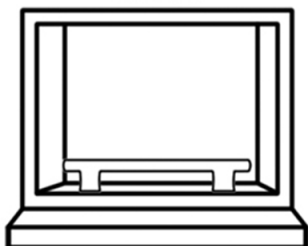

After

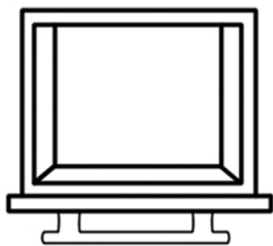

GLASS TOP

TWO OR MORE PEOPLE ARE RECOMMENDED FOR THIS STEP



LATEX GLOVES REQUIRED

Before installing, make sure you are aware of which side is the bottom. The bottom will have a white frost on it. **DO NOT** touch this frost without gloves and **DO NOT** attempt to clean this side.

With your partner, lift and place the glass counter top evenly on the cabinet. There will be 4 holes in the counter top. The centered holes are for the sink drain, and the holes closer to the edge will be for the faucets. Be sure these holes are in the proper place before finally setting it down.

DO NOT GLUE DOWN


SINK AND DRAIN



LATEX GLOVES REQUIRED


When ready, place the glass sink carefully down over the drain hole in the glass counter top making sure they are properly lined up. Once lined up, its time to place in the drain.

Before placing the drain in, you'll need to remove all the washers but the top most washer, this washer creates a seal between the drain and sink. Now, under the sink in the cabinets, you will place on the other flimsy plastic washer and then the hard plastic washer under that. Now just thread on the gold metal nut and tighten this down firmly.

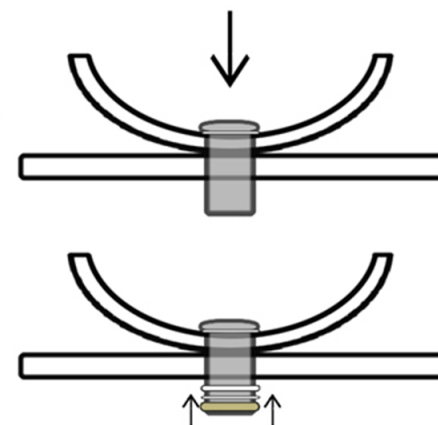

Faucet

The installation of the faucet is similar to the drain. The image shown displays how the washers should be during installation. There will be a black washer on top of the counter top. Underneath the cabinet you'll use the metal washer and a gold metal ring to firmly tighten the faucet to the counter top. Waterlines are marked to show COLD/HOT. Attach these to the proper lines and installation is complete.

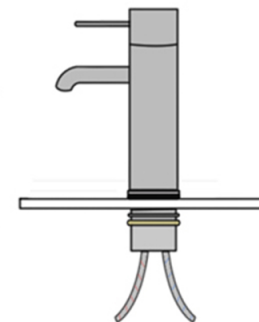

CONTACT US:
Cambridge-Plumbing.com
TOLL FREE: 866-448-8827
Sales@Cambridge-Plumbing.com