




A

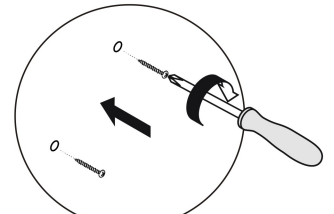


D

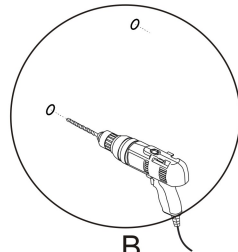

B

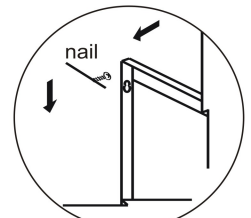


E

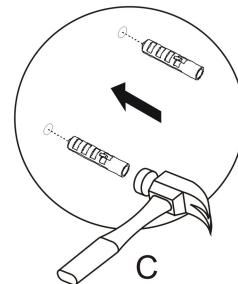

C

REQUIRED TOOLS:

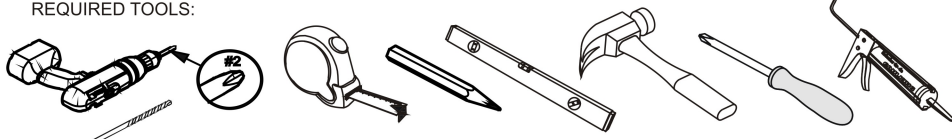

1/8" Drill bit (SCREWS NOT INCLUDED)

*SECURE SCREW TO STUDS WHEN POSSIBLE