




QUICK INSTALL GUIDE

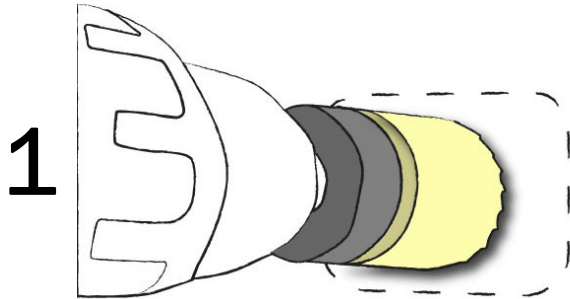

Locate the ideal position for the mount and **drill** the 38mm central hole.

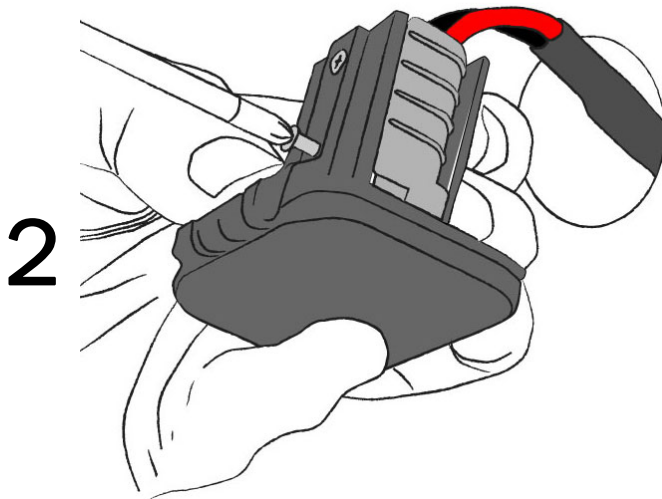

Feed the Anderson lead out through the panel hole and **install** the plug into the mount.

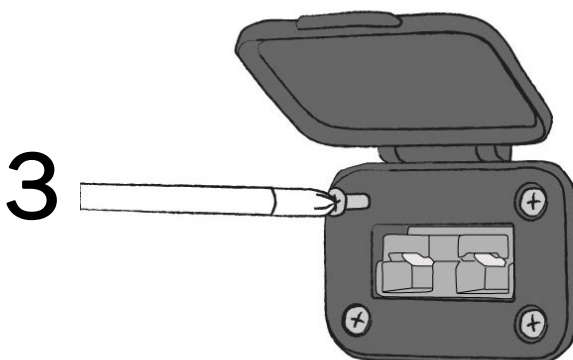

Push the mount back into the panel and **attach** it using the four outer holes.