


Place 7 bungees both top and bottom. Then evenly space the others

The short leg of the V shaped assembly is the front. Bolt faces inward with nut on the inside

The short leg of the V shaped assembly is the front. Bolt faces inward with nut on the inside

Plastic feet
Front and
Back

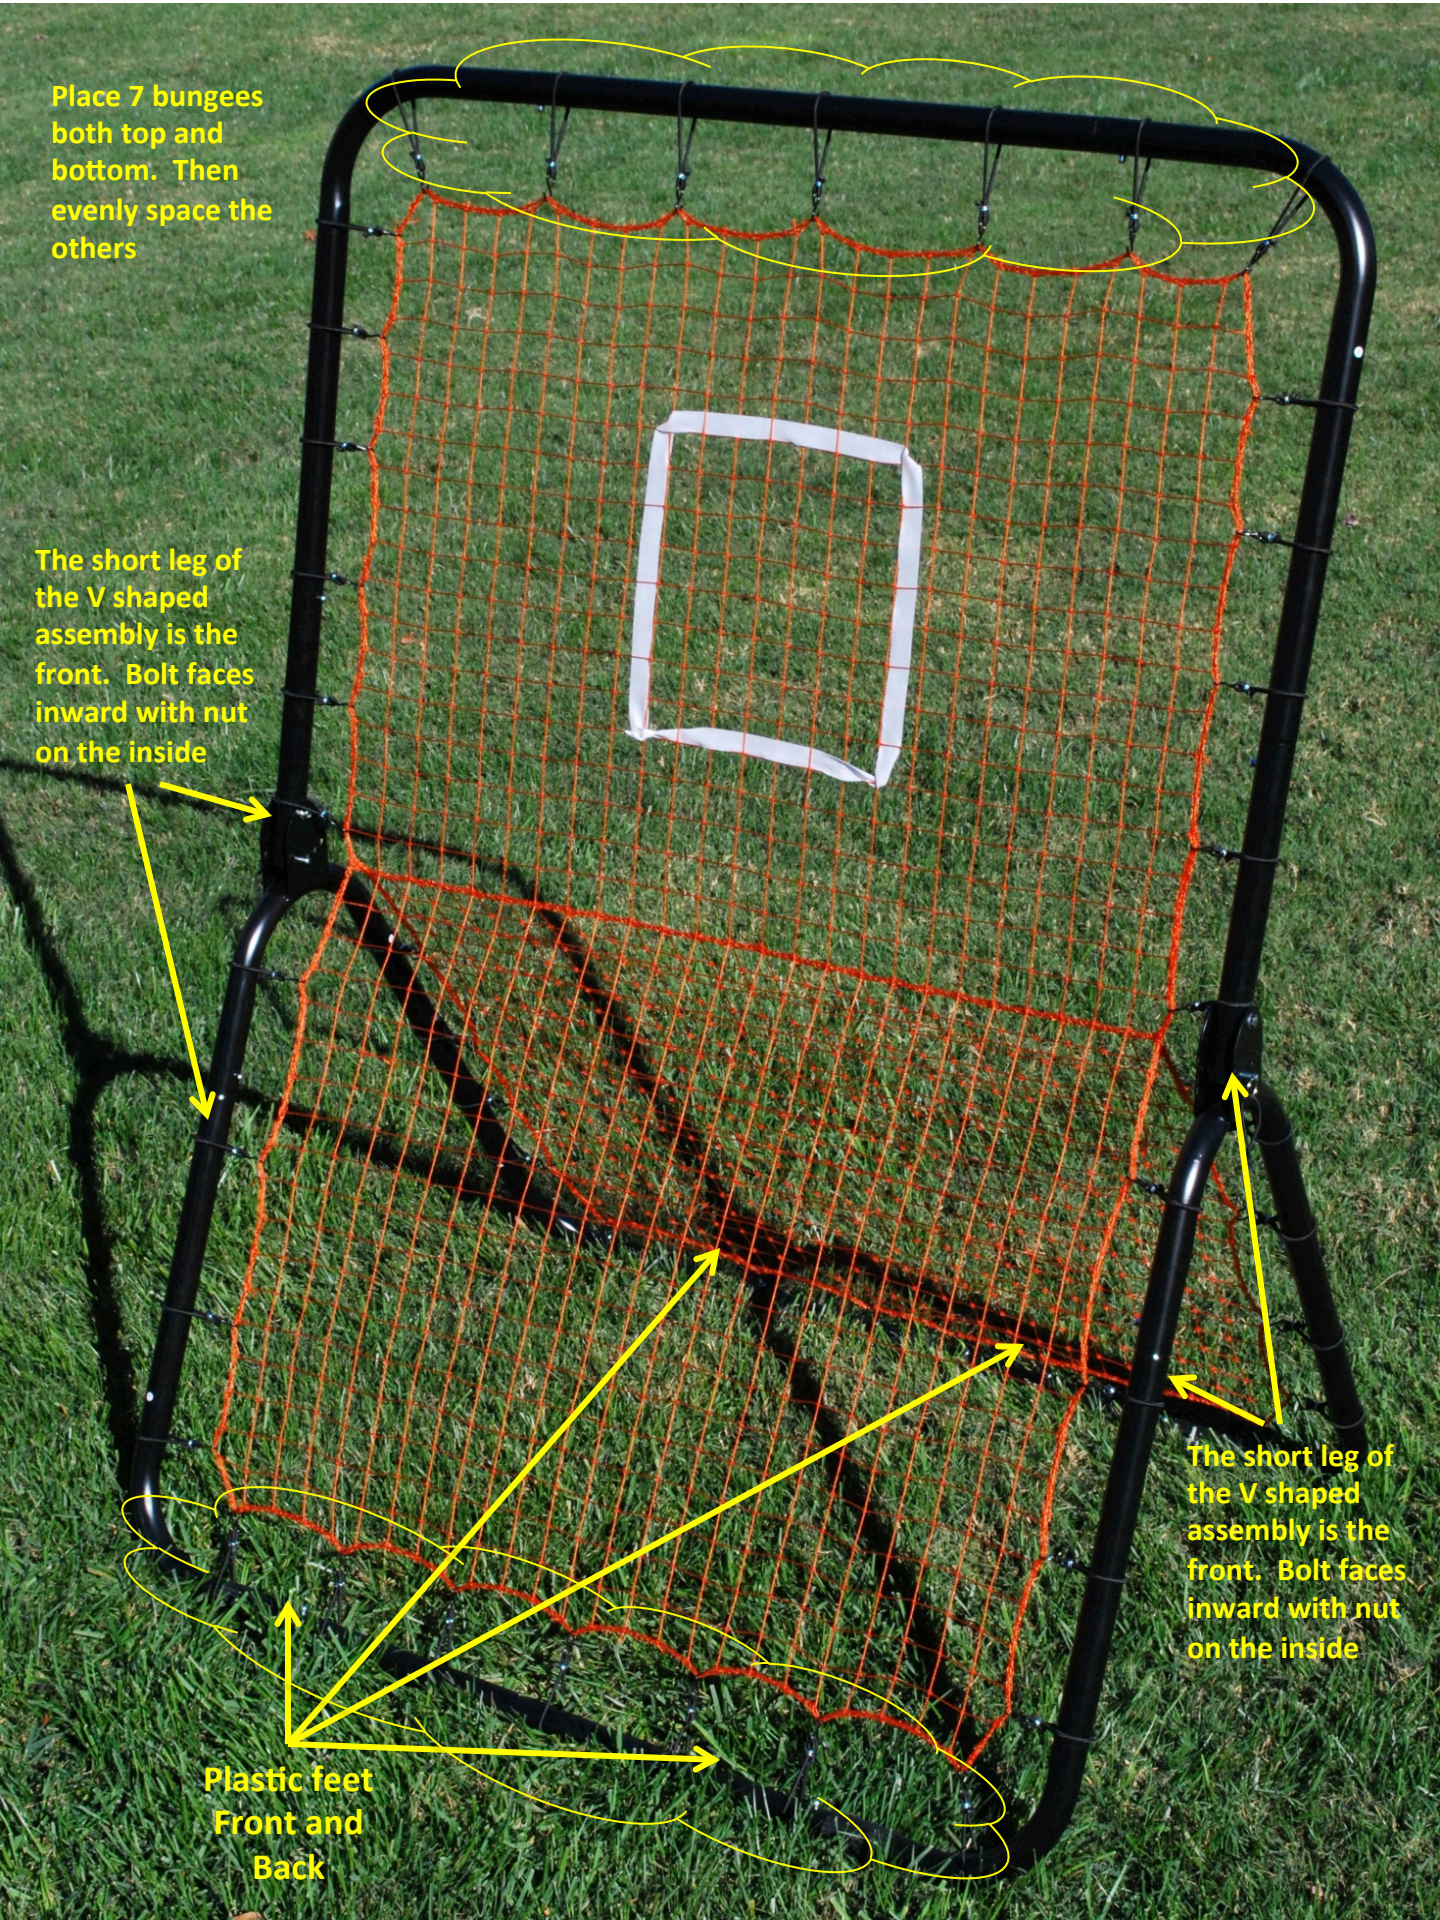

CrankShooter

Pro Black Rebounder

www.CrankShooter.com

Here are simple supplemental instructions on how to assemble your CrankShooter Pro Black Rebounder

- Step 1: Read the instruction in the box for easy assembly.
- Step 2: When assembling the frame, make sure you have the short leg of the “U” shaped tubing the same on each side...this will be the front of the rebounder.
- Step 3: As you assemble the frame add the plastic base feet on the base tubing as show in the instructions
- Step 4: Once you have assembled the frame, disconnect tubing briefly to place the bungees onto the tubing as indicated on the picture.
- Step 5: From our experience in assembling these units, place 7 bungees on the top tube as indicated and 7 on each of the bottom tubes. Place the remainder of the bungees equally around the frame
- Step 6: When connecting the net to the Bungees, connect the top bungees first followed by the bottom bungees and then the side bungees. These will be tight, but these nets and bungees are much stronger than they look!
- Step 7: Add the ribbon for the target area...this is at your discretion as far as placement
- Step 8: Have FUN!!

Alerts: There may be parts of the assembly instructions which may not be clear or confusing at best. Please use these assembly instructions for a more accurate description for assembly.