

PATH LIGHT Installation Instructions

SALE on SATCO at www.BulbAmerica.com
 aka: practical lighting solutions

77/324

76/632

76/633


76/634

77/323


76/635

76/636

76/637



SUITABLE FOR WET LOCATION

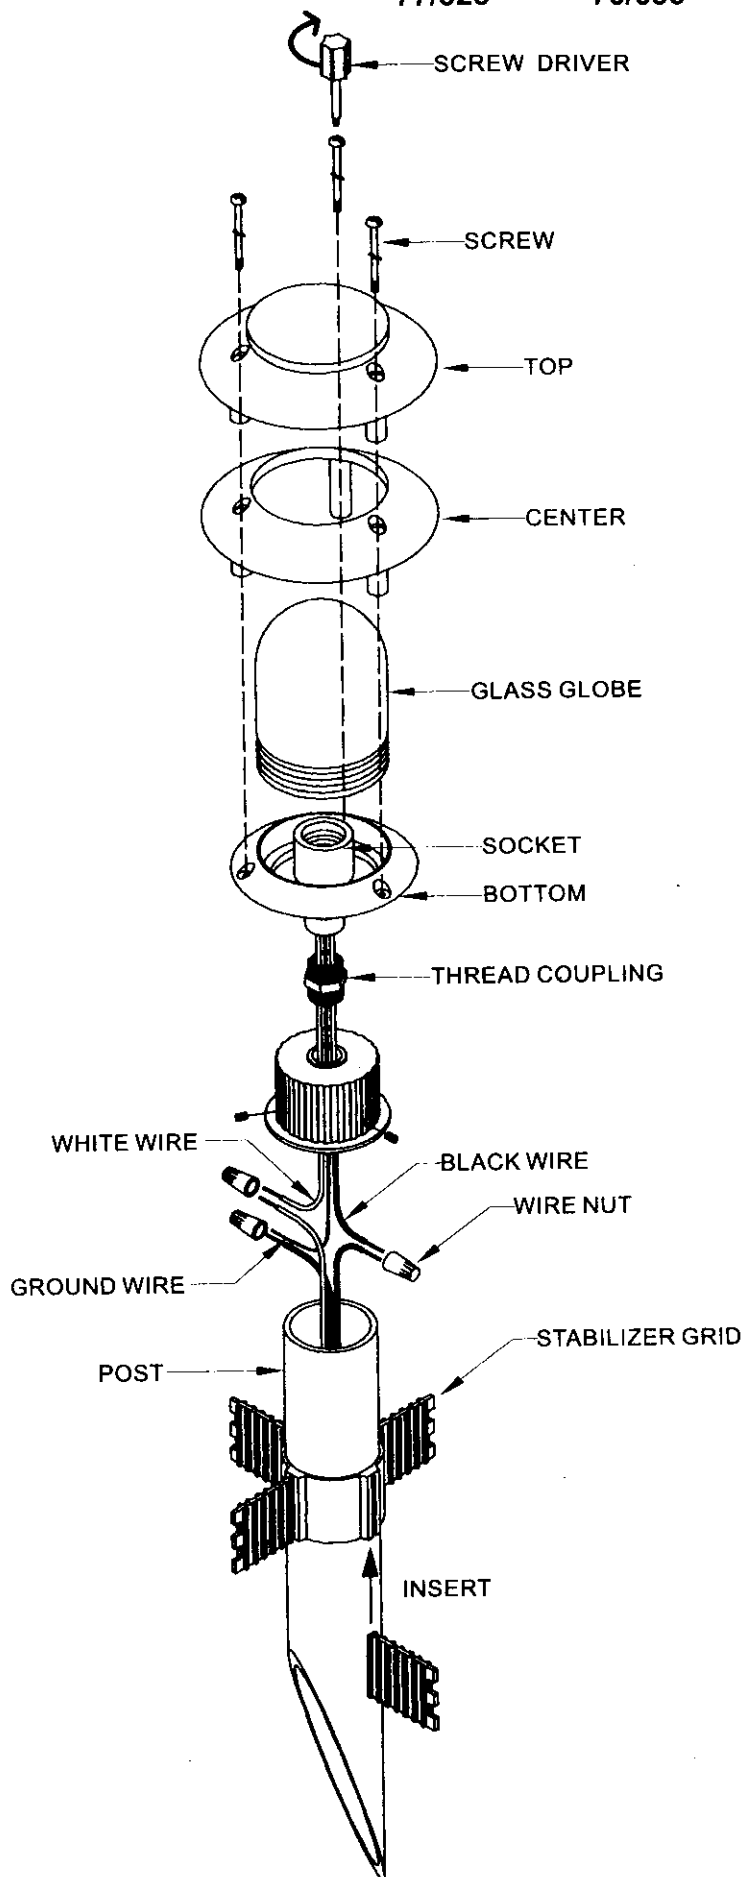

- TURN OFF POWER
- LOOSEN THREE SCREW FROM THE TOP AND GLASS GLOBE
- INSTALL THREADED COUPLING INTO THE BOTTOM AND POSITION THE BOTTOM UNIT ON THE **SATCO** STAKE POST
- CONNECT WIRES USING WIRE NUTS EACH SUPPLY WIRE TO CORRESPONDING SOCKET WIRES
- INSTALL "A TYPE "BULB 75 W (2-LOUVER)
100 W (3-LOUVER)
- TURN ON POWER

