
PIPE JECOR 3/4" X 12" PIPE LEGS

NEED HELP OR ADVICE ON PUTTING THIS KIT TOGETHER? MISSING PIECES? EMAIL US AT SUPPORT@PIPE-DECOR.COM FOR ANY QUESTIONS

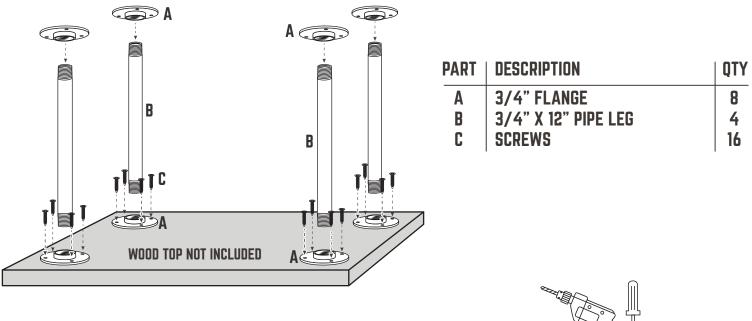

EASY INSTALLATION:

RECOMMENDED TOOLS FOR INSTALLATION

- 1. PUT LEGS TOGETHER AS SHOWN ABOVE. HAND TIGHTEN EACH PIPE TO THE FLANGE.
- 2. USING A DRILL, SCREW LEGS INTO THE TABLETOP. WE RECOMMEND USING SETTING #10 To prevent stripping the wood. There is no need to pre-drill.
- 3. YOU CAN UNTIGHTEN EACH FLANGE TO HELP LEVEL THE TABLE.

N HOW TO PREVENT PIPE CORROSION

PIPE DECOR industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

CLEAN AND SEAL INSTRUCTIONS:

CLEAN: Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)

- 1. Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.
- 2. Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.

SEAL:

IF USING POLYURETHANE SPRAY: Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

IF USING FINISHING WAX: Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping it down. Faster wiping will result in a shinier finish.