
# **PIPE JECOR**<sup>®</sup> 28.75" H X 21.5" W BLACK STEEL H TABLE LEGS

### NEED HELP OR ADVICE PUTTING THIS KIT TOGETHER? MISSING PIECES? EMAIL US AT SUPPORT@PIPE-DECOR.COM FOR ANY QUESTIONS

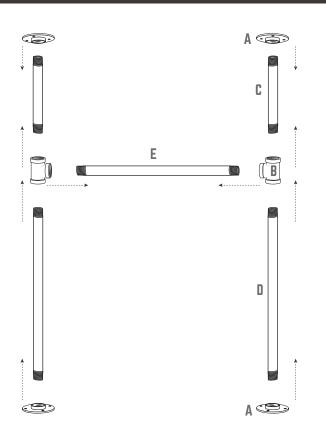

#### # 36510HL (1 PACK)

PART	DESCRIPTION	QTY
Α	1" FLANGE	4
B	1" TEES	2
C	8" PIPE	2
D	18" PIPE	2
Е	16" PIPE	1
ALSO I		
	NCLUDED: 3/4" SCREWS	8
# 365		8   QTY
# 365	3/4" SCREWS 510HL2PK (2 PACK)	
<u># 369</u> Part	3/4" SCREWS 510HL2PK (2 PACK) Description	QTY
<u># 365</u> Part A	3/4" SCREWS 510HL2PK (2 PACK) DESCRIPTION 1" FLANGE	QTY 8
# 365 Part A B	3/4" SCREWS 510HL2PK (2 PACK) DESCRIPTION 1" FLANGE 1" TEES	QTY 8 4

3/4" SCREWS 16

# HOW TO PREVENT PIPE CORROSION

PIPE DECOR industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

## **CLEAN AND SEAL INSTRUCTIONS:**

**CLEAN:** Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)

1. Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.

2. Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

### IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.

### SEAL:

**IF USING POLYURETHANE SPRAY:** Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

**IF USING FINISHING WAX:** Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping them down. Faster wiping will result in a shinier finish.