
PIPE JECOR® BAR HEIGHT BRIDGE TABLE KIT

NEED HELP OR ADVICE PUTTING THIS KIT TOGETHER? MISSING PIECES? EMAIL US AT SUPPORT@PIPE-DECOR.COM FOR ANY QUESTIONS

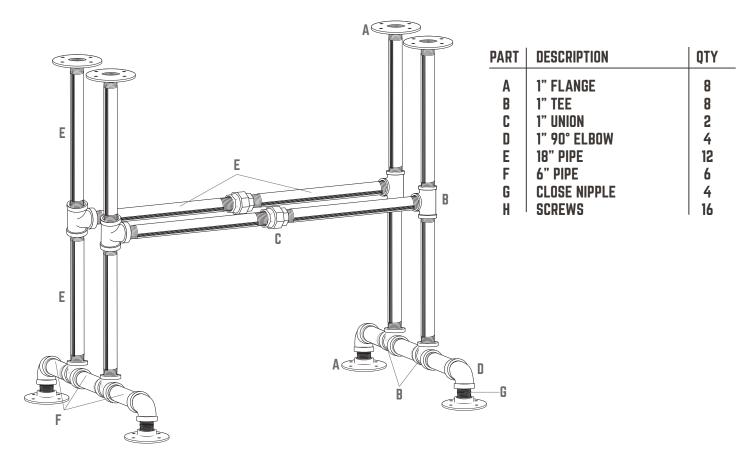



HOW TO PREVENT PIPE CORROSION

PIPE DECOR industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

CLEAN AND SEAL INSTRUCTIONS:

CLEAN:

Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)

- 1. Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.
- 2. Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.

SEAL:

IF USING POLYURETHANE SPRAY: Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

IF USING FINISHING WAX: Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping them down. Faster wiping will result in a shinier finish.

PIPE JECOR®

BAR HEIGHT BRIDGE TABLE KIT

STEP 1:


Flanges may scratch floor and pads on floor are recommended. Assemble each leg with a 2x Flange (A), 2x Tee (B), 2x Elbow (D), 3x 6" Pipe (F), and 2x Close Nipple (G). Repeat on other leg.


STEP 2:


STEP 3:

STEP 4:


STEP 5:

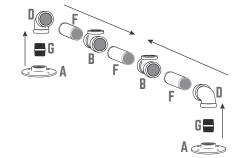



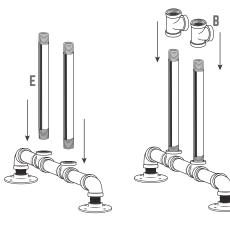






STEP 6:

Connect the sides with each other using 2x 18" Pipe (E) and 1x Union (C).




X2

STEP 7:

Screw in "**PART 1**" into one side of TEE tight. Then loosen the Union and screw the other pipe into the other side of TEE until it's tight. Repeat with other side.

STEP 8:

Loosen or tighten flanges to level table, and screw into table top (not provided).

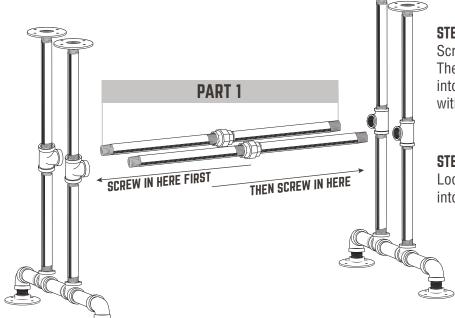

ID: 24893