

PIPE DECOR®

370TPHDRFSBB, 370TPHDRFSTB


FREESTANDING TOILET PAPER WITH SHELF

NEED HELP OR ADVICE PUTTING THIS KIT TOGETHER? MISSING PIECES?
EMAIL US AT [SUPPORT@PIPE-DECOR.COM](mailto:support@pipe-decor.com) FOR ANY QUESTIONS


RECOMMENDED TOOLS FOR INSTALLATION




PART	DESCRIPTION	QTY
A	1/2" 90° ELBOW	4
B	1/2" 5-WAY CROSS WITH SINGLE SIDE OUTLET	1
C	1/2" CAP	1
D	1/2" COUPLING	1
E	1/2" TEE	1
F	1/2" FLANGE	1
G	3" NIPPLE	5
H	6" NIPPLE	1
I	10" NIPPLE	2
J	8" X 725" WOOD SHELF	1
K	WOOD SCREW	4

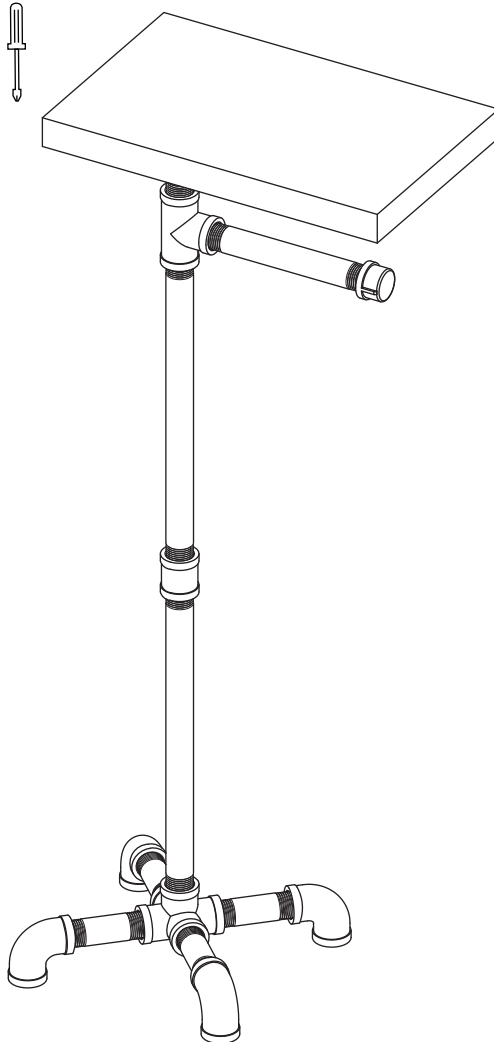


STEP 1 Start with bottom parts

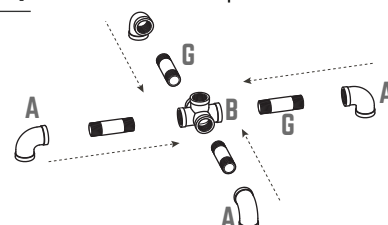

STEP 2

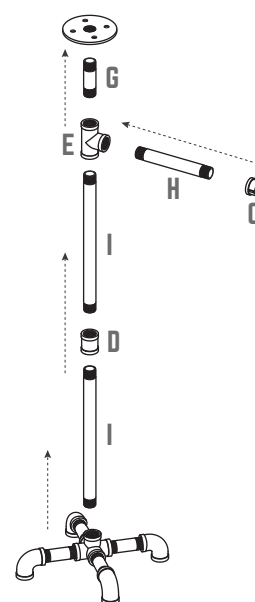

STEP 3

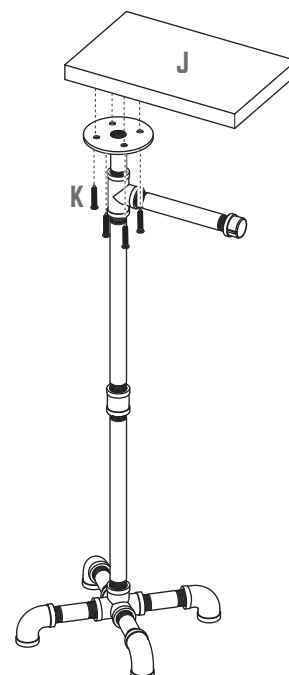

HOW TO PREVENT PIPE CORROSION

PIPE DECOR industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

CLEAN AND SEAL INSTRUCTIONS:

CLEAN: Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)
1. Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.
2. Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.

SEAL: **IF USING POLYURETHANE SPRAY:** Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

IF USING FINISHING WAX: Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping them down. Faster wiping will result in a shinier finish.

ID: 27556

PII370TPHDRFS — 201036