


NEED HELP OR ADVICE ON PUTTING THIS KIT TOGETHER? MISSING PIECES?
EMAIL US AT HELP@PIPE-DECOR.COM FOR ANY QUESTIONS

EASY INSTALLATION:

1. Screw the **90° Elbow (Part E)** to each end of the **36" Pipe (Part G)**. See Figure 1.
2. Screw the **48" Pipe (Part F)** into "Figure 1" on both sides. See Figure 2.
3. Attach the **Side Outlet Tee (Part C)** to the open ends of the **48" Pipe (Part F)**. See Figure 3.
4. Assemble the left and right bases as shown in the Figure 4. Hand tighten each piece.
5. You can loosen or retighten each flange on the base to help level the clothing rack. See Figure 5.

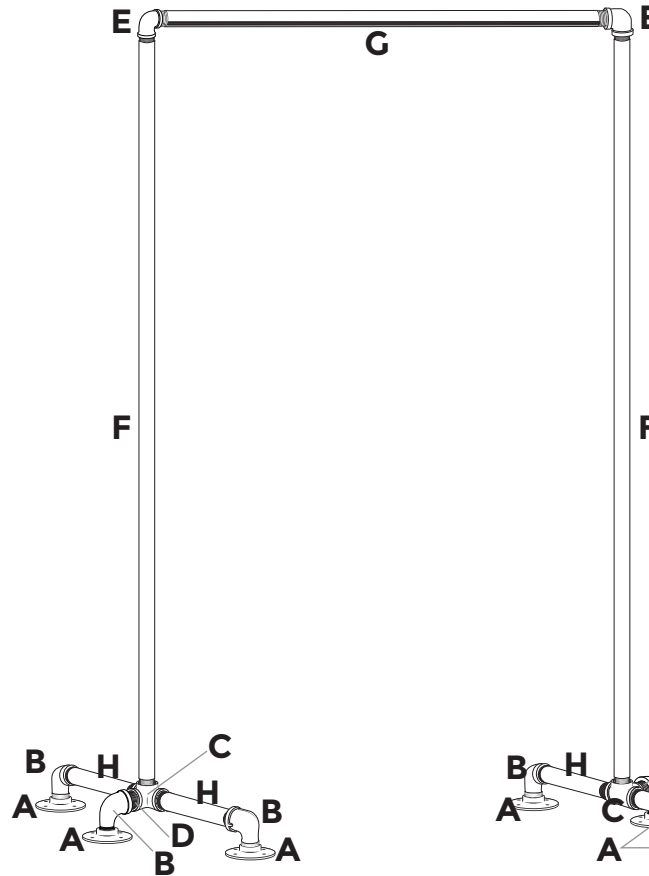

PART	DESCRIPTION	QTY
A	1/2" FLANGES	6
B	1/2" 90° STREET ELBOW	6
C	1/2" SIDE OUTLET TEE	2
D	1/2" CLOSE PIPE	2
E	1/2" 90° ELBOW	2
F	1/2" X 48" PIPE	2
G	1/2" X 36" PIPE	1
H	1/2" X 8" PIPE	4



HOW TO PREVENT PIPE CORROSION

PIPE DECOR industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

CLEAN AND SEAL INSTRUCTIONS:

Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)

1. Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.
2. Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.

SEALING WITH POLYURETHANE SPRAY:

Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

SEALING WITH FINISHING WAX:

Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping them down. Faster wiping will result in a shinier finish.

