




SHELVES WITH STRAIGHT BRACKETS (2 SHELVES)

NEED HELP OR ADVICE ON PUTTING THIS KIT TOGETHER? MISSING PIECES?
EMAIL US AT HELP@PIPE-DECOR.COM FOR ANY QUESTIONS

24" SHELF SET

(2) 24" Shelves with (2) Straight Brackets

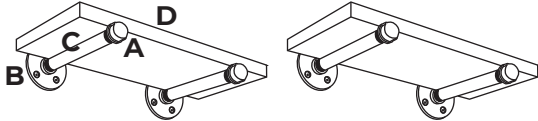


E (X 16)
F (X 16)

PART	DESCRIPTION - FOR 24" SHELVES	QTY
A	1/2" CAP	4
B	1/2" FLANGES	4
C	1/2" X 8" PIPE	4
D	24" WOOD SHELF	2
E	1-3/4" SCREWS	16
F	WALL ANCHORS	16

36" SHELF SET

(2) 36" Shelves with (3) Straight Brackets

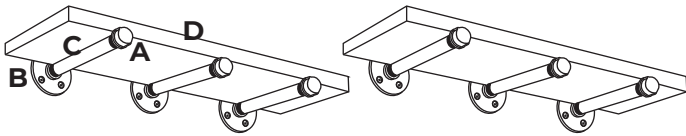


E (X 24)
F (X 24)

PART	DESCRIPTION - FOR 36" SHELVES	QTY
A	1/2" CAP	6
B	1/2" FLANGES	6
C	1/2" X 8" PIPE	6
D	36" WOOD SHELF	2
E	1-3/4" SCREWS	24
F	WALL ANCHORS	24

EASY INSTALLATION:

RECOMMENDED TOOLS FOR INSTALLATION

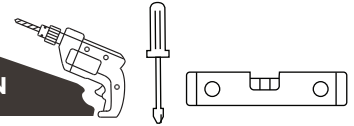

- Assemble the brackets as shown in Figure 1. Hand tighten each piece.
- Attach brackets to the wall (See Figure 2)

A) Using stud finder, locate and mark wall stud

- Place flange against wall in desired location and mark holes with pencil
- Attach flange to wall with included screws

B) If no wall stud is present

- Place flange against wall in desired location and mark holes with pencil
- Drill pilot holes in wall using 1/4" drill bit
- Insert anchor fully into pilot hole using hammer and Phillips screwdriver as needed
- Attach flange to wall using included screws.

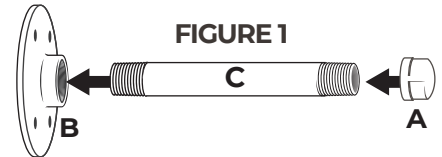


FIGURE 1

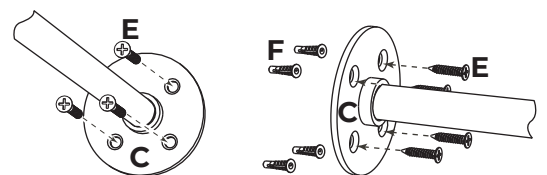


FIGURE 2

Option A
Using studs

Option B
For drywall



HOW TO PREVENT PIPE CORROSION

PIPE DECOR industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

CLEAN AND SEAL INSTRUCTIONS:

Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)

- Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.
- Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.

SEALING WITH POLYURETHANE SPRAY:

Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

SEALING WITH FINISHING WAX:

Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping them down. Faster wiping will result in a shinier finish.