


PIPE DECOR 365 12 BARN HANDLES

THANK YOU SO MUCH FOR PURCHASING A PIPE DECOR PRODUCT. IF YOU HAVE ANY TROUBLE PUTTING YOUR KIT TOGETHER OR MISSING PIECES PLEASE CONTACT HELP@PIPE-DECOR.COM FOR ANY HELP AND RETURNS.

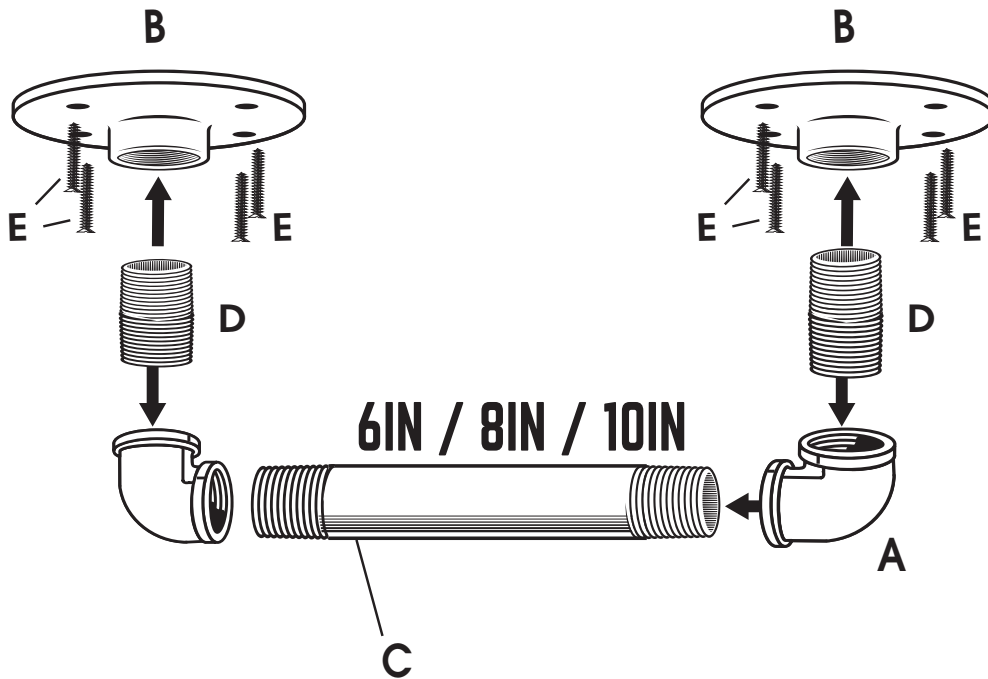

365 126BARN
365 128BARN
365 1210BARN

PARTS LIST:


- A- 1/2" 90° ELBOW (2PC)
- B- 1/2" FLANGE(2PC)
- C- 1/2" X 6"/8"/10" PIPE
- D- 1/2" X CONNECTOR (2PC)
- E- #10 X 3/4" SCREWS(8PC)

This kit is made of industrial grade authentic pipe. It is coated in oil post production to prevent rust. The kit should be cleaned and sealed to prevent rusting. See Clean and Seal sheet for more information on cleaning and sealing your pipe kit.

INSTALLATION INTO DOORS OR WOOD

1. Put shelf bracket together as shown above.
2. Mark holes on wall with through flange.
3. Using #10 1-3/4" screws provided, drill flange into wall.
- 4 Attach shelf to flange using provided #10 3/4" screws.

RECOMMENDED TOOLS

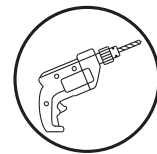

RECOMMENDED
DRILL WITH 1/4" BIT
FOR WALL ANCHOR