


PIPE DECOR 3/4 IN. BARN DOOR HANDLE

NEED HELP OR ADVICE ON PUTTING THIS KIT TOGETHER? MISSING PIECES?
EMAIL US AT HELP@PIPE-DECOR.COM FOR ANY QUESTIONS

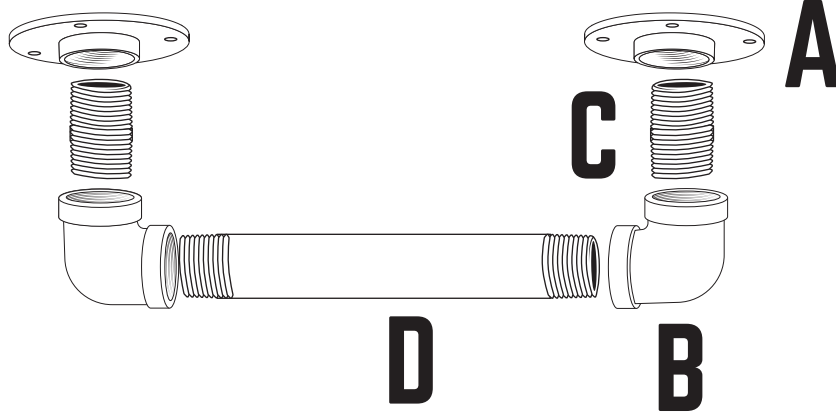

365 346BARN

PARTS LIST

- A- 3/4 IN. FLANGES (2)
- B- 3/4 IN. ELBOWS (2)
- C- 3/4 IN. CLOSE PIPE (2)
- D- 3/4 IN. 6 IN. PIPE (1)

INCLUDED


- 3/4 IN. SCREWS (8)

This kit is made of industrial grade authentic pipe. It is coated in oil post production to prevent rust. The kit should be cleaned and sealed to prevent rusting. See Clean and Seal sheet for more information on cleaning and sealing your pipe kit.

INSTALLATION INTO WOOD

1. Put barn door handle together as shown above.
2. Screw in 1 screw then level/straighten as needed.
3. Screw in the remaining screws to secure handle to wood.

RECOMMENDED TOOLS

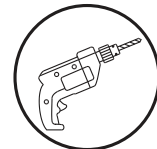

RECOMMENDED
DRILL FOR
INSTALLATION