



PIPE DECOR 365 FMW40


THANK YOU SO MUCH FOR PURCHASING A PIPE DECOR PRODUCT. IF YOU HAVE ANY TROUBLE PUTTING YOUR KIT TOGETHER OR MISSING PIECES PLEASE CONTACT HELP@PIPE-DECOR.COM FOR ANY HELP AND RETURNS.

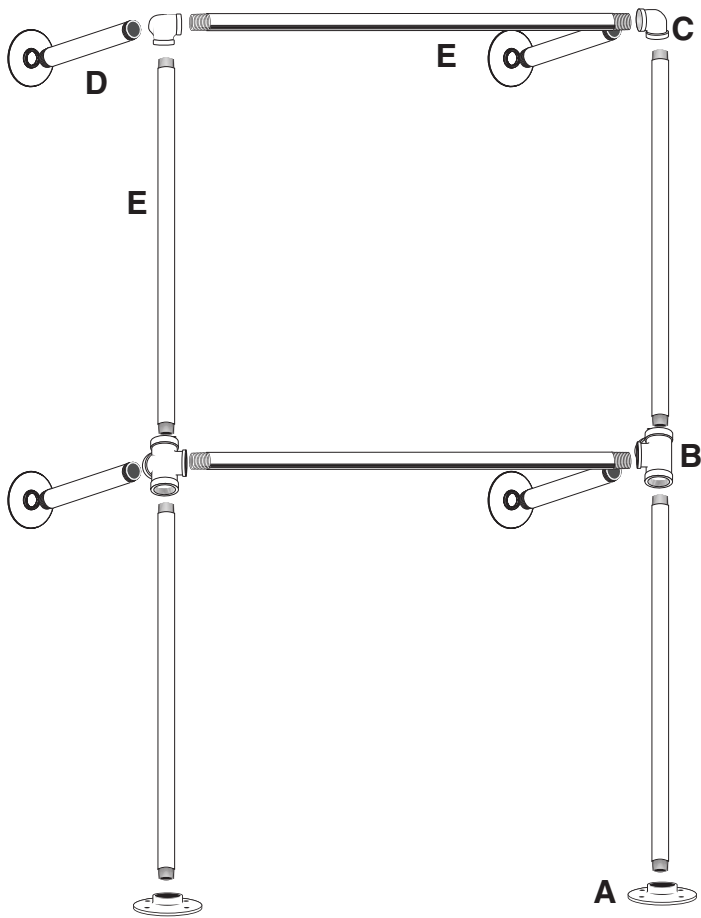

A - 6 X FLANGES

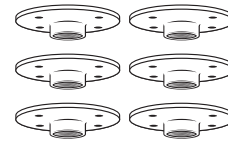


B - 2 X SIDE OUT TEE




C - 2 X SIDE-OUT ELBOW



D - 4 X 12" PIPE

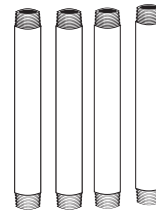

E - 6 X 36" PIPE

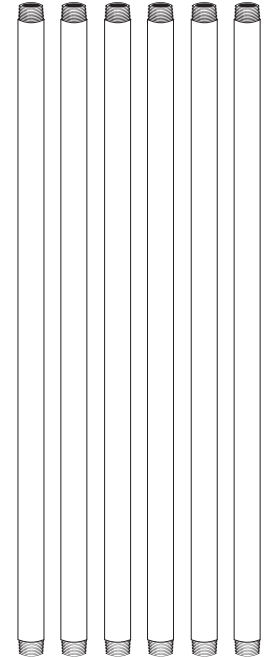

CLEAN AND SEAL THE PIPE BEFORE USE

This kit is made of industrial grade authentic pipe. This oil could rub off on your clothes. It is coated in oil post production to prevent rust. The kit should be cleaned and sealed to prevent rusting. See Clean and Seal sheet for more information. Use a cleaning wipe on the pipe, wait until dry and then spray with any semi-gloss polyurethane spray.

1. Connect into an L shape.
2. Connect the other side.
3. Hand tighten E into B as hard as you can. Then unscrew E into the opposite B. It will be loose, but the connection is good.
4. Stand up and mark the holes with a pencil. Pre-drill holes for anchors.
5. Screw in anchors, then attach the wardrobe to your wall with screws going into the anchors.

