


BAR HEIGHT TABLE LEG SET

NEED HELP OR ADVICE ON PUTTING THIS KIT TOGETHER? MISSING PIECES?
EMAIL US AT HELP@PIPE-DECOR.COM FOR ANY QUESTIONS

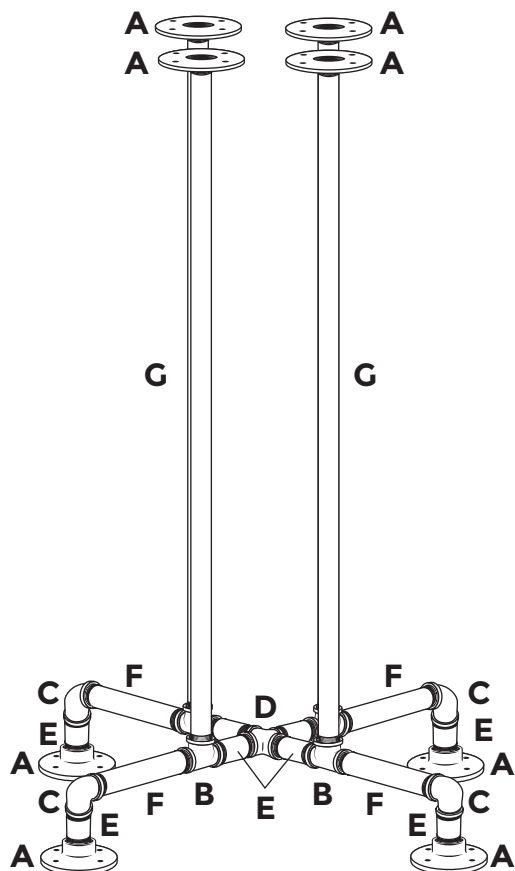


PART	DESCRIPTION	QTY
A	1" FLANGES	8
B	1" TEES	4
C	1" 90° ELBOW	4
D	1" CROSS	1
E	3" PIPE	8
F	10" PIPE	4
G	36" PIPE	4
H	SCREWS	16



EASY INSTALLATION:

RECOMMENDED TOOLS FOR INSTALLATION

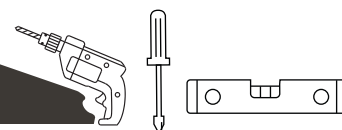

1. Assemble the base for the legs according to the Figure A and Figure B diagrams shown below. Make sure you hand tighten each flange to the pipe when assembling. When you have completed the assembly of the base, continue to Figure C.
2. Screw the 36" Pipe (G) into the assembled base, making sure to hand tighten the pipe, shown in Figure C. Affix the remaining Flanges (A) into the top of the pipe and hand tighten.
3. Place the tabletop (not included) shown in Figure D on the floor, top side down and place the assembled Table Leg Set on it. Drill through the holes in the flanges using the #10 setting to prevent stripping the wood. There is no need to pre-drill.
4. After affixing the top, carefully turn the table upright.

FIGURE A

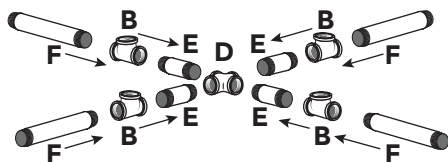


FIGURE B

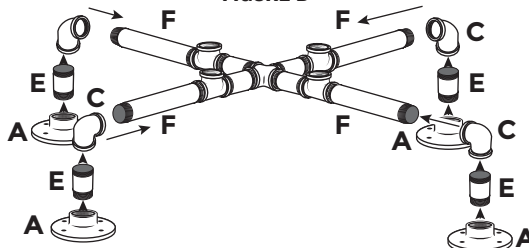


FIGURE C


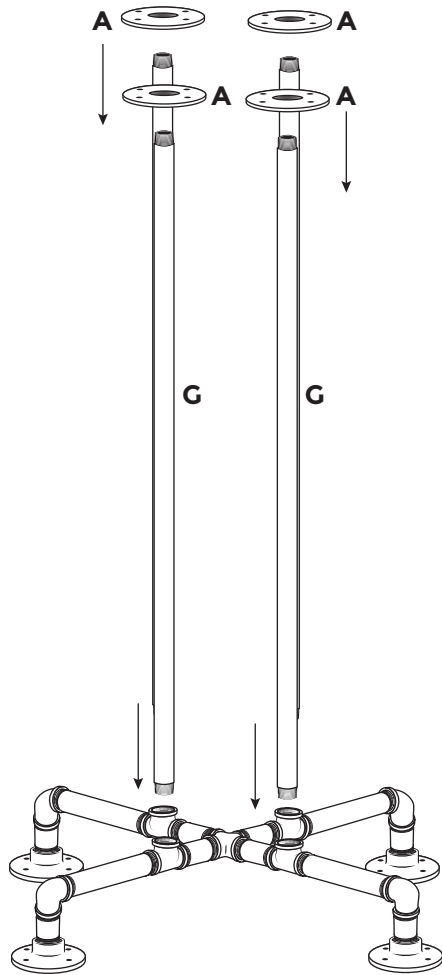


FIGURE D

Screw into table top (not provided)
with the provided screws.

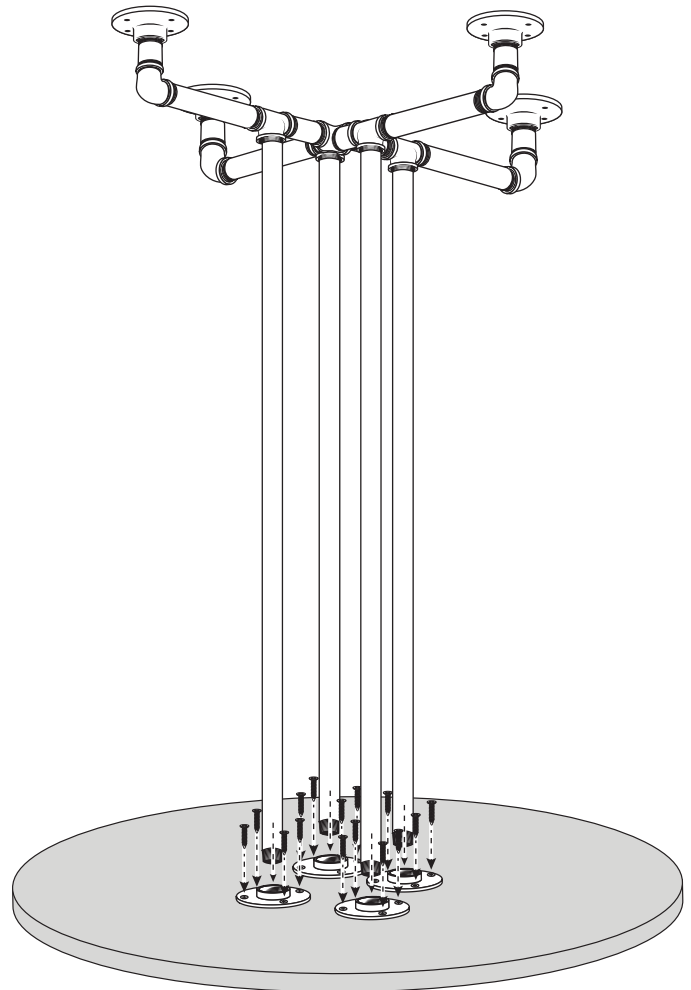

HOW TO PREVENT PIPE CORROSION

PIPE DECOR industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

CLEAN AND SEAL INSTRUCTIONS:

Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)

1. Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.
2. Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.

SEALING WITH POLYURETHANE SPRAY:

Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

SEALING WITH FINISHING WAX:

Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping them down. Faster wiping will result in a shinier finish.