


# PIPE DÉCOR

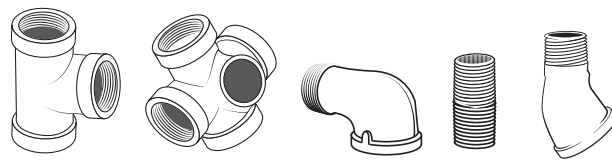

## CLEAN AND SEAL

**IMPORTANT:** Pipe Décor industrial grade black pipes and fittings are coated with a rust preventive oil during manufacturing. You can use your kit as is or clean it before use. **BUT IF YOU CLEAN YOUR KIT YOU MUST SEAL IT TO PREVENT RUSTING.**

### CLEAN

**Recommended Supplies: Regular De-greasing Dish Soap and Wash Cloths. Gloves are optional.**


1. In your kitchen sink or utility sink wash your pipe decor pieces with warm water and dish soap until the oil is removed. Rinse well after washing.
2. Wipe the pipe dry with a wash cloth and wait until **COMPLETELY DRY**. The pieces must be completely dry before sealing them.

### SEAL

**Recommended Supplies: Polyurethane Matte or Satin Finish Spray or Finishing Wax, Gloves and Wash or Lint-Free Cloths.**

- 1A. Spray each dry pipe and fitting with a polyurethane matte or satin finish. Wait until dry to assemble kit.
- 1B. Coat each dry piece with a finishing wax. Wait 20 minutes then polish with a wash cloth by wiping them down. The faster wiping will result in a shinier finish.

# PIPE DÉCOR

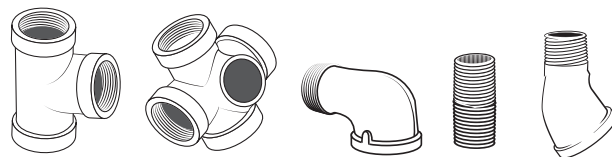

## CLEAN AND SEAL

**IMPORTANT:** Pipe Décor industrial grade black pipes and fittings are coated with a rust preventive oil during manufacturing. You can use your kit as is, **if you wish to clean your pipes for use within your home you MUST seal them to prevent rust.**

### CLEAN

**Recommended Supplies: Regular De-greasing Dish Soap and Wash Cloths. Gloves are optional.**

1. In your kitchen sink or utility sink wash your pipe decor pieces with warm water and dish soap until the oil is removed.
2. Wipe the pipe dry with a wash cloth and wait until **COMPLETELY DRY**. The pieces must be completely dry before sealing them.

### SEAL

**Recommended Supplies: Polyurethane Matte or Satin Finish Spray or Minwax Finishing Wax, Gloves and Wash or Lint-Free Cloths.**

- 1A. Spray each dry pipe and fitting with a polyurethane matte or satin finish. Wait until dry to assemble kit.
- 1B. Coat each dry piece with a finishing wax. Wait 20 minutes then polish with a wash cloth by wiping them down. The faster wiping will result in a shinier finish.