

## RESTORE KITCHEN TABLE TOP

NEED HELP OR ADVICE ON PUTTING THIS KIT TOGETHER? MISSING PIECES?  
EMAIL US AT [SUPPORT@PIPE-DECOR.COM](mailto:support@pipe-decor.com) FOR ANY QUESTIONS



Check the packaging label to determine which part number you have ordered.

This page of instructions only applies to the following part numbers:  
**OLDKT01, OLDKT02, OLDKT03, OLDKT04**

If your part number is not listed, see the other two pages to find the instructions that correspond with your product.

### TAKING CARE OF YOUR SOLID WOOD TOP


Restore by PIPE DECOR wood tops use a water-based polyurethane top coat, to protect and add sheen.

### CLEANING

Use a damp rag and/or gentle dish soap like Dawn. Wipe down your table and let it dry.

### DO NOT USE

Oil-based cleaners like Murphys oil soap or an excessive amount of water.

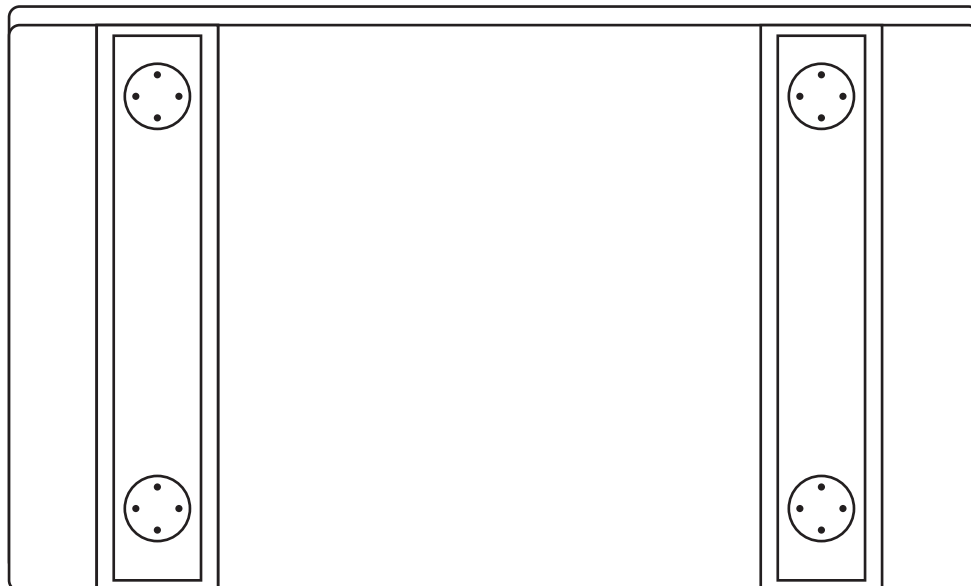

## RECOMMENDED LEG PLACEMENT

# RESTORE COFFEE TABLE SET


NEED HELP OR ADVICE ON PUTTING THIS KIT TOGETHER? MISSING PIECES?  
EMAIL US AT [SUPPORT@PIPE-DECOR.COM](mailto:SUPPORT@PIPE-DECOR.COM) FOR ANY QUESTIONS

**BEFORE  
YOU  
START**

Check the packaging label to determine which part number you have ordered.

This page of instructions only applies to the following part numbers: **370KT01, 370KT02, 370KT03, 370KT04**

If your part number is not listed, see the other two pages to find the instructions that correspond with your product.

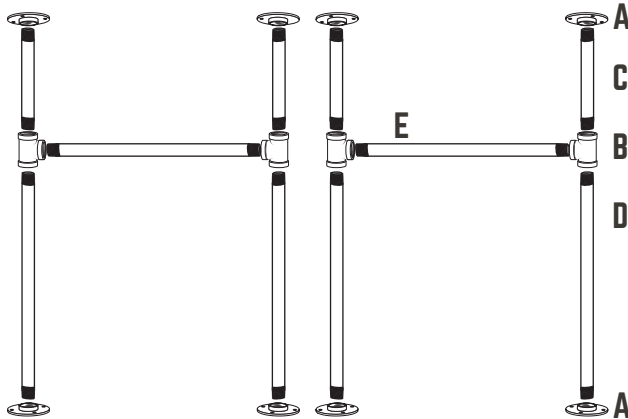

## PARTS LIST

<b>A- 1" FLANGES</b>	<b>8 (QTY)</b>
<b>B- 1" TEES</b>	<b>4 (QTY)</b>
<b>C- 6" PIPE</b>	<b>4 (QTY)</b>
<b>D- 18" PIPE</b>	<b>4 (QTY)</b>
<b>E- 16" PIPE</b>	<b>2 (QTY)</b>

## ALSO INCLUDED

<b>WOOD DESK TOP SCREWS</b>	<b>1 (QTY) 16 (QTY)</b>
---------------------------------	-----------------------------

## ! HOW TO PREVENT PIPE CORROSION

PIPE DECOR industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

### CLEAN AND SEAL INSTRUCTIONS:

**CLEAN:** Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)


1. Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.
2. Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

**IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.**

**SEAL: IF USING POLYURETHANE SPRAY:** Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

**IF USING FINISHING WAX:** Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping them down. Faster wiping will result in a shinier finish.

## RECOMMENDED TOOLS FOR INSTALLATION

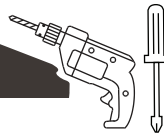


### INSTALLATION INTO WOOD TOP

1. Put Legs together as shown above. Hand tightening each flange to the pipe.
2. Using a drill, screw legs into the bench. We recommend using setting #10 to prevent stripping the wood. There is no need to pre-drill.
3. You can untighten each flange to help level the table.

### CLEANING AND TAKING CARE OF YOUR SOLID WOOD TOP

Restore by PIPE DECOR wood tops use a water-based polyurethane top coat, to protect and add sheen. Use a damp rag and/or gentle dish soap like Dawn. Wipe down your table and let it dry. **DO NOT USE** Oil-based cleaners like Murphys oil soap or an excessive amount of water.

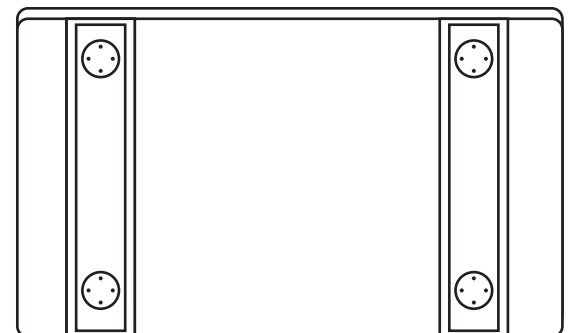

## RECOMMENDED FLANGE PLACEMENT