


## KITCHEN TABLE LEG SET

NEED HELP OR ADVICE ON PUTTING THIS KIT TOGETHER? MISSING PIECES?  
EMAIL US AT [HELP@PIPE-DECOR.COM](mailto:HELP@PIPE-DECOR.COM) FOR ANY QUESTIONS




| PART | DESCRIPTION   | QTY |
|------|---------------|-----|
| A    | 1" FLANGES    | 8   |
| B    | 1" TEES       | 4   |
| C    | 1" X 6" PIPE  | 4   |
| D    | 1" X 18" PIPE | 4   |
| E    | 1" X 16" PIPE | 2   |
| F    | SCREWS        | 16  |

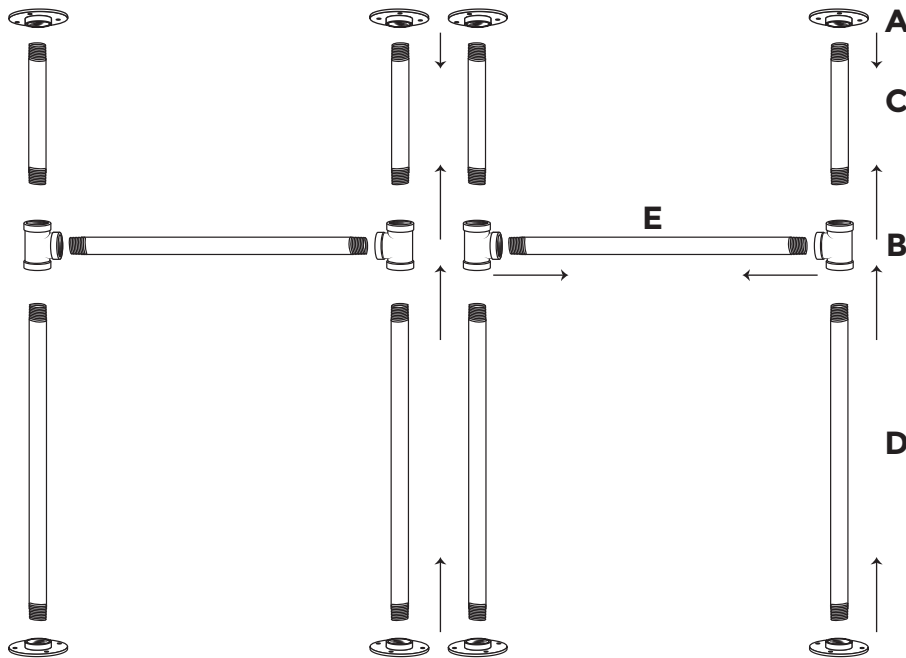


### EASY INSTALLATION:

### RECOMMENDED TOOLS FOR INSTALLATION

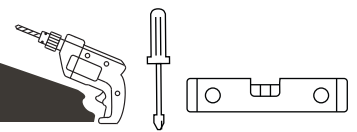

1. Assemble the legs as shown above, by hand tightening the pieces together.
2. Using a drill, screw legs into the tabletop as shown in figure A.  
We recommend using setting #10 to prevent stripping the wood.  
There is no need to pre-drill.
3. You can untighten and retighten each flange on the bottom of the legs, to help level the table.

Figure. A

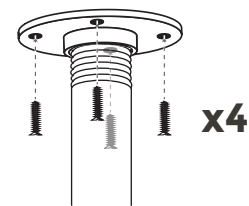

### ! HOW TO PREVENT PIPE CORROSION

PIPE DECOR industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

#### CLEAN AND SEAL INSTRUCTIONS:

Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)

1. Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.
2. Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

**IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.**

#### SEALING WITH POLYURETHANE SPRAY:

Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

#### SEALING WITH FINISHING WAX:

Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping them down. Faster wiping will result in a shinier finish.