



# ASSEMBLY GUIDE



## ROWENA SINGLE & DOUBLE ROCKING LOUNGERS

### Assembly is easiest using a portable drill.

Please do NOT use a hammer as the screws will break.

It is useful to refer to the photographs in the brochure when assembling your furniture.



### Contents

**A.** 2 x Spine Pieces


**B.** 3 x Spine Brace Pieces -  
17mm x 67mm x 550mm

**C.** 34 x Seat Slats


2 x Wedges - to fix lounger from rocking  
80 x Screws, Torque head bit

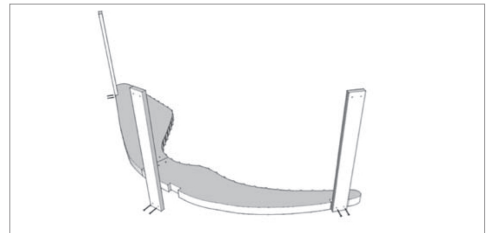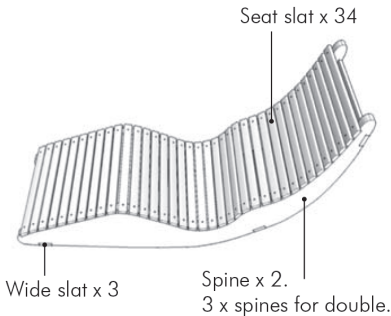

**1.** Lay out a spine section with the screw heads facing upwards and fit the three wide slats into the notches on the spine. Once in place fix with torx head screws.

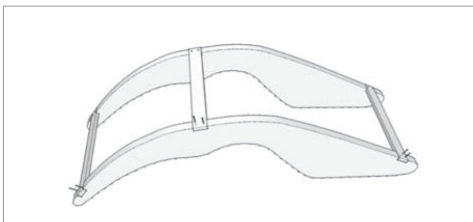

**2.** Attach the second spine to the wide slats.  
Note: For double fit third spine, ensure spine screws face inwards.

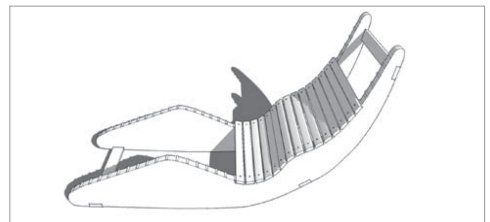

**3.** Attach the slats to the spines in-between the spacing bumps.


**DON'T FORGET TO PAINT ON THE FURNITURE PROTECTOR AS SOON AS THE PRODUCT IS ASSEMBLED, UNLESS ANOTHER FINISH IS TO BE APPLIED.**




## STELLA BENCH RECLINER

It is useful to refer to the photographs in the brochure when assembling your furniture.


In the unlikely event that you find during assembly that a bolt does not pass through the timber please check for any obstruction. If you find one of the short nails has passed through the hole then this can be cleared using a metal drill bit to drill through the nail.

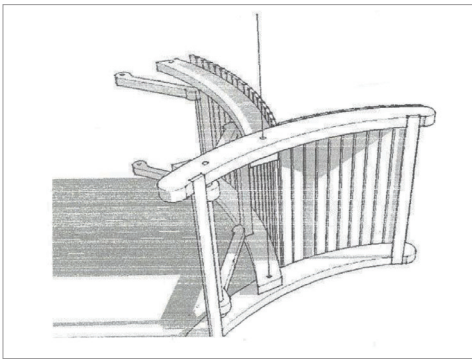

**1.** Lay the centre bench and back section on their side. Ensure the angle adjustment piece is seated on the bar.

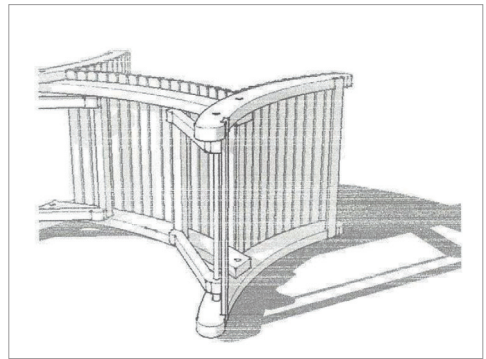

**2.** Repeat the process for the other end. Flip the piece over and repeat the process for the other side.

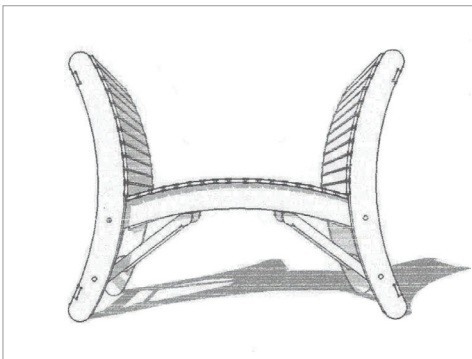

**3.** The finished product.

### MOST IMPORTANT

Please always ensure that the bar that engages into the two position timber support is fully engaged at both ends before anyone sits on the bench.

### CAUTION

In the reclined position please do not over balance the bench at one end if used by one person only.

**DON'T FORGET TO PAINT ON THE FURNITURE PROTECTOR AS SOON AS THE PRODUCT IS ASSEMBLED, UNLESS ANOTHER FINISH IS TO BE APPLIED.**



## ASSEMBLY GUIDE



# NOJATA SUNBED

### Assembly is easiest using a portable drill.

Please do NOT use a hammer as the screws will break.

It is useful to refer to the photographs in the brochure when assembling your furniture.



**1.** Screw the legs to the inside of the front of the sunbed where marked. Unscrew the metal axle bar and fit the wheels on the axle with the nail heads of the wheels facing to the inside.

**2.** Refit into the notch in the spine of the sunbed. (The metal axle bar may have been fitted, if so unscrew and attach the wheels as instructed above then refit).

### MOST IMPORTANT

Please ensure when removing or fitting the screws into the metal axle bar that you do not screw too fast or with too much force as this will cause the screw head to shear off.

**DON'T FORGET TO PAINT ON THE FURNITURE PROTECTOR AS SOON AS THE PRODUCT IS ASSEMBLED, UNLESS ANOTHER FINISH IS TO BE APPLIED.**