

Installation guide MURALS & WALLPAPER

difficulty: ★★☆☆☆



Required materials

- Clean & dry cloth
- Level or laser
- Measuring tape
- Application spatula (included)
- Exacto style knife
- Painters tape

Ideal surfaces



- Smooth, dry and clean surfaces, treated with primer and a minimum of one coat of paint



please wait a minimum of 15 days before installing on a freshly painted surface

Surfaces to avoid



- Dirty, moldy or dusty surfaces
- Textured, damaged or peeling surfaces

**it is not recommended to install your mural directly on brick, wood, gypsum, primer or plaster*



Prepare the surface

Shut off the power to the electrical outlets for the room you will be working in and remove the plug covers.

Remove any objects hanging on the wall.

Fill, sand, or repair any imperfections.

Clean the wall with a dry cloth (without cleaning products) ensuring it is free from dust and residue.

The surface should be smooth, clean, and completely dry before beginning the installation.



Verify the wallpaper panels

Lay the panels on the floor, printed side up and in numerical order (from left to right).

Check for any printing defects, ensure the total width is accurate, and verify that the patterns align from one panel to the next (more on pattern matching in the following steps).

In the event of any manufacturing defects or errors in your order, please contact us [before](#) installing your mural.




Install the first panel

Temporarily install the first panel with the painters tape, starting from the top left corner of the wall.

Using a level or laser, ensure that the first panel is straight. Do not rely on the walls or ceiling as they may not be perfectly level.

Peel off and cut away at least 6 inches of the white backing and then firmly press the adhesive vinyl to the wall using the application spatula, making downward movements.

Peel off the remaining backing, a little at a time, and gradually stick the vinyl to the wall using the spatula, ensuring that the panel remains level.

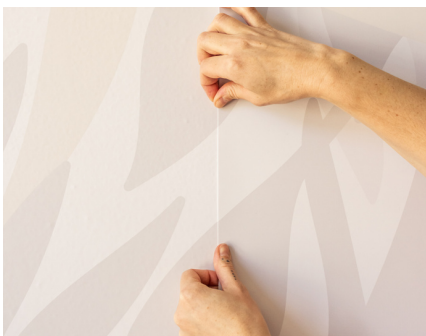

Install the following panels

Temporarily secure the panel to the wall using tape, overlapping it on the previous panel, and matching the pattern.

Overlap the left side of the panel being installed onto the right of the previous panel. It is important to ensure that the overlap is consistent from one panel to the next. **The overlaps will be 0.5 inches wide.**

At this stage, you no longer need your level, simply align the pattern ensuring you have 0.5 inches of vinyl overlapping onto the previous panel.

Make adjustments as needed by gently removing the vinyl to realign it. Our material is durable and removable, so feel free to make corrections.



Finishing

If bubbles are visible, use the spatula or your hands to push them towards the edge. You can also smooth them out by piercing them with a needle and then smoothing them with your fingers.

Trim away the excess vinyl at the top, bottom and extremities of your wall, if necessary, using an exacto style knife.

Cut carefully around electrical outlets, and reinstall the switch plates, making sure the power is still turned off.