


Soft Wash Setup Guide

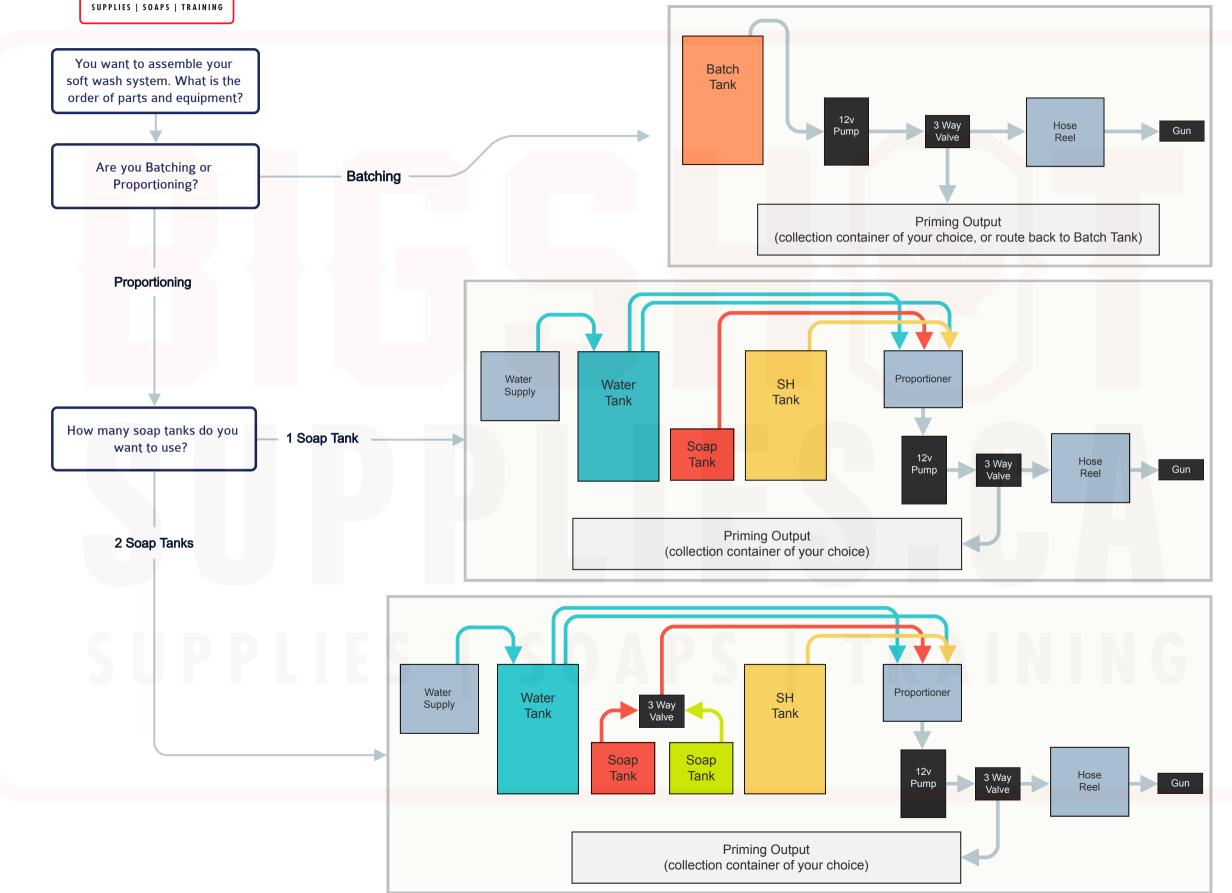

Plumbing Connections

Water Supply to Water Tank

- 1. Water Tank Fill Fitting Kit H20INLET
- 2. 1" x 3/4" Reducing Nipple N801-100-075PP
- 3. 1" Hudson Float Valve 2240




Tank Outputs w/ Drop Down Tubes

- 1. Mikalor Clamps:
 - For 1/2" hose use N75-1921
 - For 3/8" hose use N75-1719
- 2. 90 Elbow, Barb x Thread Poly Fitting:
 - For 1/2" hose use N410-050-050PP
 - For 3/8" hose use N410-038-050PP
- 3. 1/2" Bulkhead TF050EPP
- 4. 1/2 " PVC Adaptor R436-005
- 5. 1/2" PVC Inlet Filter 2102
- 6. 1/2" PVC Pipe (differing length per tank)




Proportioner Inputs

- 1. Mikalor Clamps:
 - For 1/2" hose use N75-1921
 - For 3/8" hose use N75-1719
- 2. Barb x Thread Poly Fittings:
 - For 1/2" hose use N400-050-050PP
 - For 3/8" hose use N400-038-050PP
- 3. Thread x Thread Nipple N800-050PP
- 4. 1/2" 3 Way Ball Valve 3055

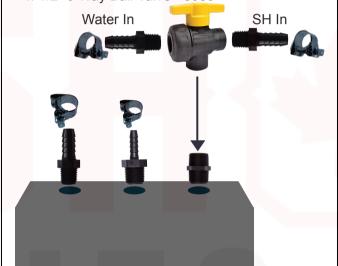

Proportioner Output

- 1. Mikalor Clamps:
 - For 3/4" hose use N75-2527
 - For 1/2" hose use N75-1921
- 2. Barb x Thread Poly Fitting:
 - For 3/4" hose use N400-075-075PP
 - For 1/2" hose use N400-050-075PP

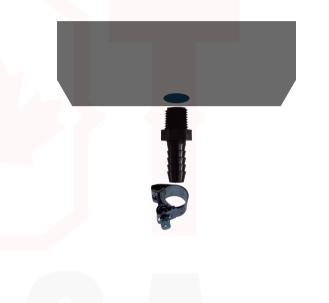

Pump Connection

- 1. Mikalor Clamps:
 - For 3/4" hose use N75-2527
 - For 1/2" hose use N75-1921



Hose Reel

- 1. Mikalor Clamps:
 - For 3/4" hose use N75-2527
 - For 1/2" hose use N75-1921
- 2. Barb x Thread Stainless Fitting:
 - For 3/4" hose use N400-075-050SS
 - For 1/2" hose use N400-050-505SS



3 Way Soap or Priming Valve

- 1. Mikalor Clamps:
- For 1/2" (priming) hose use N75-1921
- For 3/8" (soap) hose use N75-1719
- 2. Barb x Thread Poly Fitting:
- For 1/2" (priming) hose use N400-050-050PP
- For 3/8" (soap) hose use N400-038-050PP
- 3. 1/2" 3 Way Ball Valve 3055



Soft Wash Gun

- 1. Mikalor Clamp:
 - For 1/2" hose use N75-1921
- 2. Barb x Thread Stainless Fitting:
 - For 1/2" hose use N400-050-505SS

