



2020 B-Base SB-5 Mounting Instructions

****Please read and understand these instructions before touching your bike, rack or wrench. ****

Complete UnRack /B-Base Kit.

Thank You for your purchase.




The B-Base Parts FIG1

Rear Mounting Strap

Center 2" D-Rings (6)

1" D-Rings (For mounting Bottle Holster)

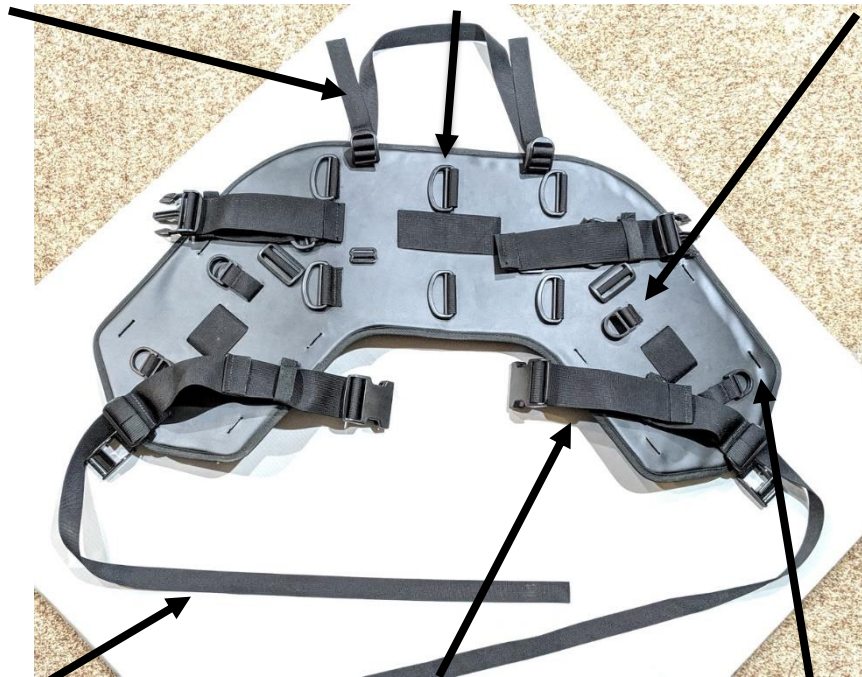

Front Mounting Straps

Center Mounting Straps

Rolie Bag Slots (4per leg)

Installing the B-Base.

Depending on Make and Model of Motorcycle you have, A Kiowa Heat Shield (HS402) is a MUST. As Wolfman Does not Warranty Heat Damage.

A- Mounting Rear Strap

1. Place B-Base across the passenger seat or rear section of your seat. FIG2



FIG2



FIG3

2. Slide Rear Strap under Rear Rack or Tail light. FIG2 (Thread Strap through any opening on Rear Rack)

3. Tighten each buckle on rear strap to set B-Base. FIG3

B- Mounting the Front Straps to your motorcycle

1. Thread the front strap around passenger peg/ peg bracket and back to Cam Buckle. Repeat for other side of B-Base. FIG4



FIG4

2. Tighten both sides evenly to secure. Cut off any excess webbing and melt end with a lighter to avoid unravelling. Leave about 6" of webbing to use when cinching the B-Base tight. Tuck the excess webbing behind buckle.

3. Loosen the buckles for attaching the Rolie Bags in the next section.

C-Prepare the Rolie Bags. There are two methods to prepare the Rolie bags.

1-Thread the 1" Mounting straps through the slot under the Buckles on the Top/Front of the Rolie Bag.FIG5
This is the most universal method. Use this method to attach a Rolie Bag to the Center 2" D-Rings FIG1
FIG5



FIG6



2-BEST METHOD- Thread webbing through the top and bottom slots on the back/bottom patch. This can be done on the 303 Rolies as well. This makes the Rolie Bags very stable on the B-Base. FIG6

D- Attaching Rolie Bags.

****All Rolie Bags attach to the same 8 1" Slots laser cut into each leg of the B-Base. ****

Remove All the Strap Keepers from the straps.

1. Begin with the Top Front Slot on the B-Base. Thread the 1" Webbing of the top front strap from the Rolie Bag through the corresponding slot and around the Rolie Bag, thread the keeper to the webbing, continue to the 1" Buckle on the front/outside of the Rolie Bag. FIG7&8



FIG7 Top Looking down



FIG8 (Right Underside Rear Shown)

4. Attach the 2" Wide Center Strap across the Center outside of the Rolie Bag. (On the 303 Rolies, that have the 2" D-Ring at the bottom Remove the 2" Side release buckle, Thread the Long Bottom strap through the 2" D-Ring under the Bunji, re-thread the 2" side release buckle.) FIG9

5. Thread through the Handle Loop. Connect the buckles, tighten webbing snug and secure. Secure the excess web to the Strap Keepers.

FIG9



5. Repeat Steps 1-5 for the Slots of the B-Base.

6. Retighten the Front Mounting Straps. FIG4

F. Attaching Center Bag.

There are (6) 2" D-Rings on the top of the B-Base. This is a Great platform to attach all types of Rolies. When threading webbing through the 2" D-Rings there is no need to take off the Strap Keepers.

1. Thread the Webbing through the 2" D-Rings on the Top of the B-Base. FIG10



FIG10

****A few reminders:**

*****Re-check and Tighten All Webbing Securely.**

*****The Correctly Mounted Kit should look like the Complete Un-Rack B-Base Kit on Page 1.**

*****When Using 303 Rolies, simply Remove liner to Un-Load. To Load, Fill Liner about halfway before inserting into outer bag, then fill the rest of the way. Tuck liner in, roll top snug. *****

HINT * For Best Results use the Ratchet Method of Tightening webbing. *******

Most of us just grab and pull webbing to tighten it. This can lead to broken buckles. But there is an easier way.

1. Pull Up on the loose end of webbing lifting the buckle. FIG1



FIG1



FIG2

2. Bring the loose end down tightening as you go. FIG2

3. Do this until the bag is very snug.

If you have any questions or need assistance please email us at sales@wolfmanluggage.com

Happy Riding.

Woofle