


DO NOT PRINT THIS PAGE


FOLDING INSTRUCTIONS FOR QUICK ASSEMBLY GUIDE

PRINT ON **25 1/2" W x 22" H** SIZE OF PAPER

①

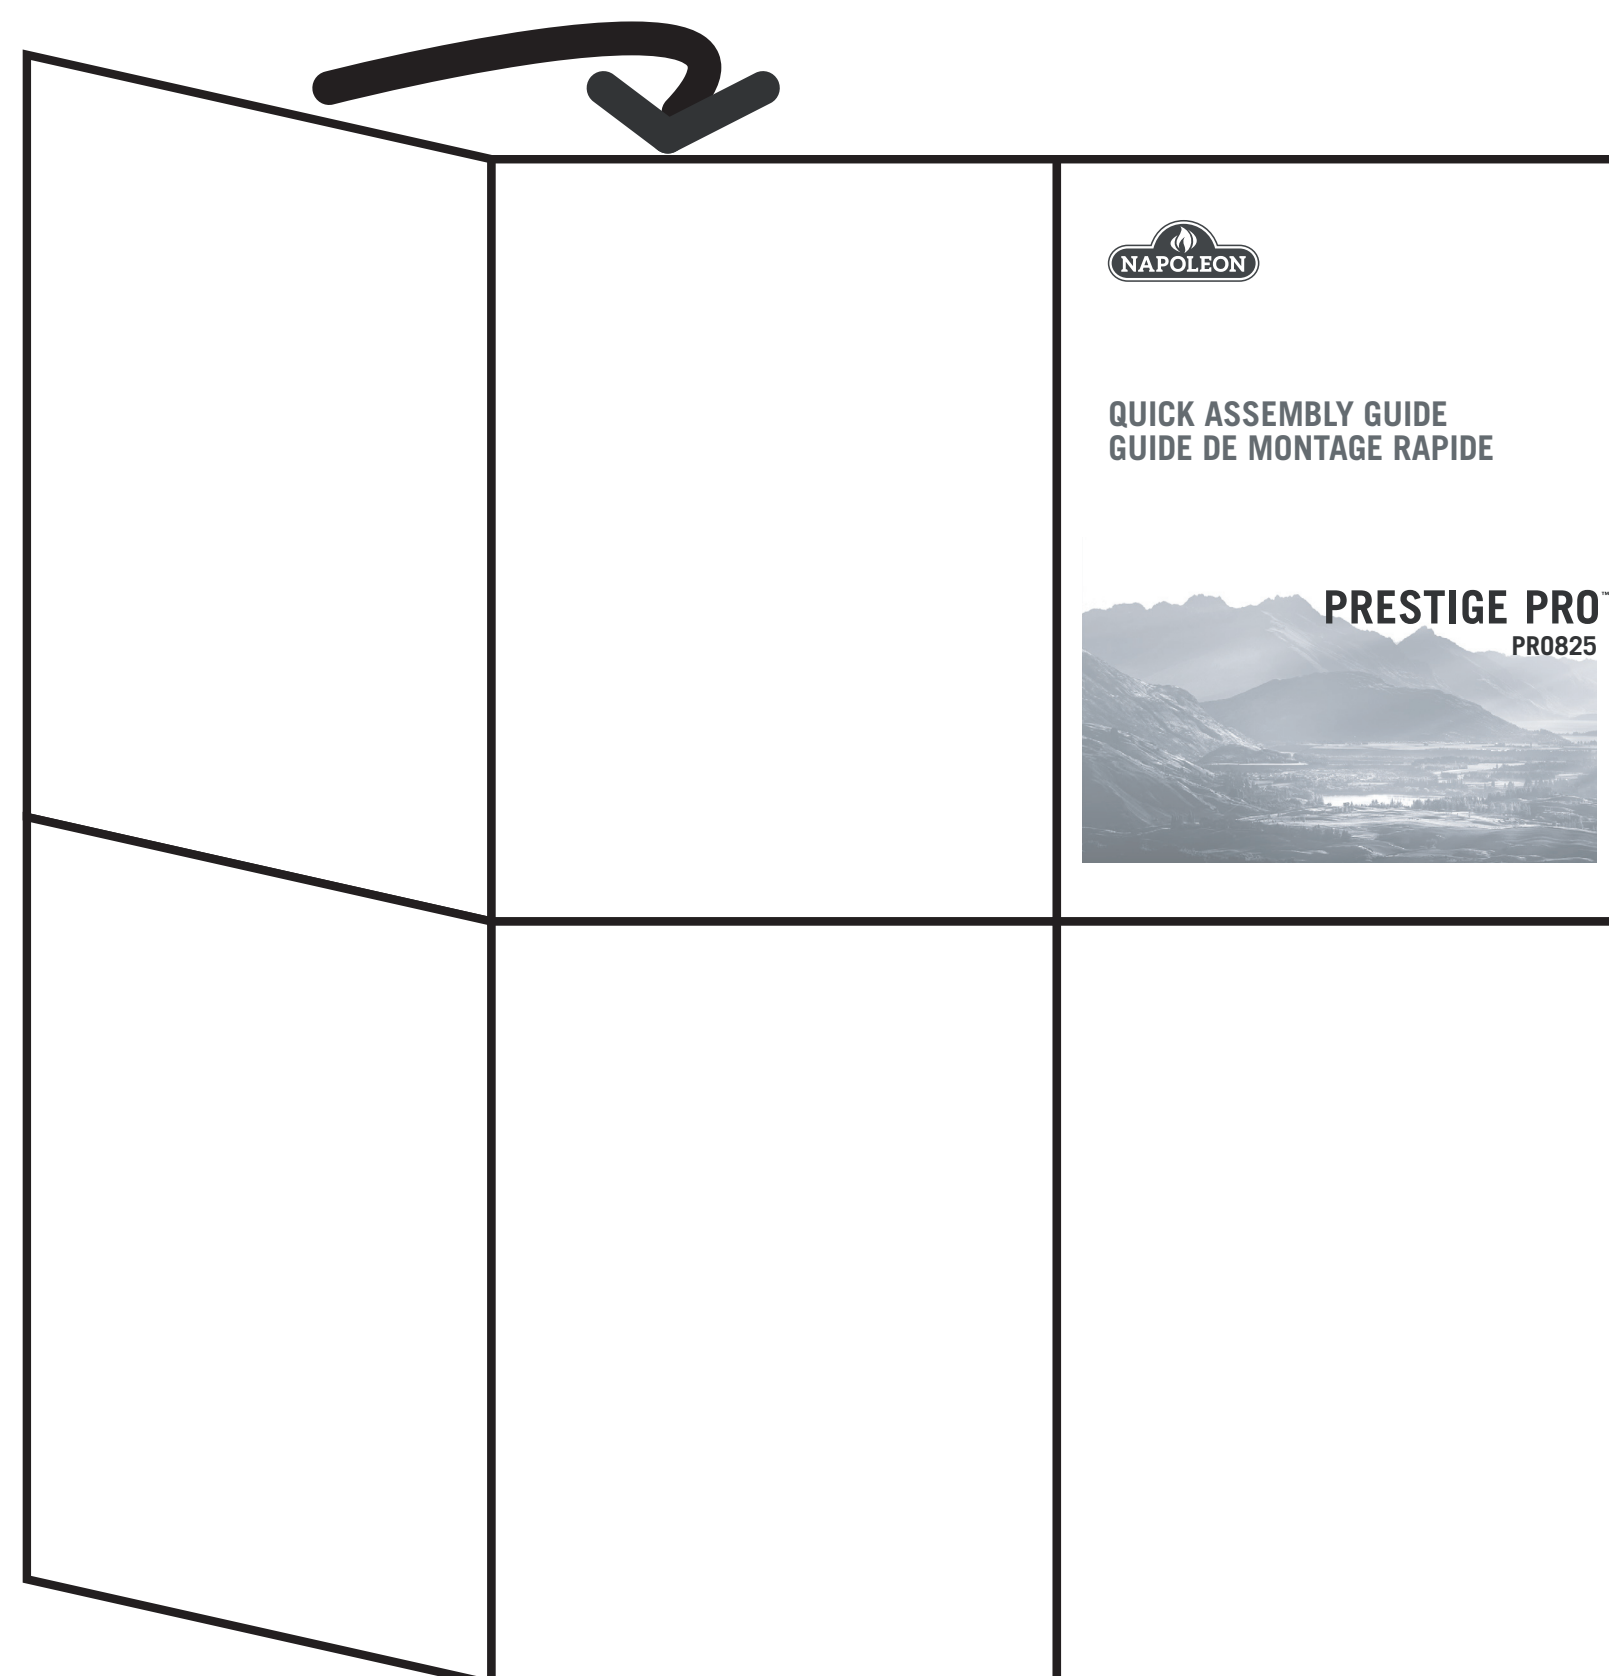



②

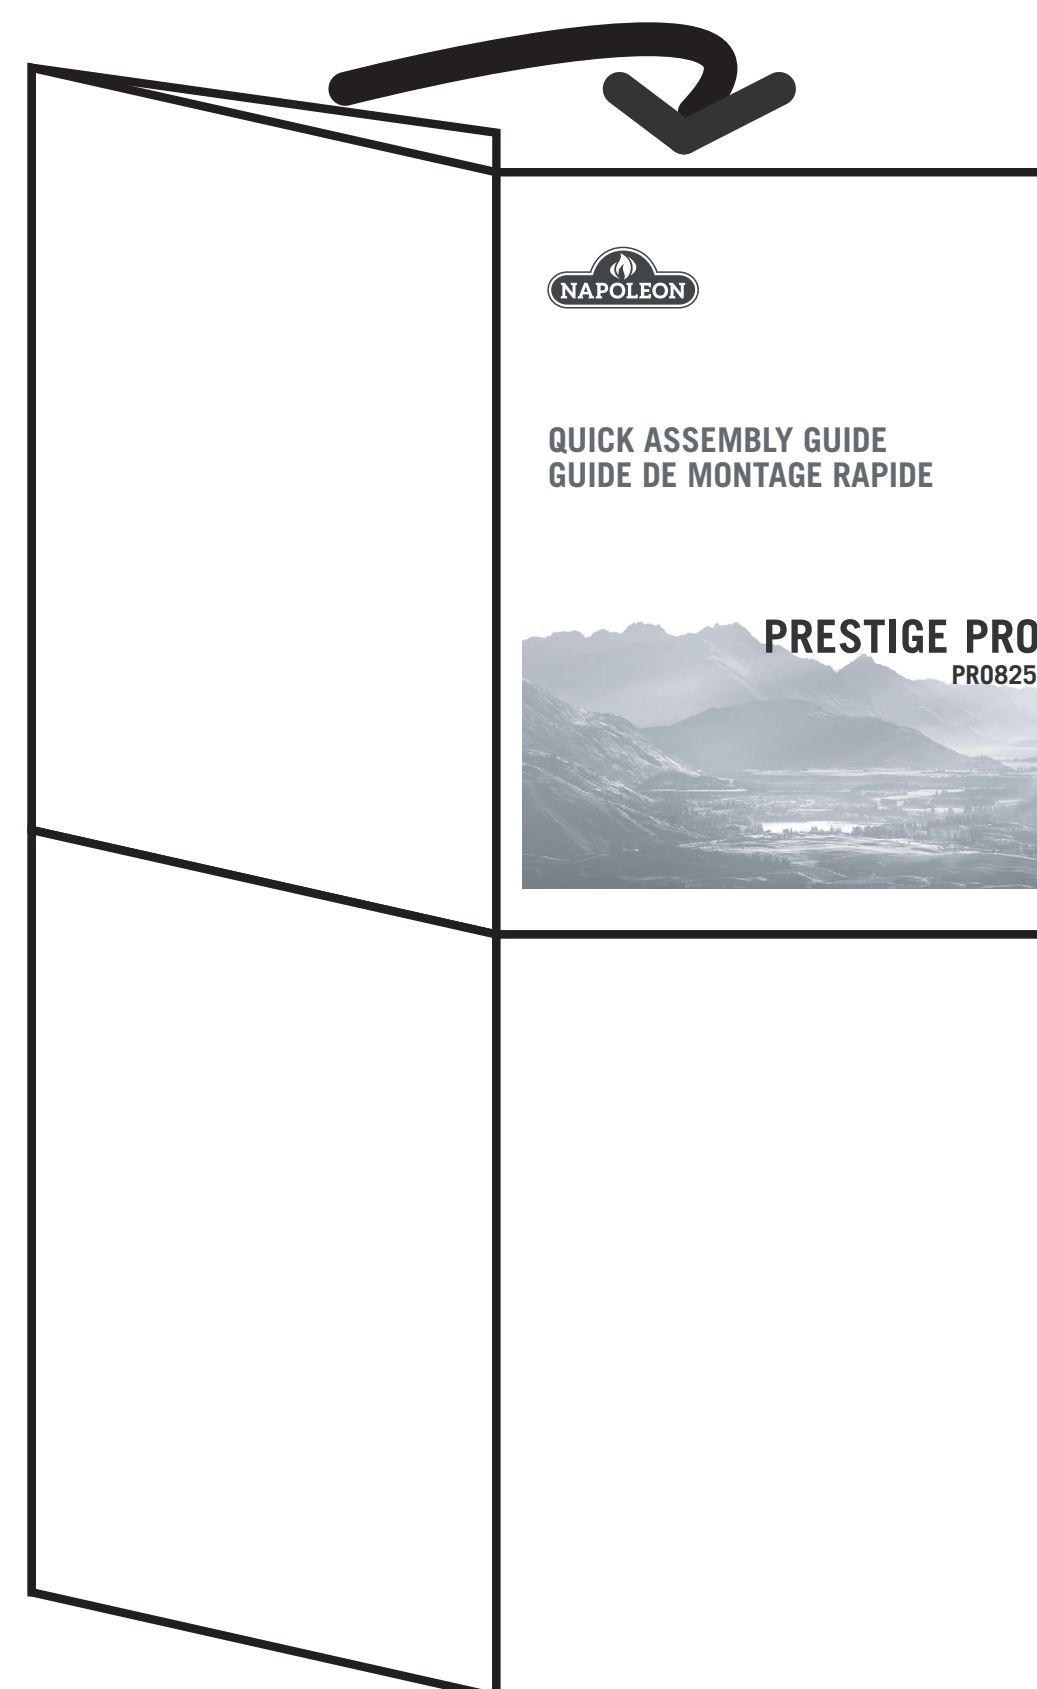










③



Please Print In BLACK and WHITE

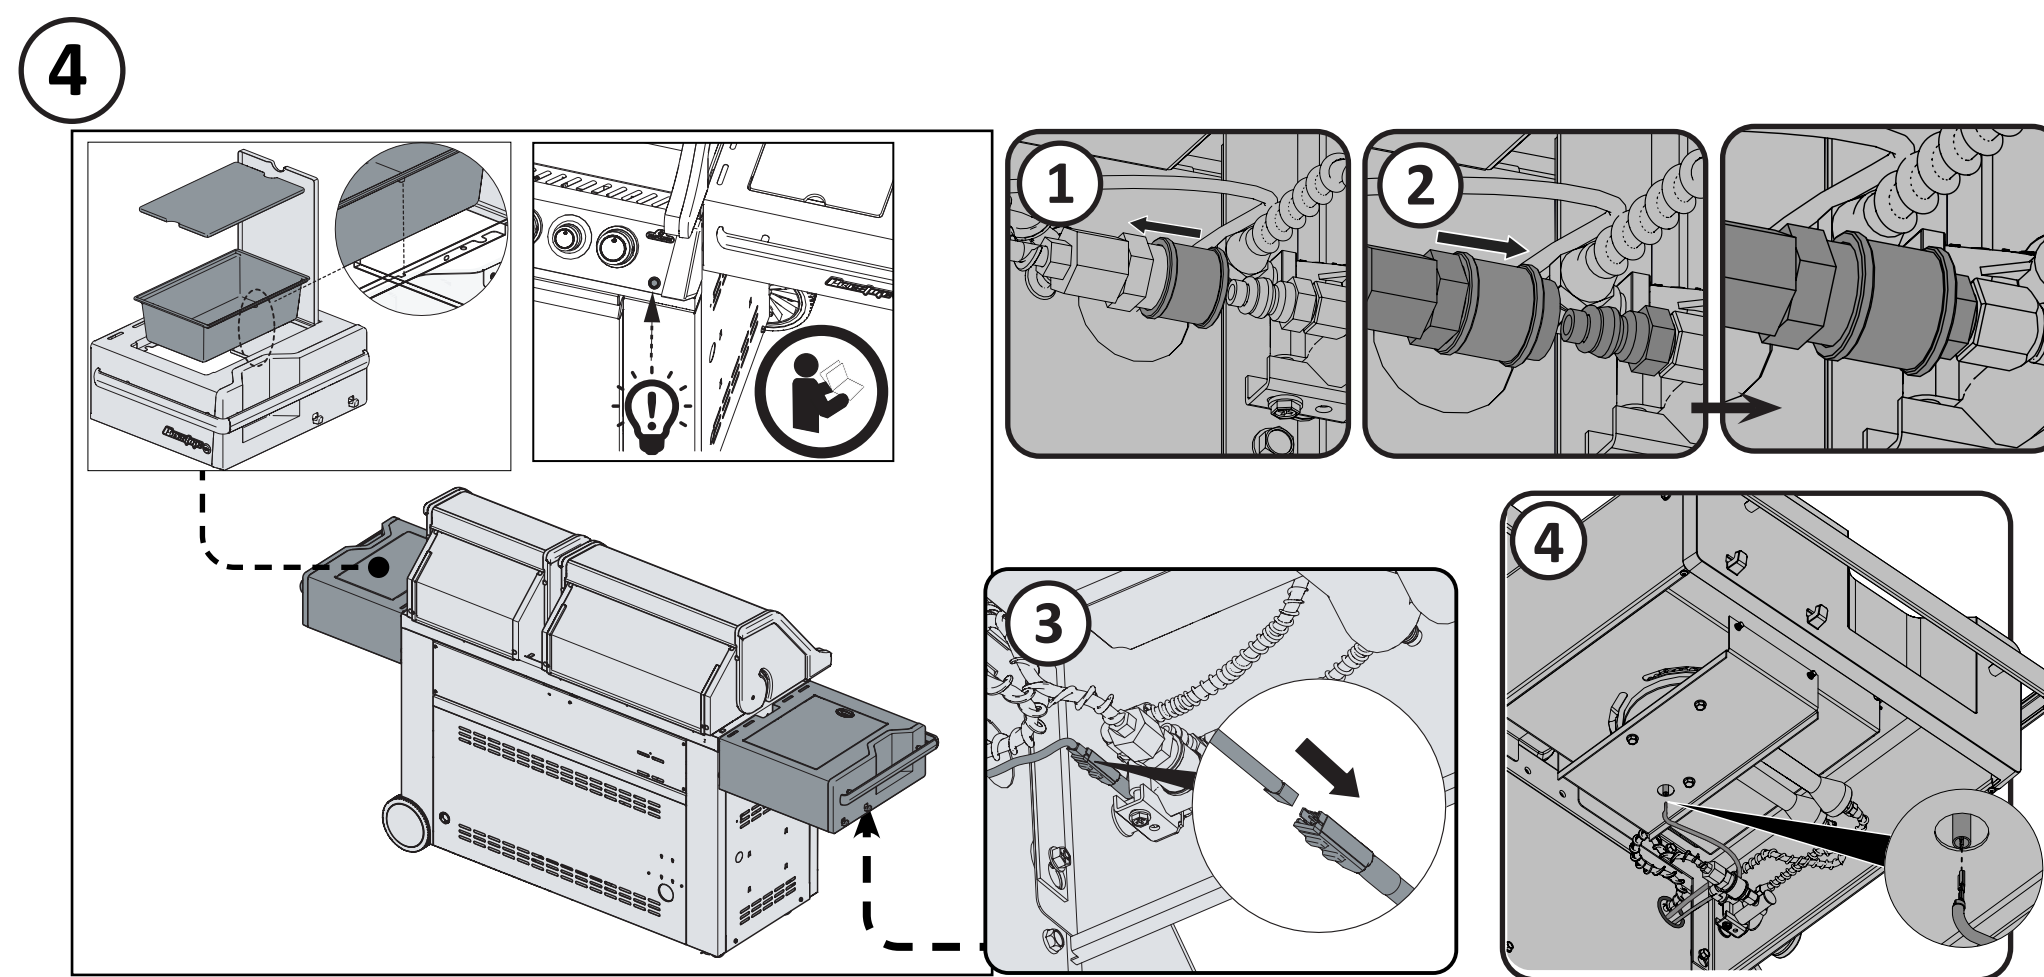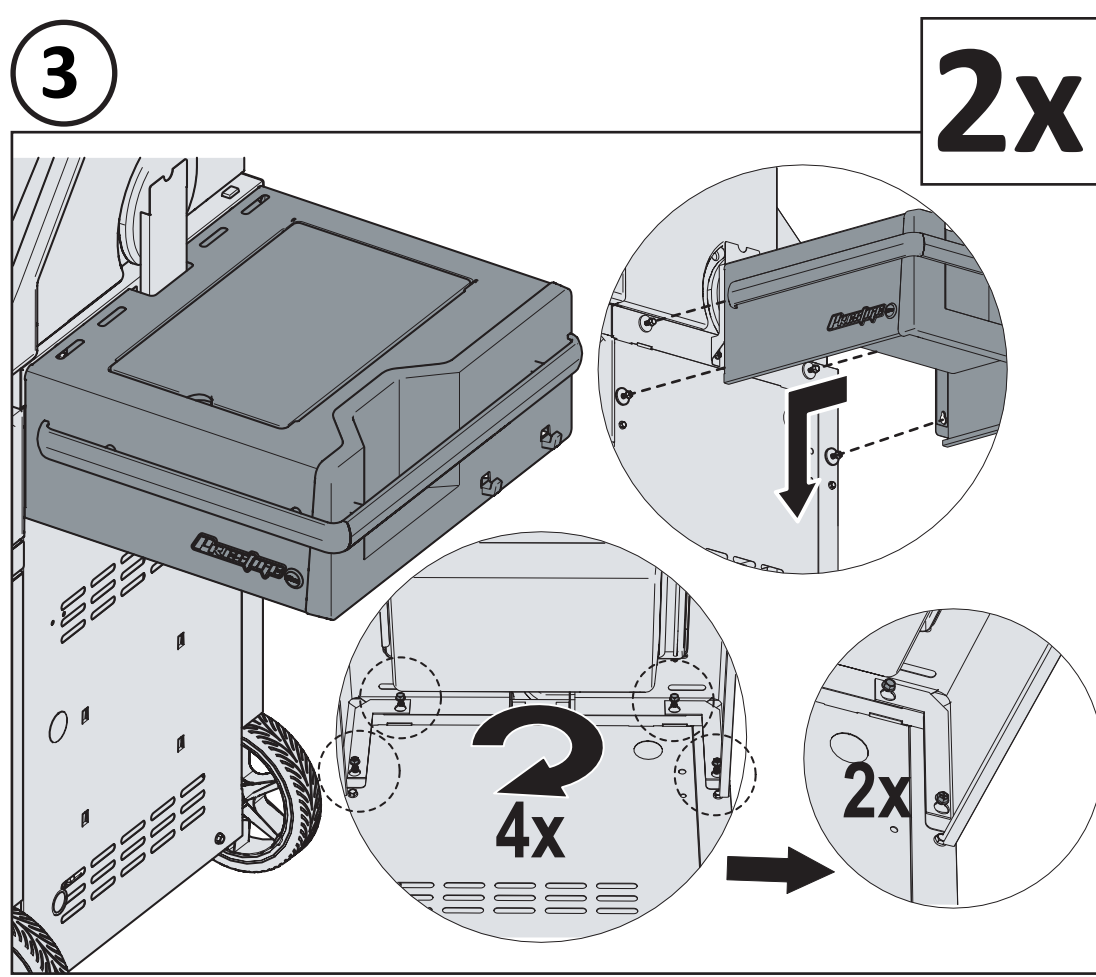


QUICK ASSEMBLY GUIDE
GUIDE DE MONTAGE RAPIDE

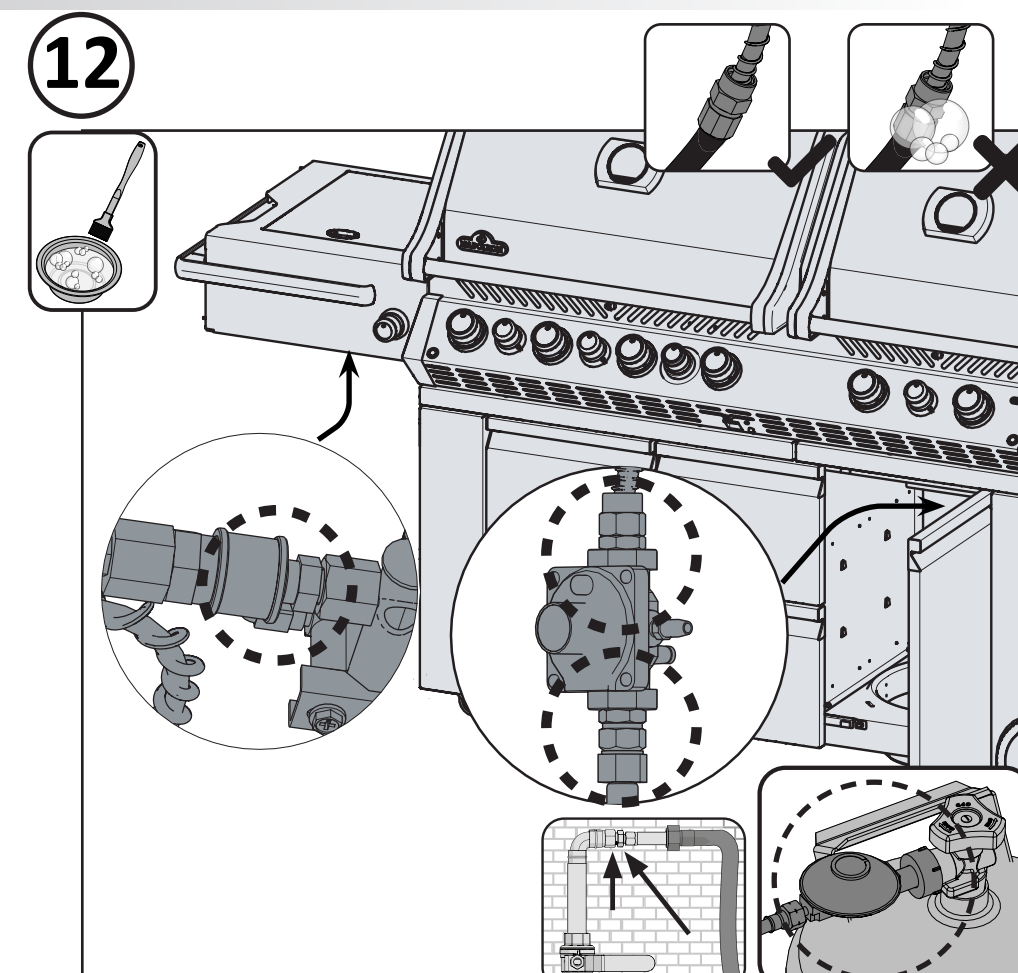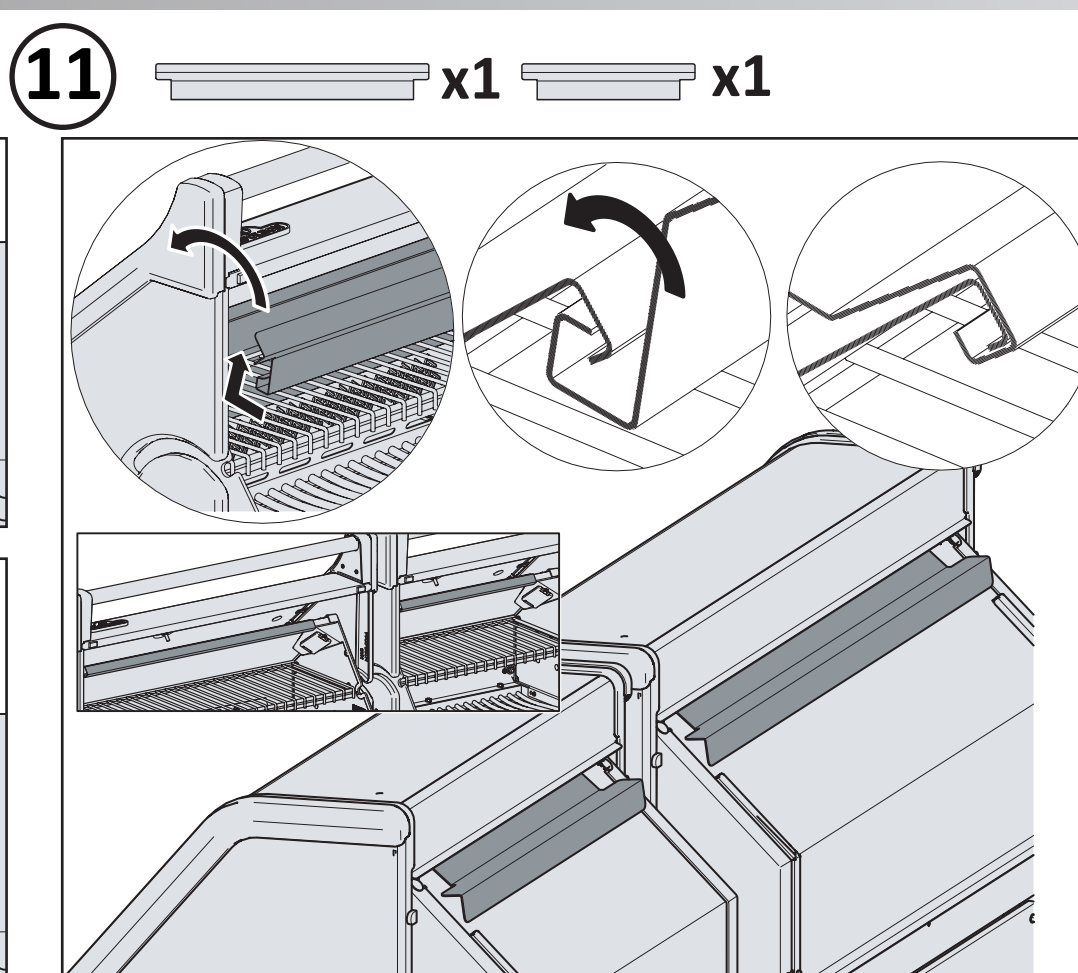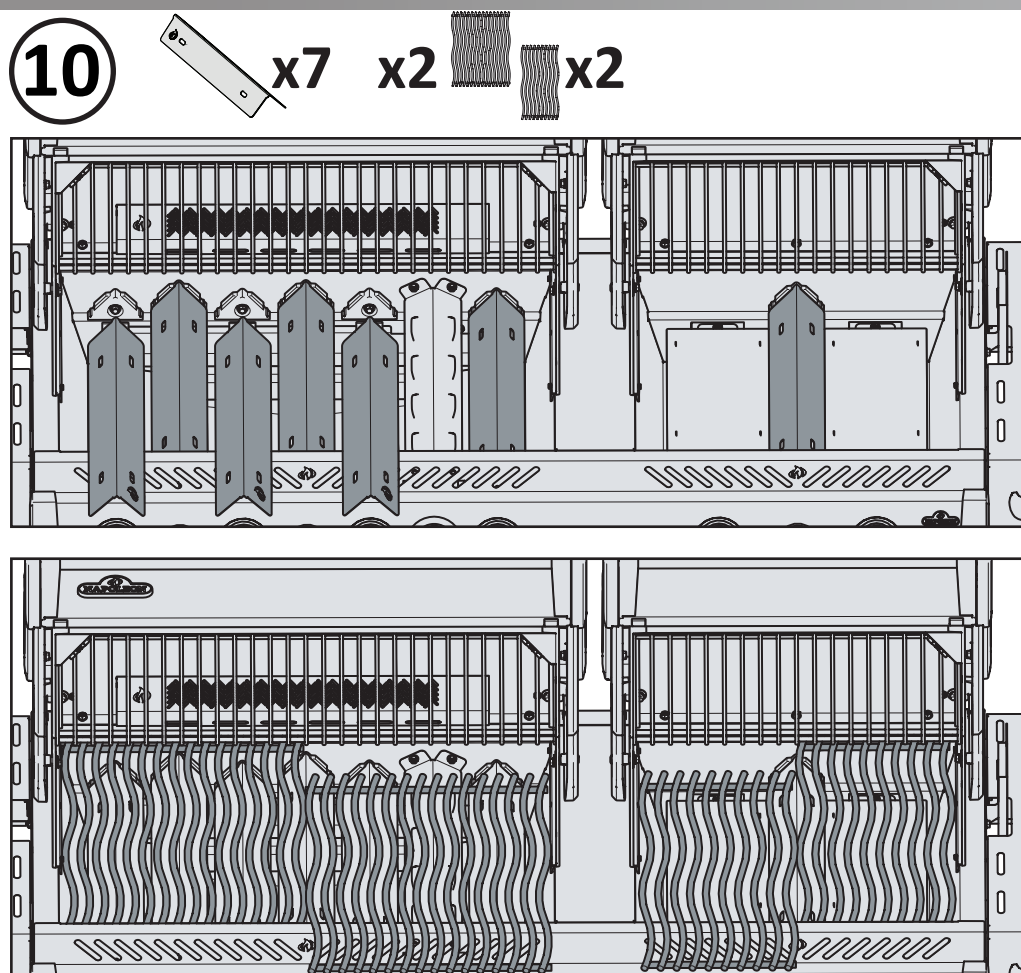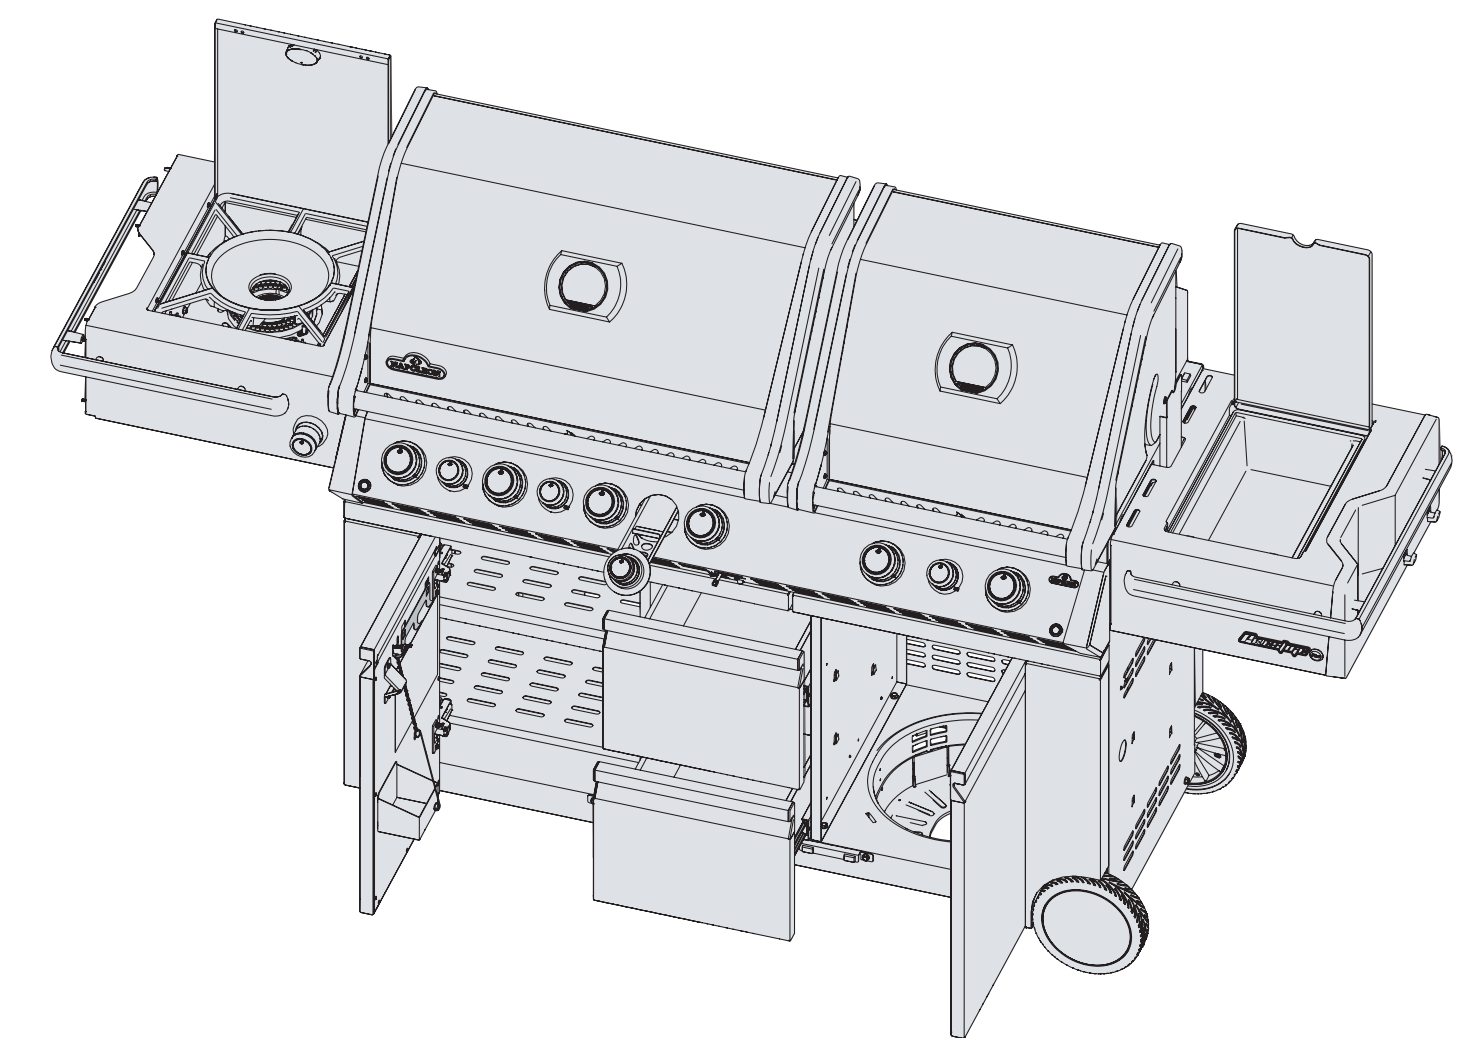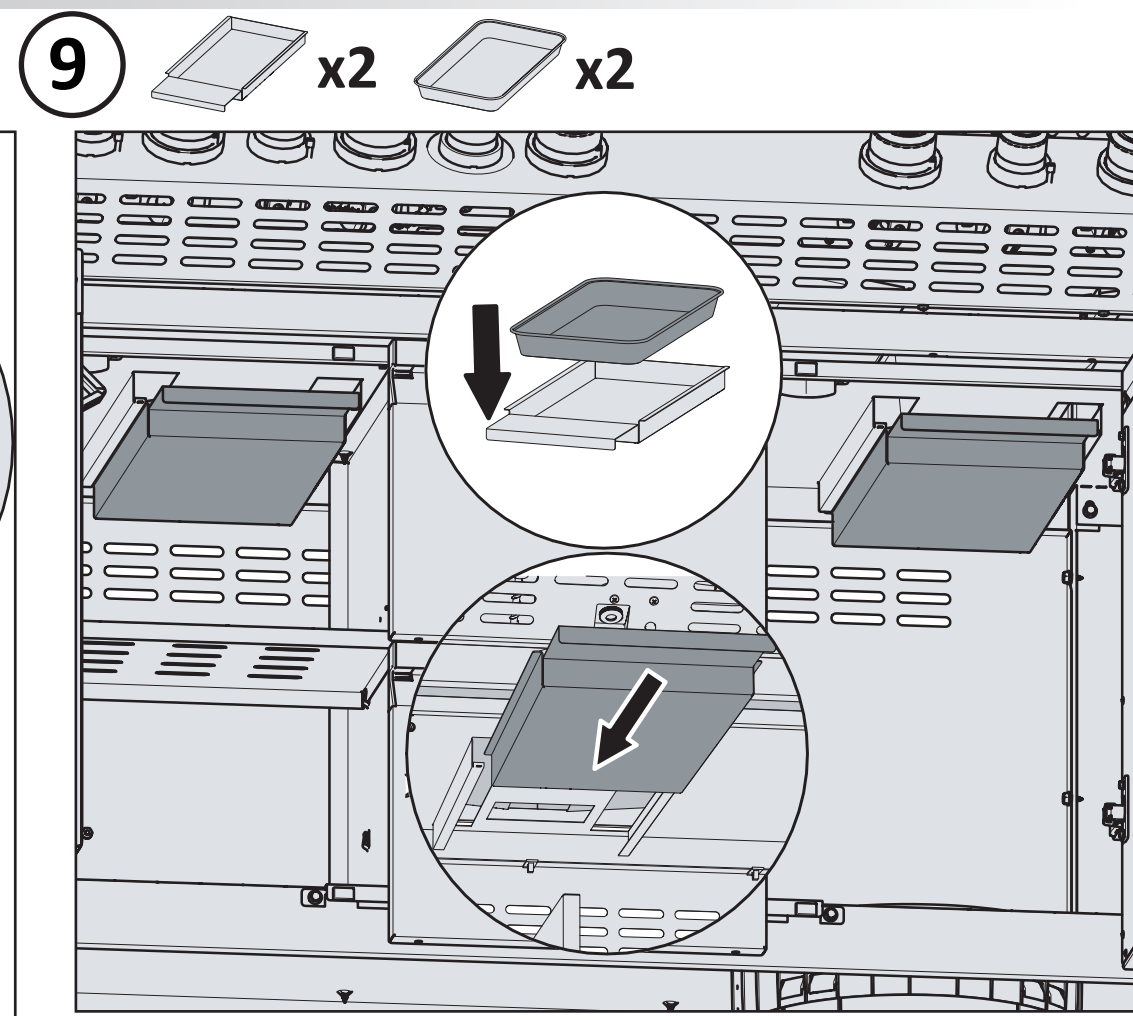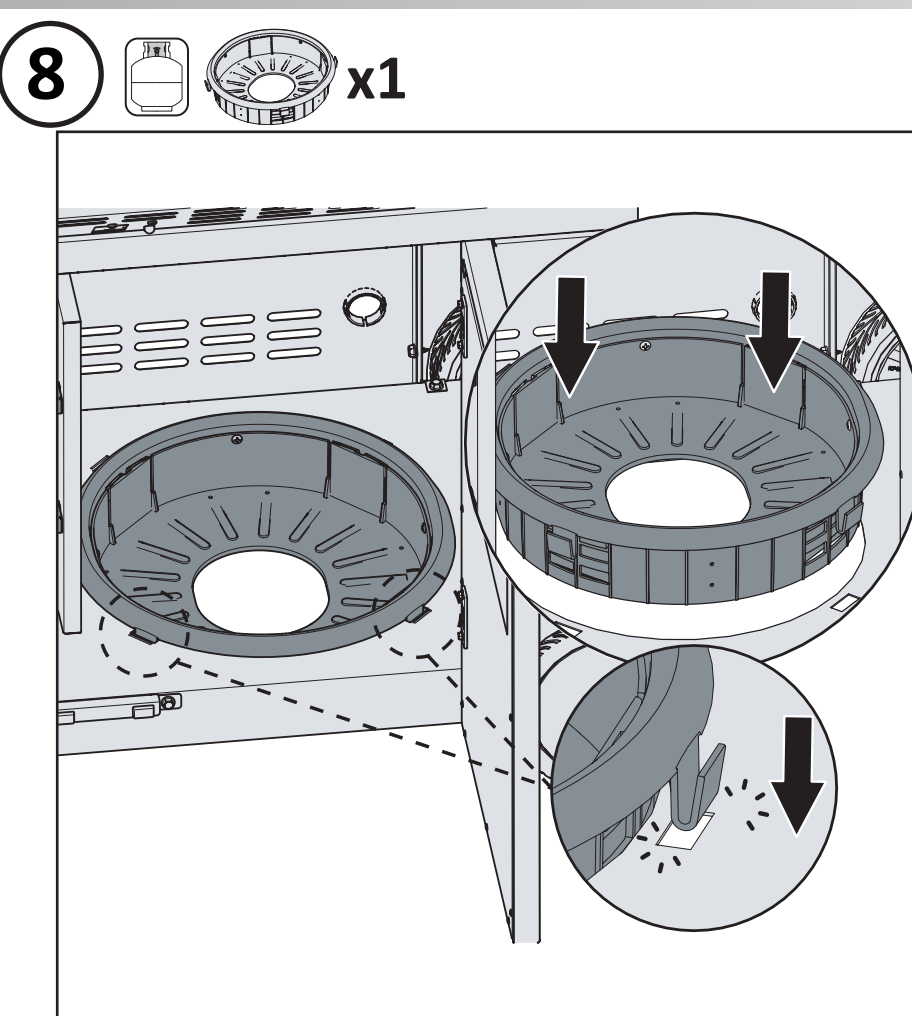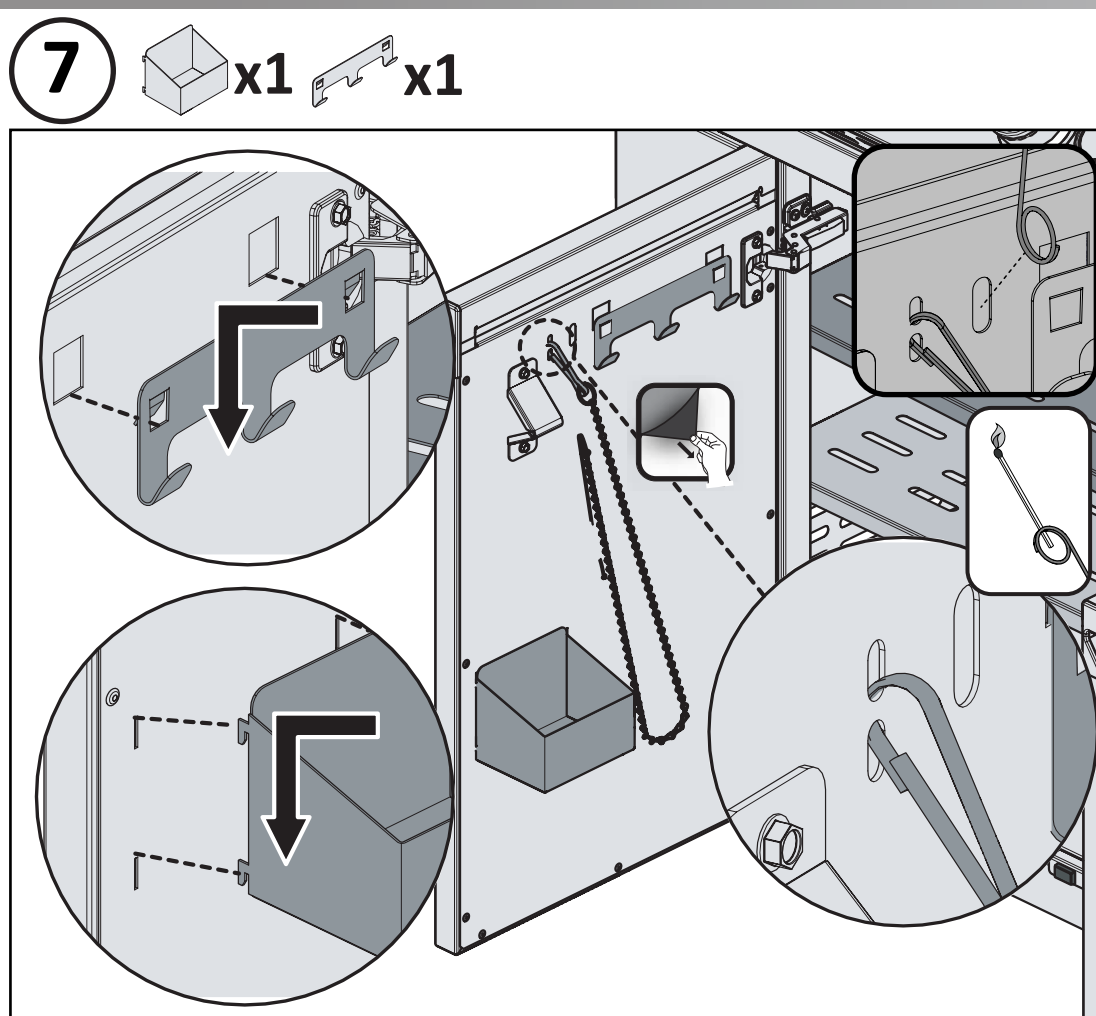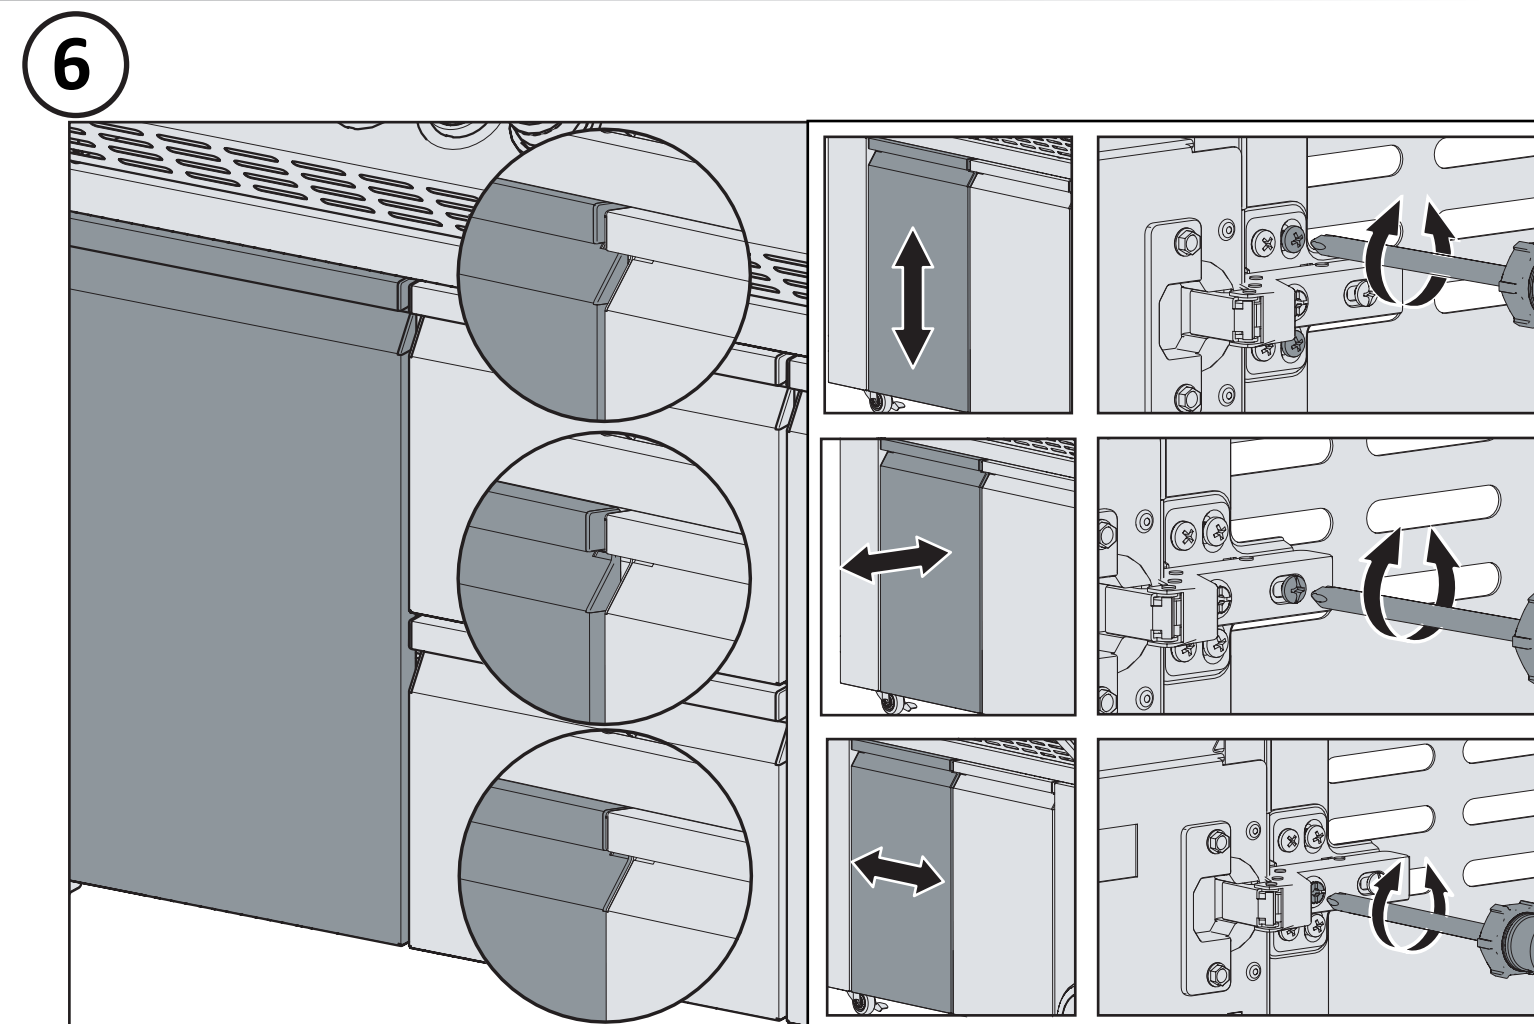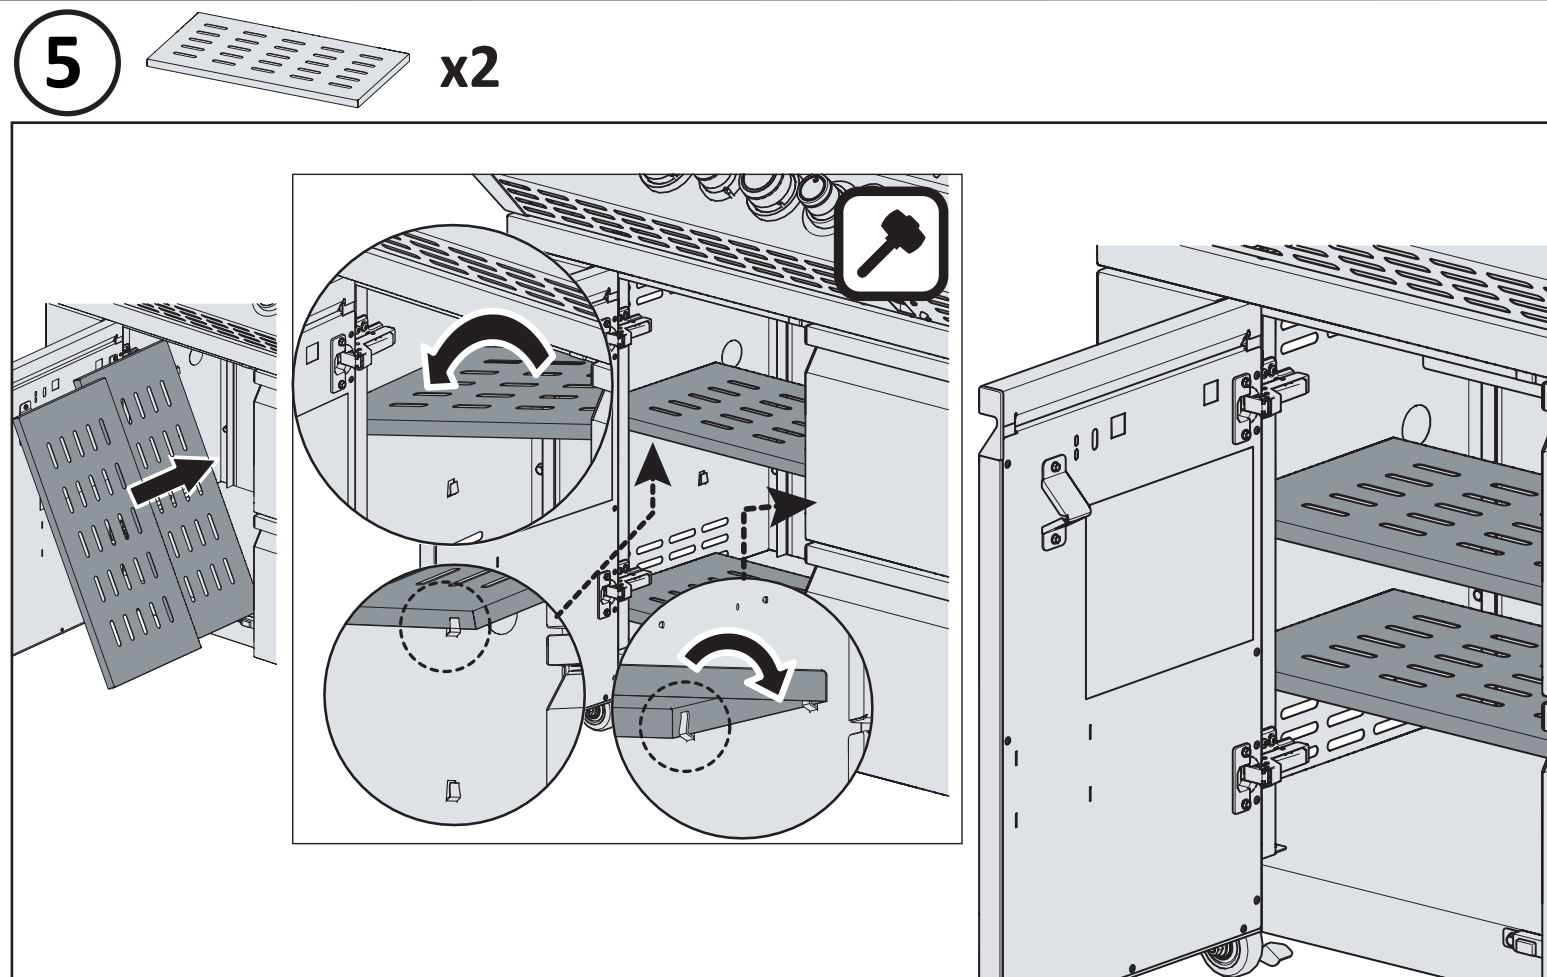



PRESTIGE PRO™ PR0825-3

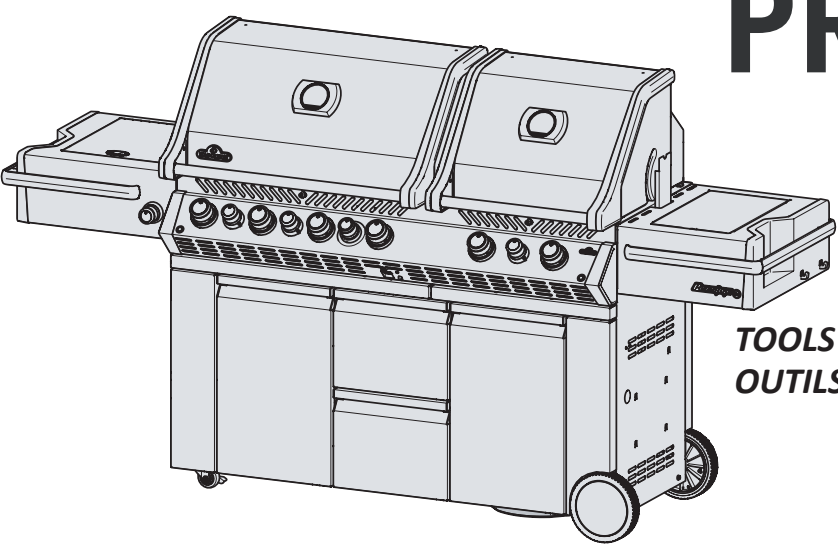

TOOLS REQUIRED FOR ASSEMBLY (tools not included)
OUTILS REQUIS POUR L'ASSEMBLAGE (outils non inclus)



3/8" (10mm)

