

For Model:

ODLANAIG-48, ODLANAIG60, ODLANAIG48-ST

Overlay Kits

Inner Overlay Kit (Reference A & B) - SRV4111-025 (48in), SRV4112-025 (60in), SRV4113-025 (48inST)

Outer Overlay Kit (Reference C & D) - SRV4111-173 (48in), SRV4112-173 (60in)

These kits have been tested for use with specific Hearth & Home Technologies products. Check with your local building code agency before you begin installation to ensure compliance with local codes, including the need for permits and follow-up inspections. If you encounter any problems regarding code approvals, or if you need clarification of any of the instructions contained here, contact your Hearth & Home Technologies dealer. For the dealer nearest you, please visit www.hearthnhome.com.

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

A. Inner Overlay Kit Includes

- Left Overlay
 - Right Overlay
 - Rear Overlay
 - Hardware Pack with drill bit
2. Place the right side overlay into the right side of the firebox. Align hole in top of firebox with tab on the top of the overlay. See Figure 2 and 3.

B. Installation Instructions

1. Peel protective coating off of overlays and place rear overlay into back of firebox. No fasteners needed. The side overlay will hold rear panel in place. See Figure 1.



Figure 1 Rear Overlay

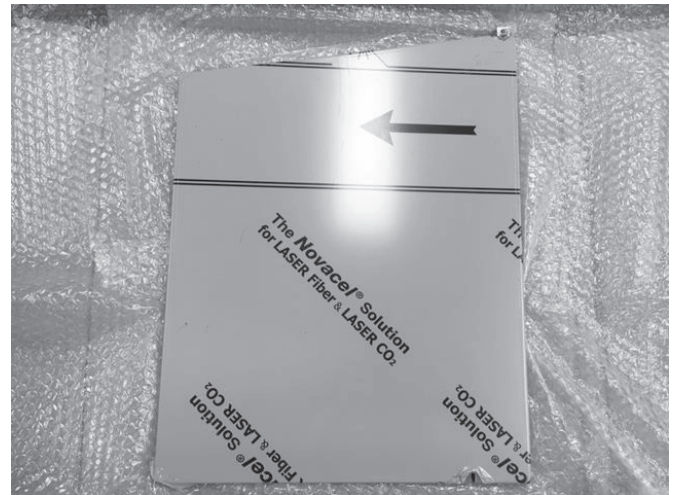


Figure 2 Right Overlay

3. Right side panel will need to be put in place, then a hole will need to be drilled (with drill bit provided) into the firebox top through the overlay panel.

4. Attach with 2 screws provided. This will hold rear panel in place. See Figure 3 and 4.
5. Repeat Step 2 and 3 with left overlay. See Figure 4.

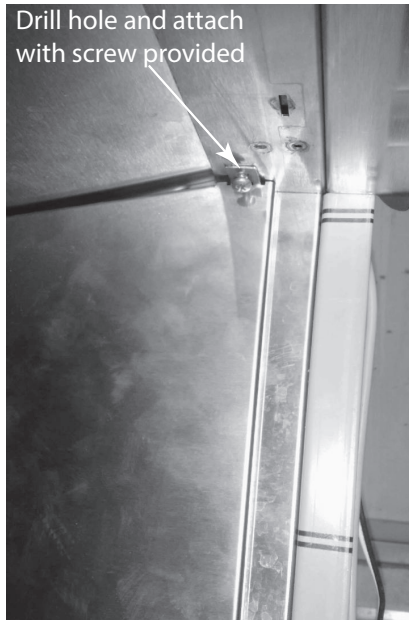


Figure 3 Screw Attachment

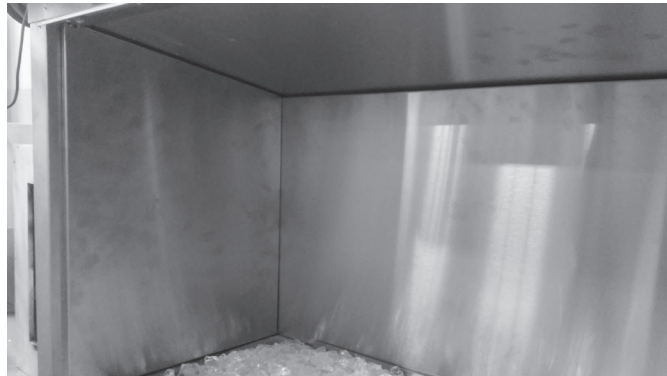


Figure 4 Left Overlay

C. Outer Overlay Kit Includes

- Outer Overlay Piece
- Extended Hood

D. Installation Instructions

Note: If face is already covered by a facing material the overlay will need to be trimmed to fit.

1. The overlay is the same outside dimension of the Lantai front. See Figure 5. Install overlay with a high temperature adhesive with a rating of 600° F or more on the inside of all surfaces. See Figure 6.
2. Remove existing hood and install extended hood.
3. Line up overlay with the outside dimensions of face.
4. The inside dimension opening of overlay should line up with inside of appliance and hang on extended hood.
5. After securing overlay to front and allowing to properly dry and cure to adhesive manufacturer's specs, peel off protective coating. Clean with a quality stainless steel cleaner.

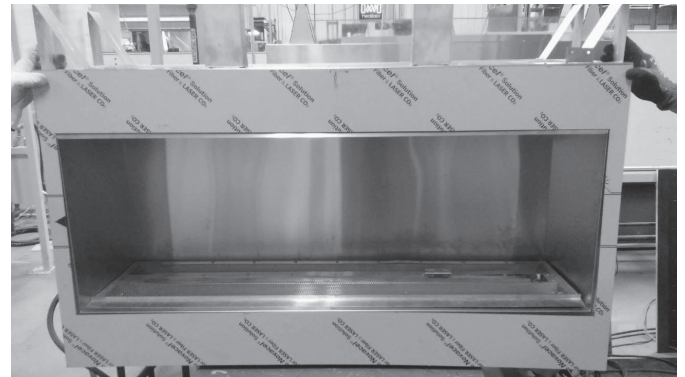


Figure 5 Overlay Installed



Figure 6 High Temperature Sealant

Hearth & Home Technologies
 7571 215th Street West, Lakeville, MN 55044
www.hearthnhome.com