


1

MEASURE THE HOLE SIZE

You will need to measure the actual hole size that you will want the louvre to fit inside. Width and height in mm. From these dimensions we can then calculate the actual neck size. Which is usually 12mm less all the way around.

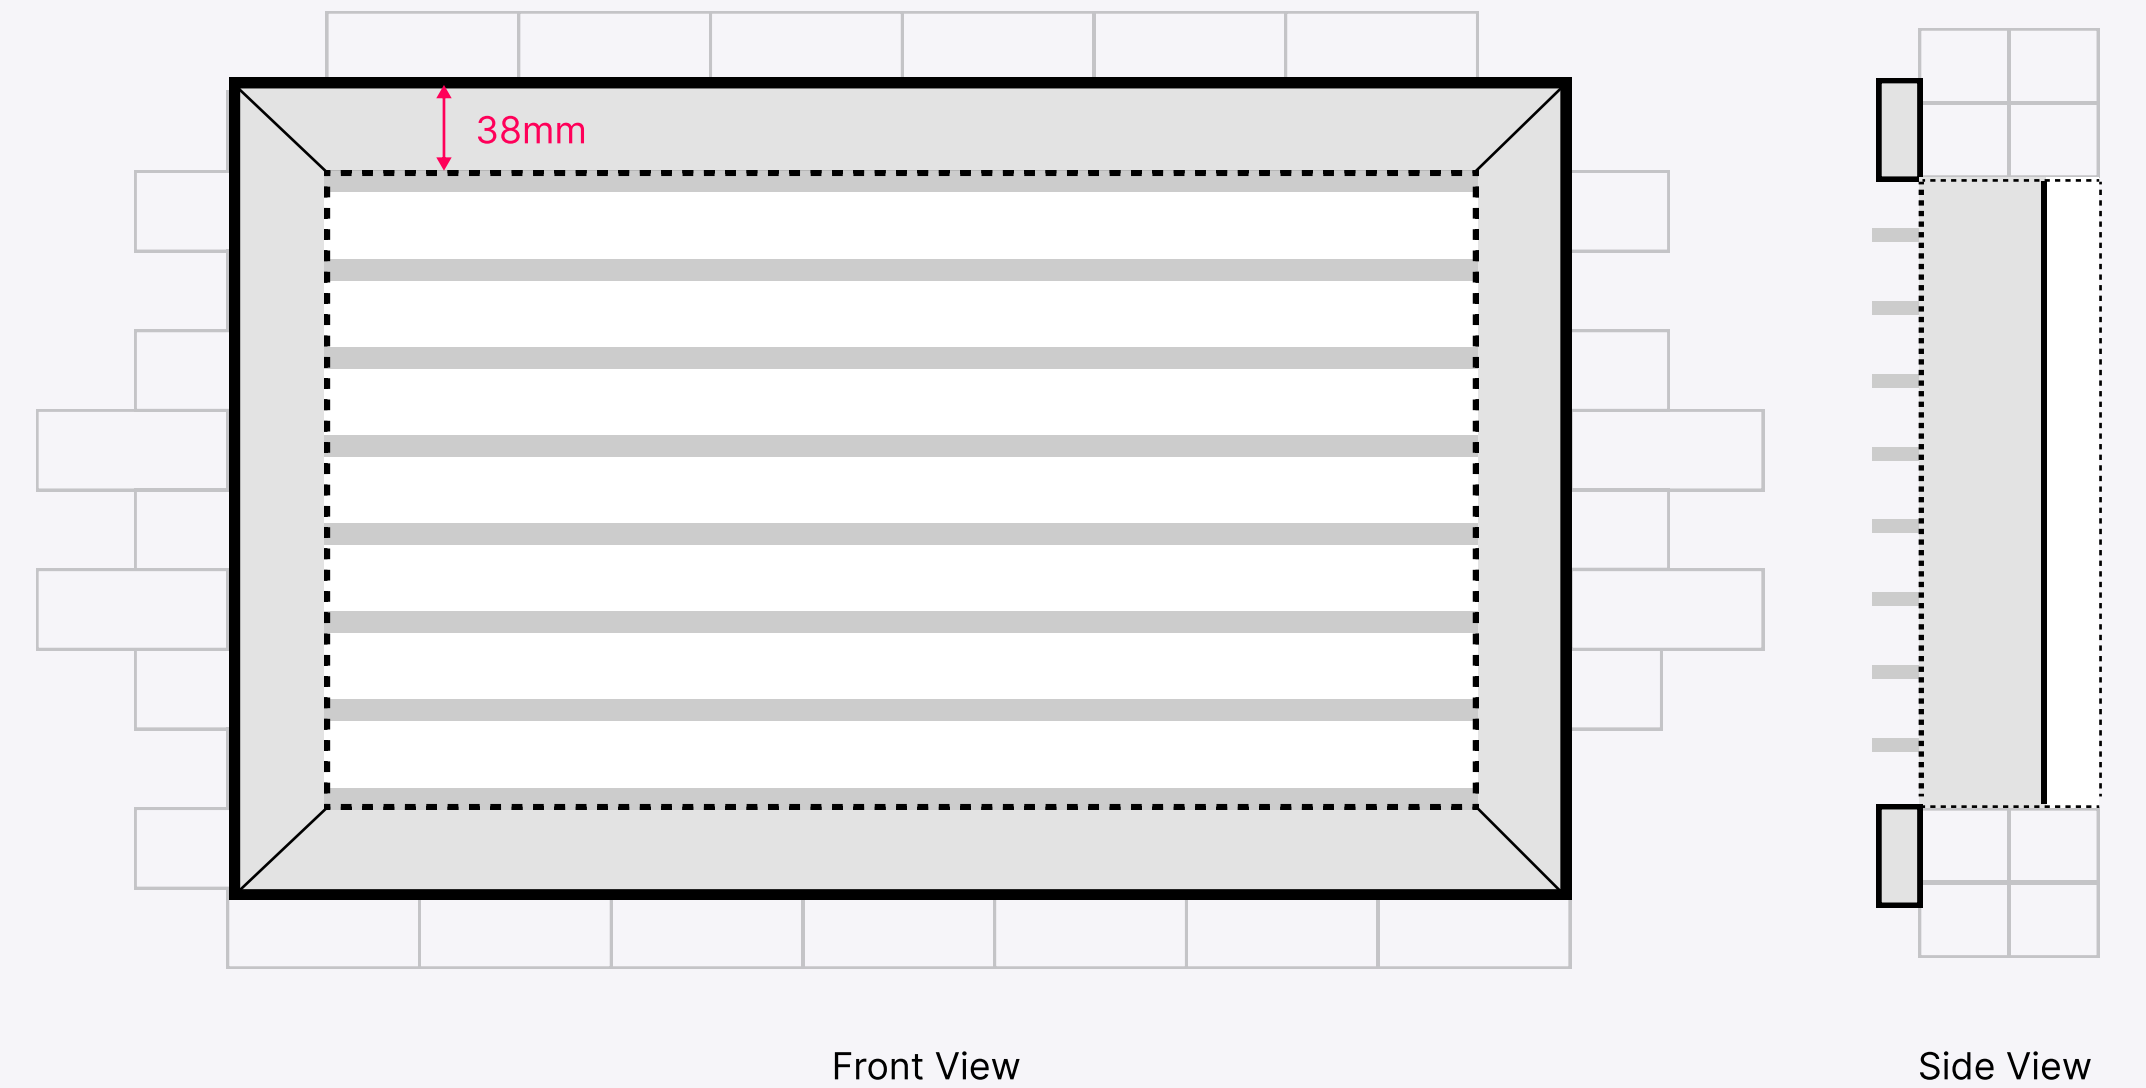

2

PRODUCTION OF THE LOUVRE

In production, we will then add the extra flange of the louvre to fit comfortably within the hole. Usually this is 38mm all the way round, but can go up to 1000mm