


Installation Instructions for the Dodge No-Drill Clips in the Dodge Bumper Left Side of License Plate



1. Remove the factory connector by depressing the spring clips on both sides of the OEM connector behind the bracket, and then pulling the connector out of the hole. Next disconnect the plug from the harness by sliding the tab lock back then pressing the tab and pulling them apart.

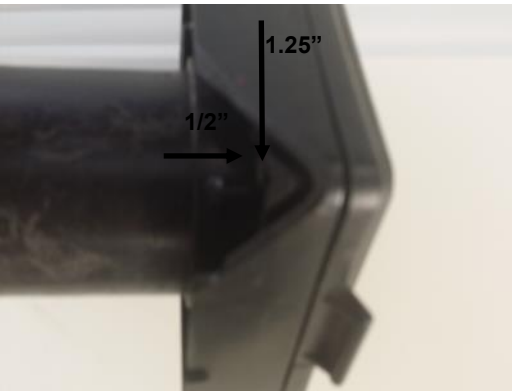

2. Cut the S7-06 connector as shown with a saw or grinder to allow socket to fit in corner.

3. Insert the smaller clip with the rounded edges into the large round hole the legs up as shown in the photo. Place the 2 plastic pieces on the legs.



4. Next insert the top clip tee into the top of the hole as shown in the photo and insert the legs into the plastic pieces on the bottom clip and squeeze the clips together until the legs of the clips touch inside the plastic tubing.

5. Next lift the lid and insert the wood block or a quarter between the lid and the index tab to hold the door open while the screws are inserted. Place the foam pieces between the back of the clips and the face of the opening to hold the clips closer to the socket to ease screw insertion. Push the new plug into the hole and adjust the clips so that they fit into the back of the socket and the screws will align.

6. Insert and start each screw a couple turns only, until all are started. Sometimes an awl can help align the holes. Be careful to not cross thread the screws, they should turn fairly easily if properly aligned.



7. Moderately tighten the screws ensuring that the plug is aligned. Insert the black plastic filler, resting it on the top clip in the recessed space. Then tighten all screws.

8. Test the installation integrity by inserting and pulling out a male plug several times. Check to ensure that the connector is tight.

9. Plug the harness into the back of the new plug until it latches.

