

# Configurations


With only one kit provided, Vego modular raised bed is able to assemble into 4 different configurations to fit any backyard space. From the classic  $3'5'' \times 3'5''$  to the long  $5' \times 2'$ , or the suqare  $2' \times 2'$ , you can always find one you like.

Note: Due to manufacturing process raised bed sizing may vary +/- 2 inches



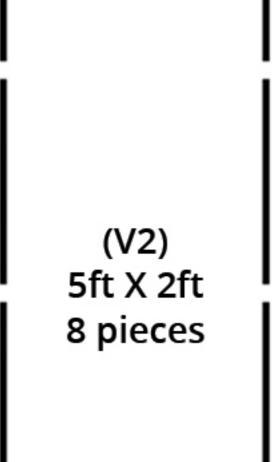

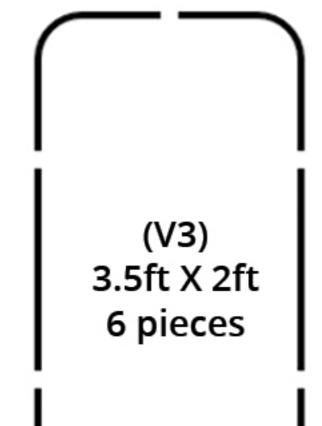

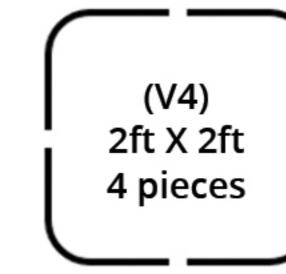

#### Dimensions

Configuration	Length (ft)	Width (ft)	Height (in)	Cubic Feet	Cubic Yards
V1	3.5	3.5	17	17	0.6
V2	5	2	17	14	0.5
V3	3.5	2	17	10	0.4
V4	2	2	17	6	0.2

### Contact Us



+1 (628) 220-8868



hello@vegogarden.com




www.vegogarden.com




Houston, TX 77023



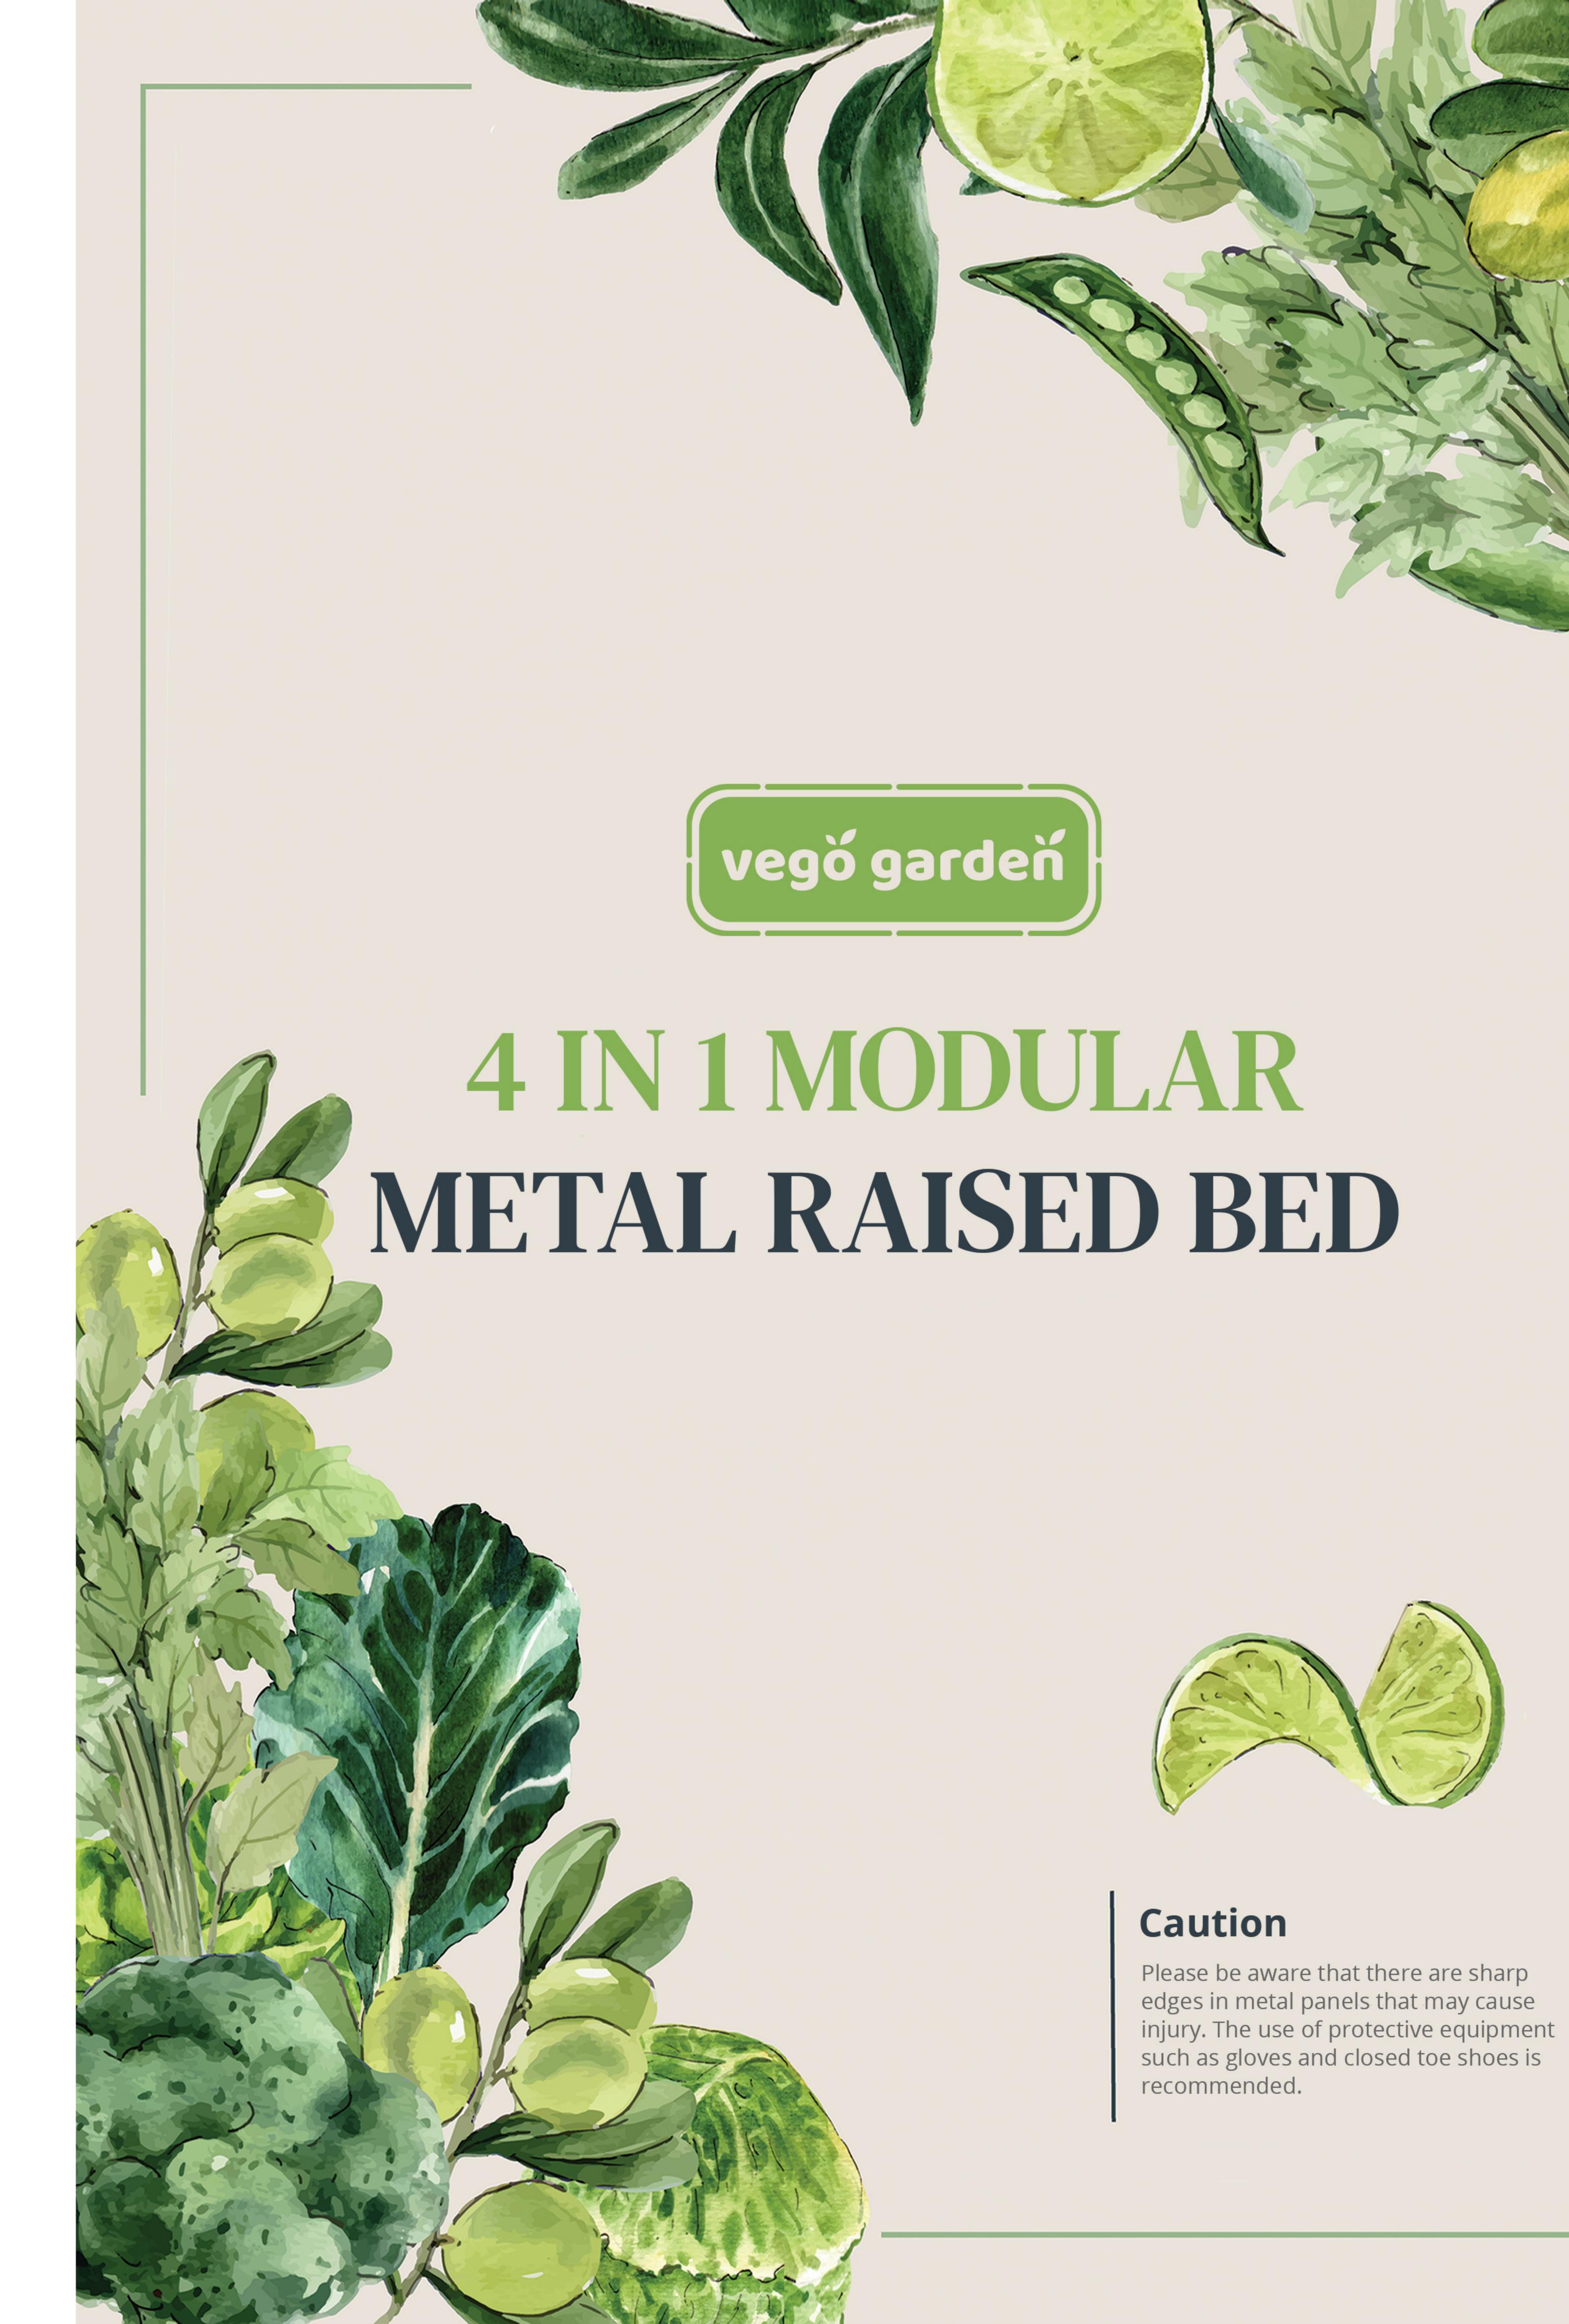


## Packing List

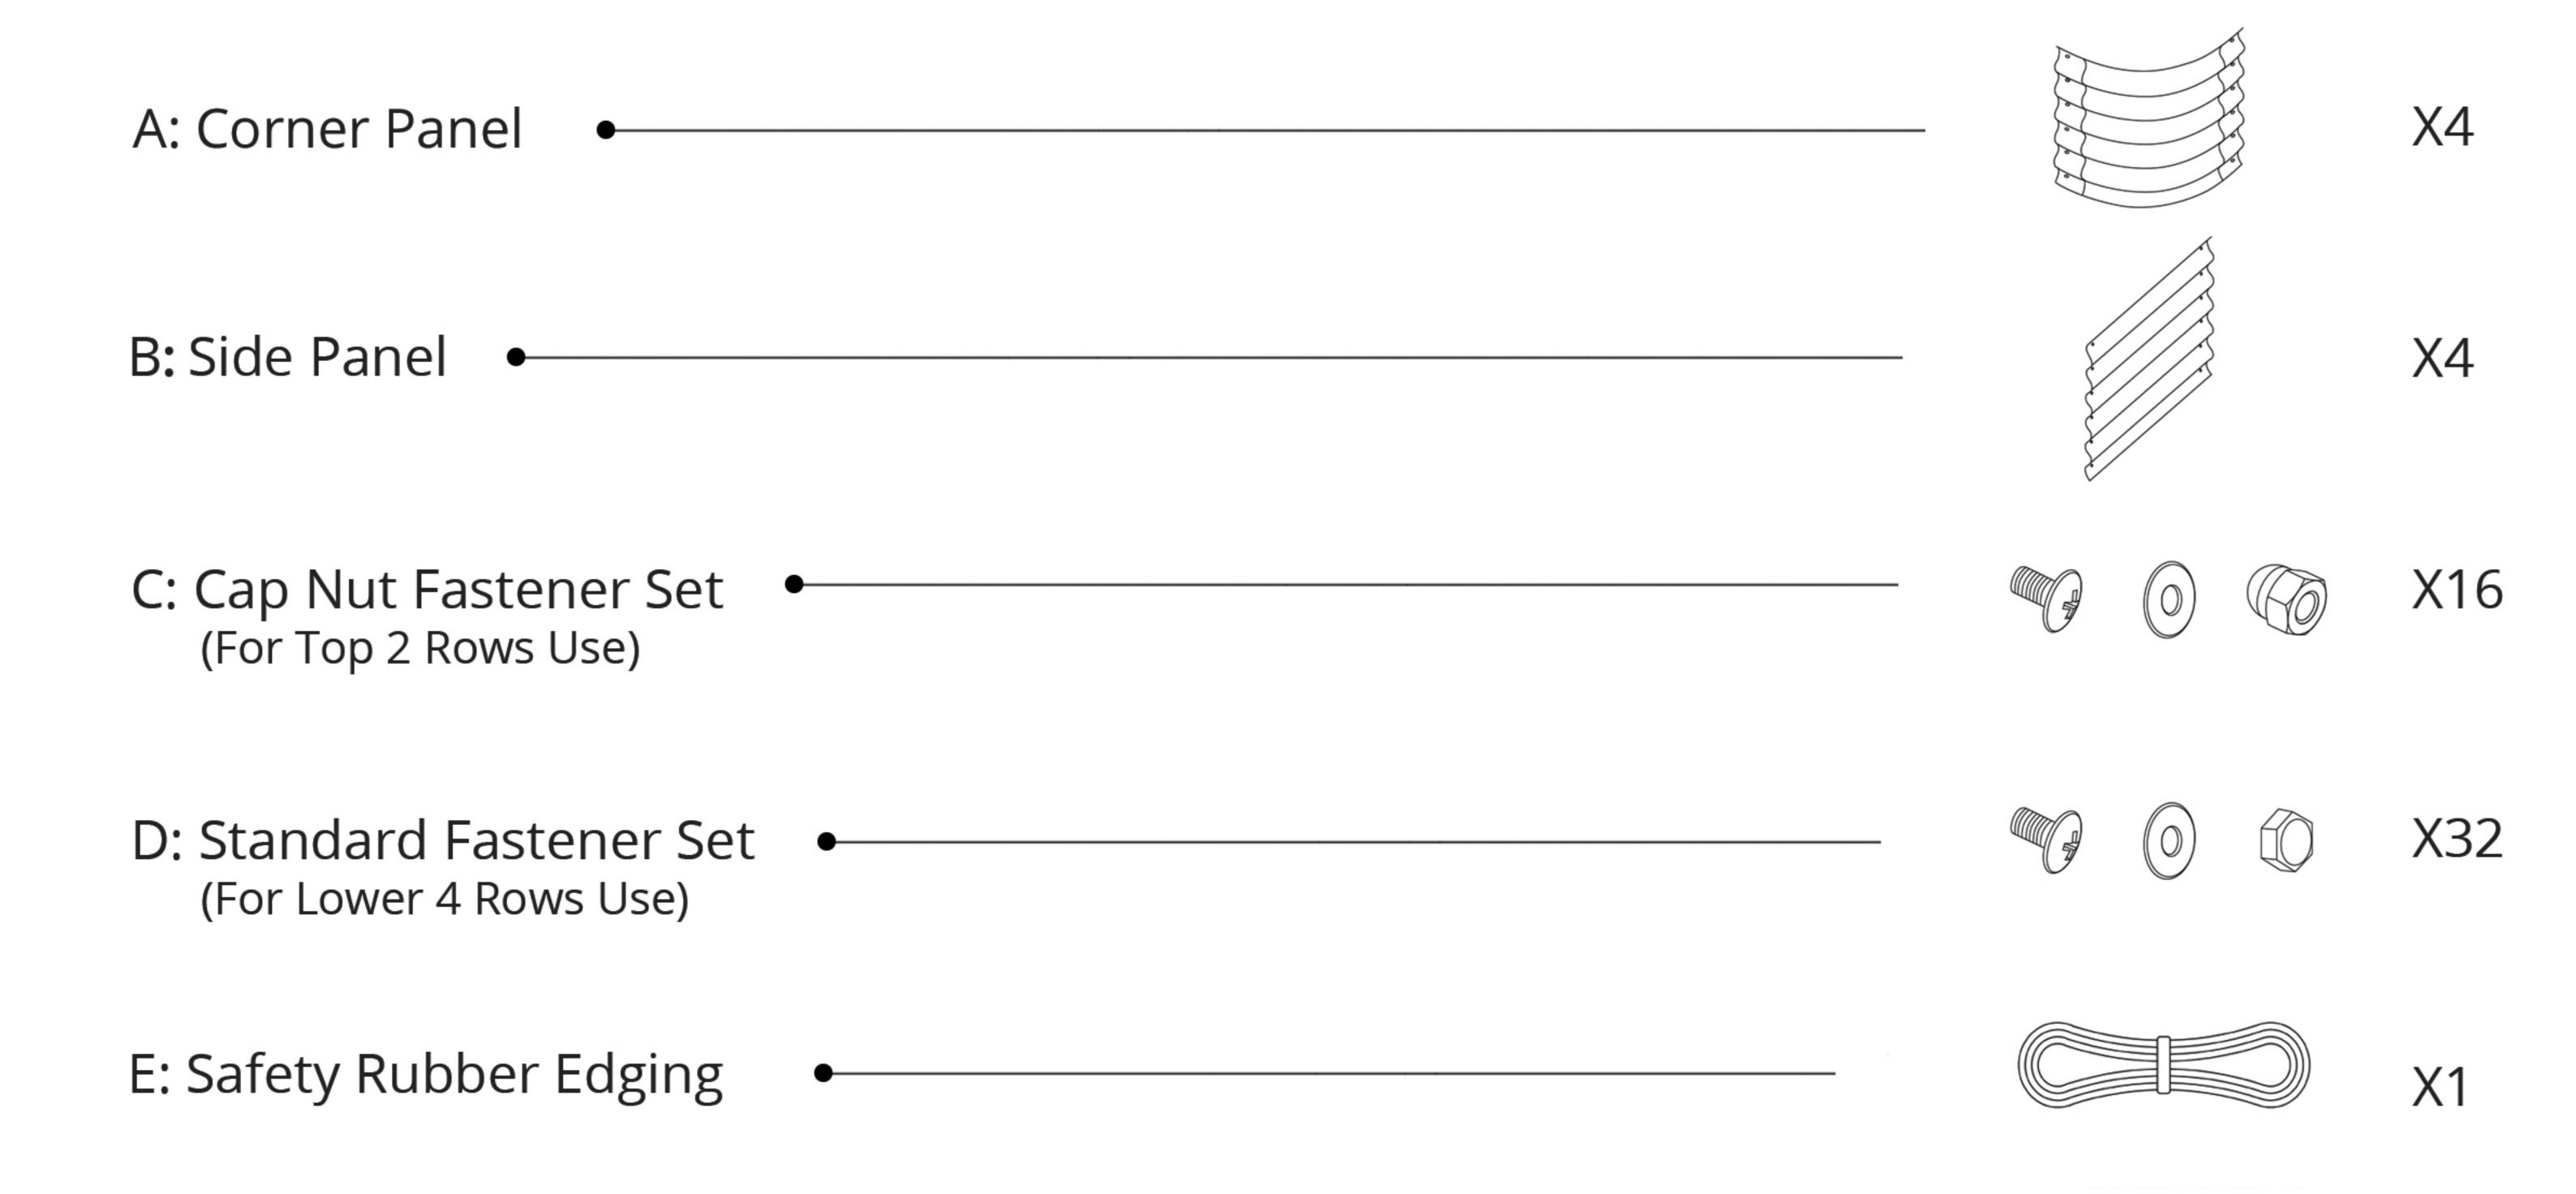

#### Follow Us On Social Media




@vegogarden

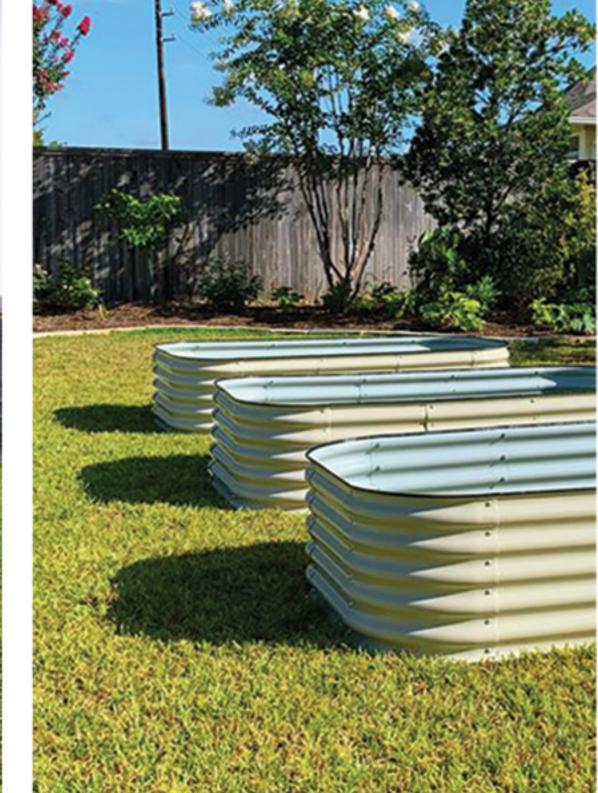

©vego\_garden



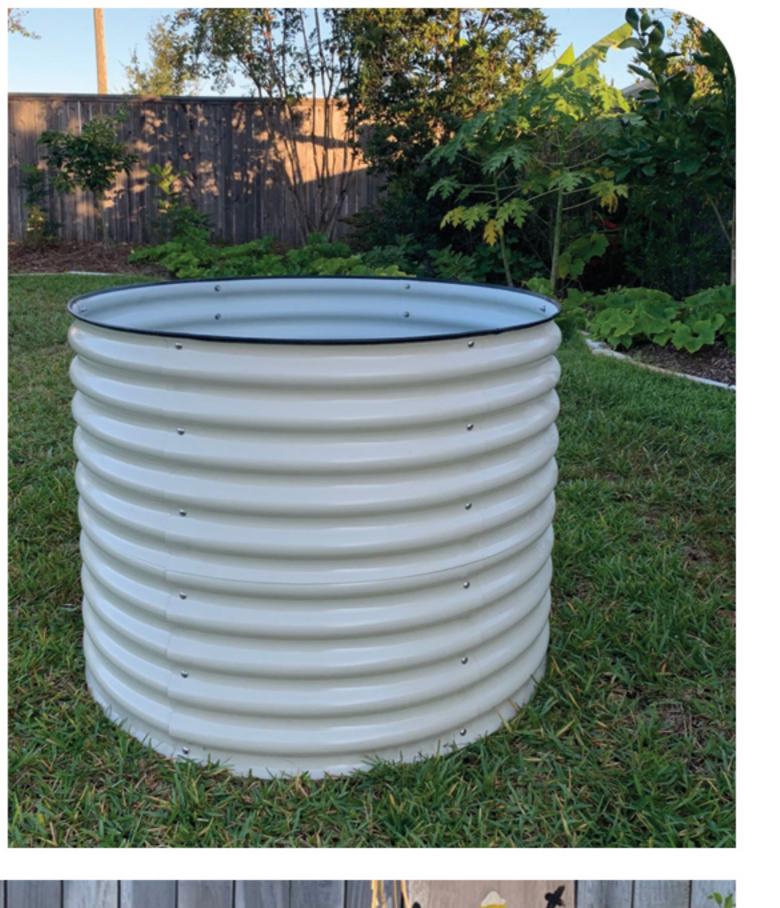


#vegogarden / #raisedbedgardening / #metalgardenbed









## Assembly Guide

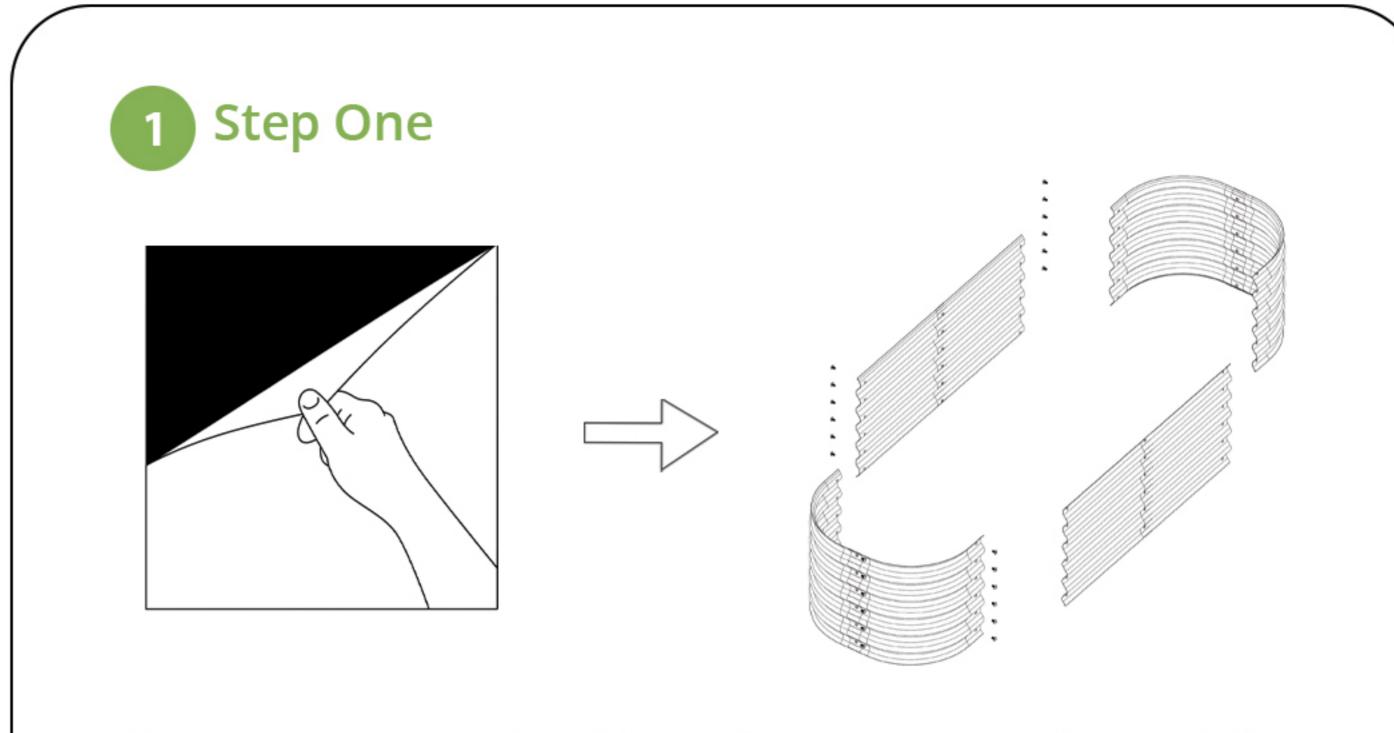


Remove protective films from all panels, and lay panels on a flat surface according to the chosen configuration.

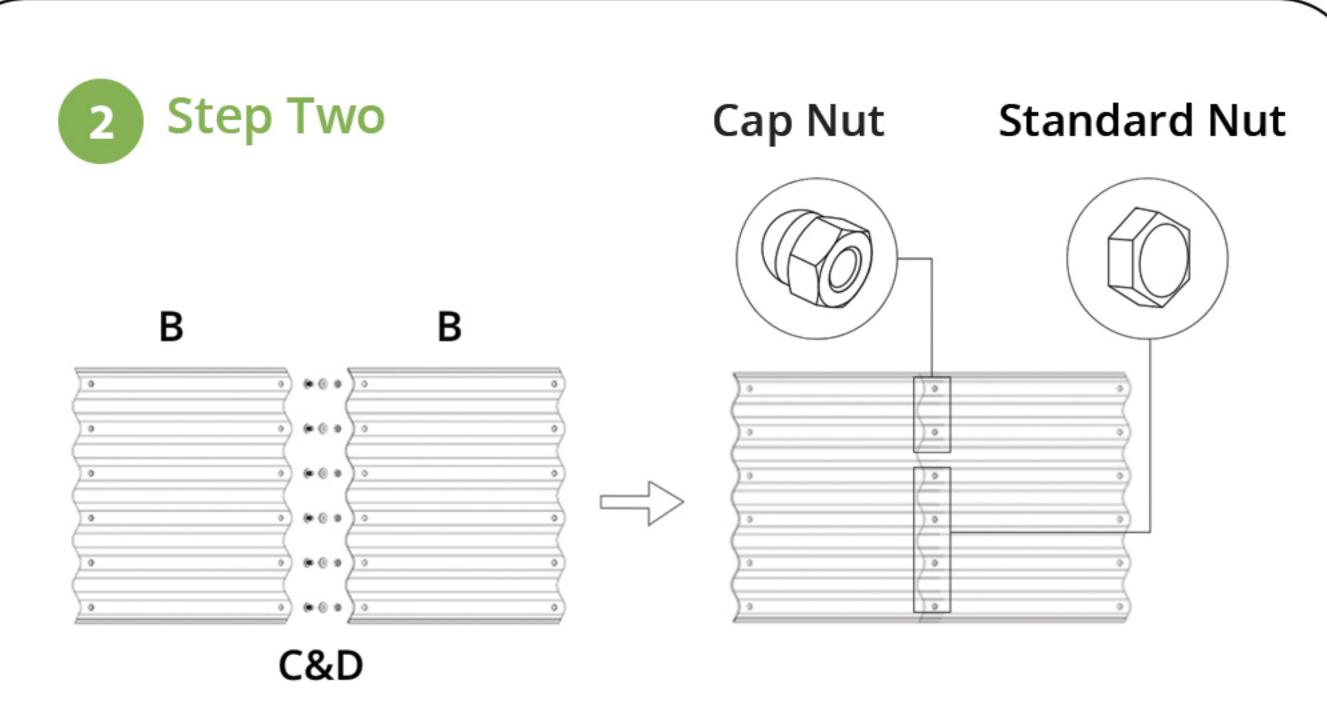


Cap nuts are used for top two rows, standard nuts are used for lower 4 rows. Assemble all straight panels: initially attach all bolts, washers and nuts loosely, and then tighten up using the wrench tool (as supplied) with a screwdriver/cordless drill.

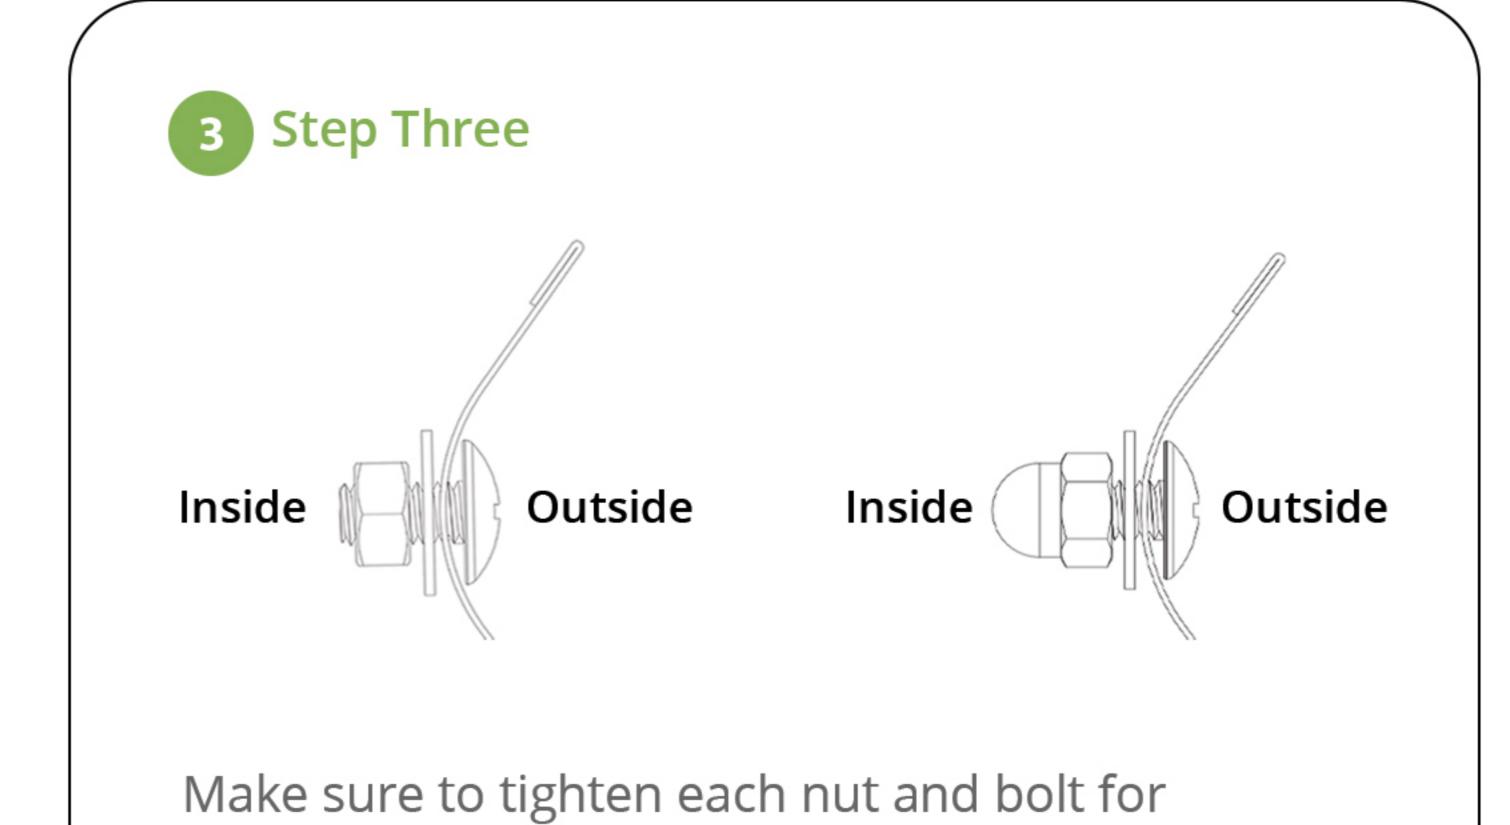


reinforcement of garden raised bed.

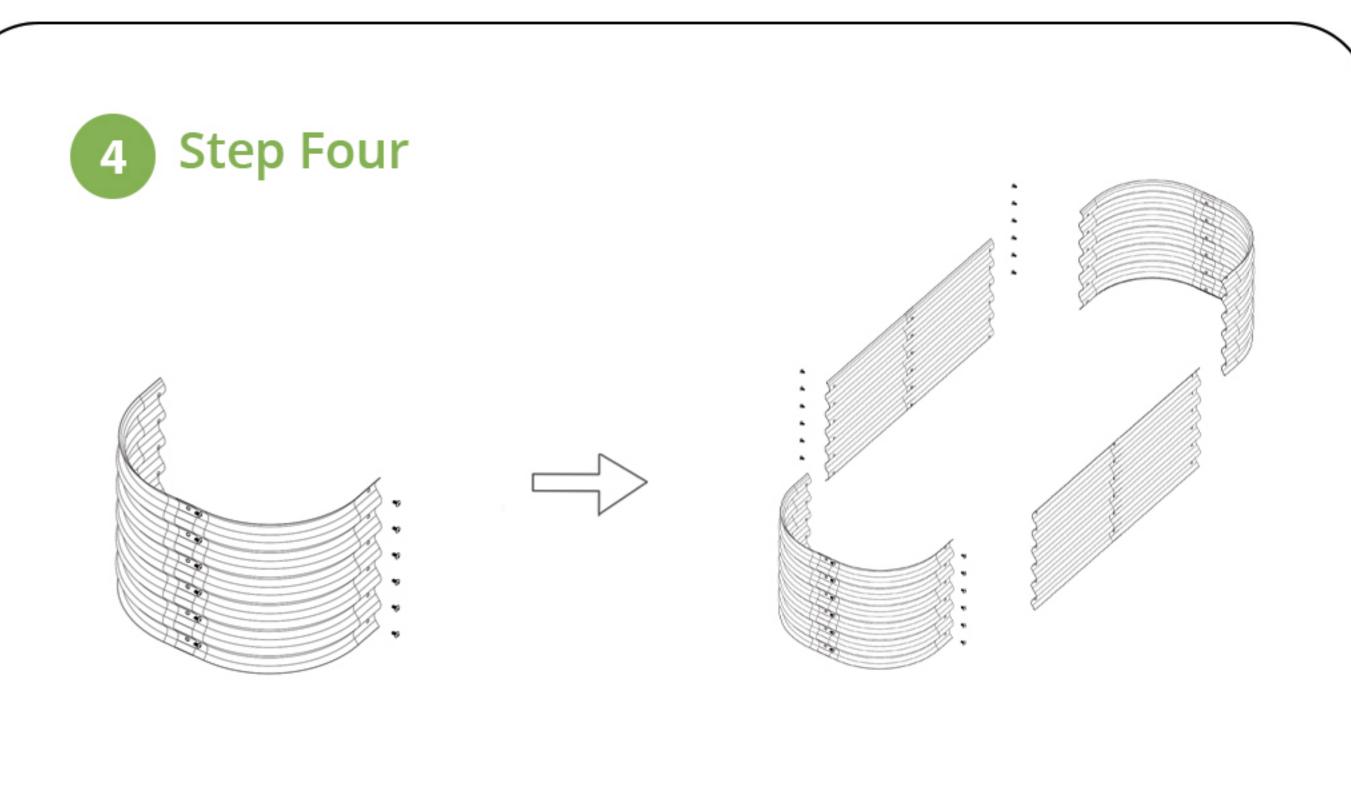

After straight panels are assembled, attach corner panels with straight panels using the same method. Make sure corner panels are attached outside of the straight panels.

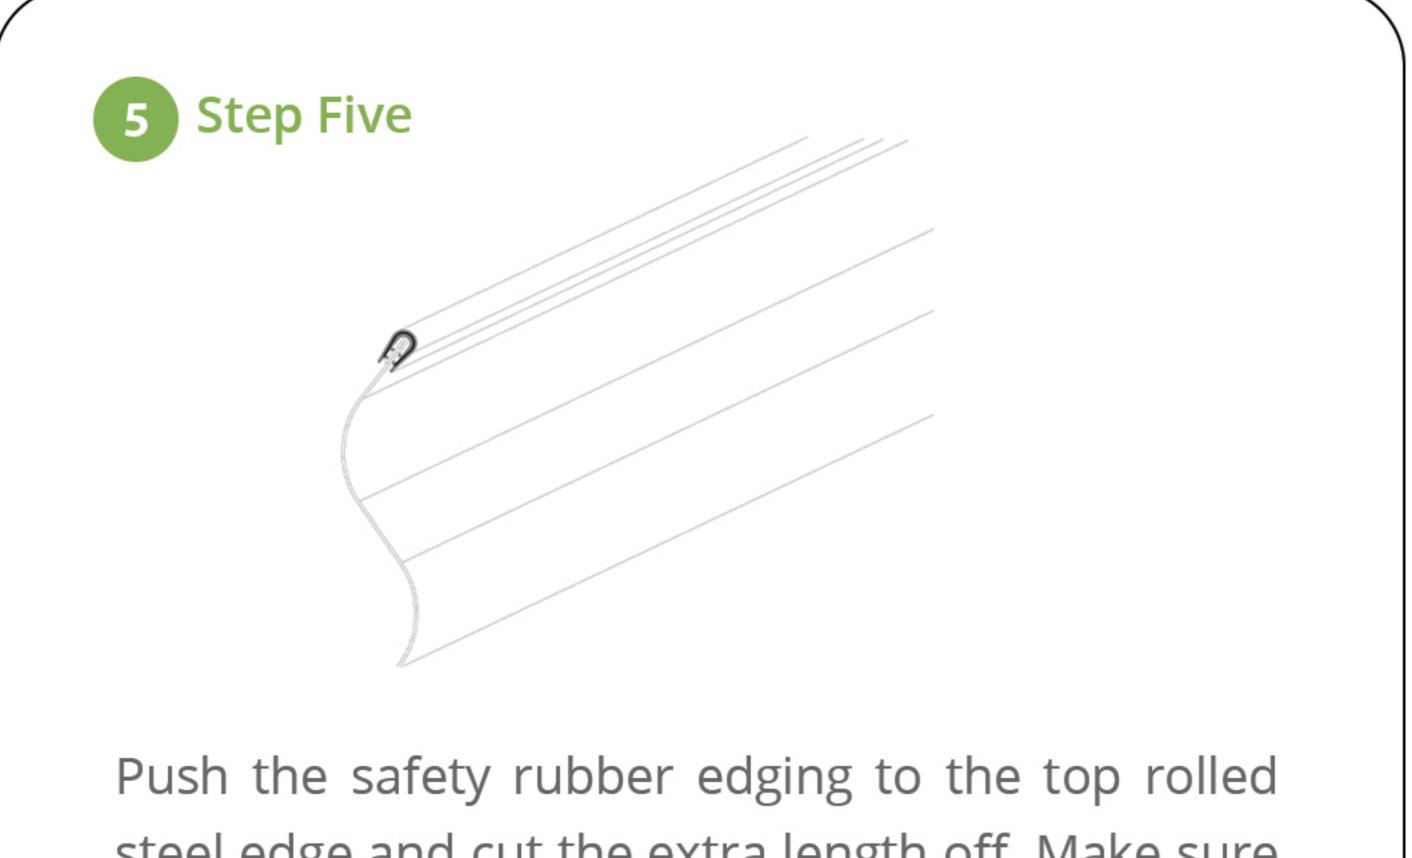

steel edge and cut the extra length off. Make sure edging is attached securely.

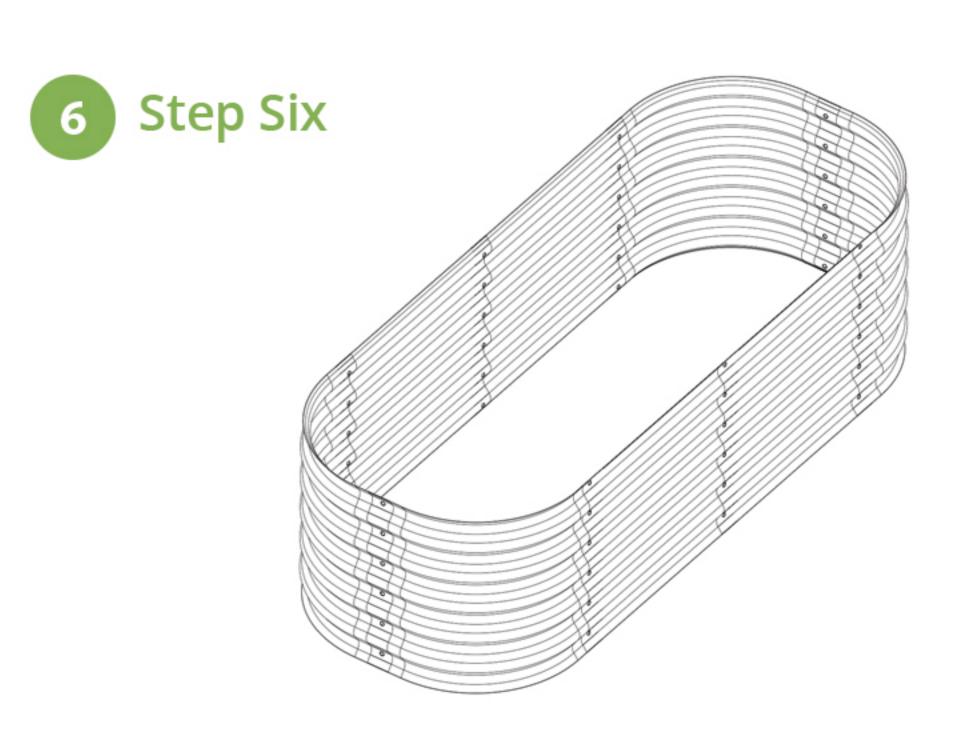

Congratulations on completing the assembly! We are sure there are more configurations that you can do with your great imagination!