


## Configurations

With only one kit provided, Vego modular raised bed is able to assemble into 6 different configurations to fit any backyard space. From the classic 5'x 3.5" to the long 6'5" x 2', or the jumbo square 3'5" by 3'5", you can always find one you like.

Note: Due to manufacturing process raised bed sizing may vary +/- 2 inches

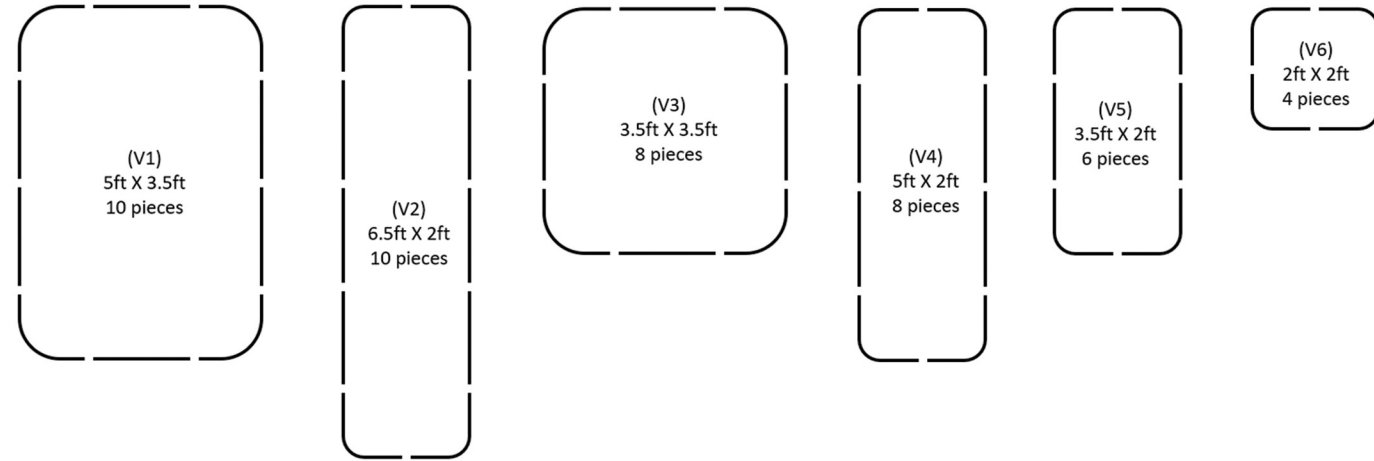

## Dimensions

Configuration	Length (ft)	Width (ft)	Height (in)	Cubic Feet	Cubic Yards
V1	5	3.5	32	47	1.7
V2	6.5	2	32	35	1.3
V3	3.5	3.5	32	33	1.2
V4	5	2	32	27	1.0
V5	3.5	2	32	19	0.7
V6	2	2	32	11	0.4

## Contact Us

- +1 (628) 220-8868
- hello@vegogarden.com
- www.vegogarden.com
- Houston, TX 77023



vegō garden

# EXTRA TALL 6 IN 1 MODULAR METAL RAISED BED






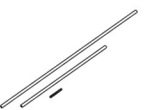


### Caution

Please be aware that there are sharp edges in metal panels that may cause injury. The use of protective equipment such as gloves and closed toe shoes is recommended.

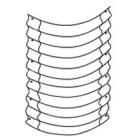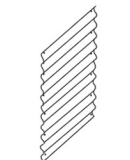


# Packing List

- A: Corner Panel  X4
- B: Side Panel  X6
- C: Cap Nut Fastener Set (For Top 2 Rows Use)  X20
- D: Standard Fastener Set (For Lower 4 Rows Use)  X40
- E: Safety Rubber Edging  X1
- F: Bracing Rod (Rod A & Rod B)  X2

# Bracing Rod Installation Guide


## 1 Vego Garden Rods

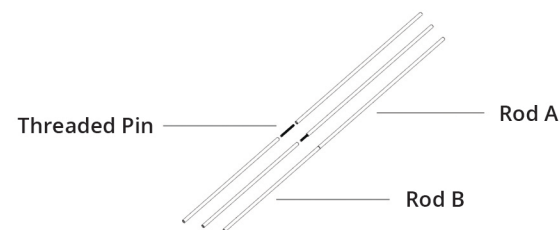

Vego Garden bracing rods are used to reinforce the strength of oversized raised beds. For 2ft wide raised bed: use Rod A only; For 3.5ft wide raised bed: use the threaded pin to assemble Rod A & Rod B.

Note: bolt and washer used for rod installation are the same ones provided in the raised bed kit.


## 2 Rods Installation

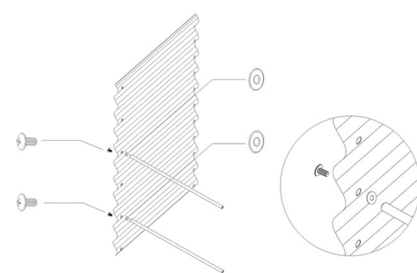

Install bracing rod between the two parallel bolt holes. Attach bolt, panel, washer & rod loosely, connecting rods, then tighten them up by screwdriver for reinforcement of raised bed.

(1) For the 3.5ft wide configuration, the rods are connected at the **third and fifth** bolt holes from the top.  
 (2) For 2ft wide configuration, the rods are connected at the **fifth** bolt hole from the top.

## 3 Assemble Picture

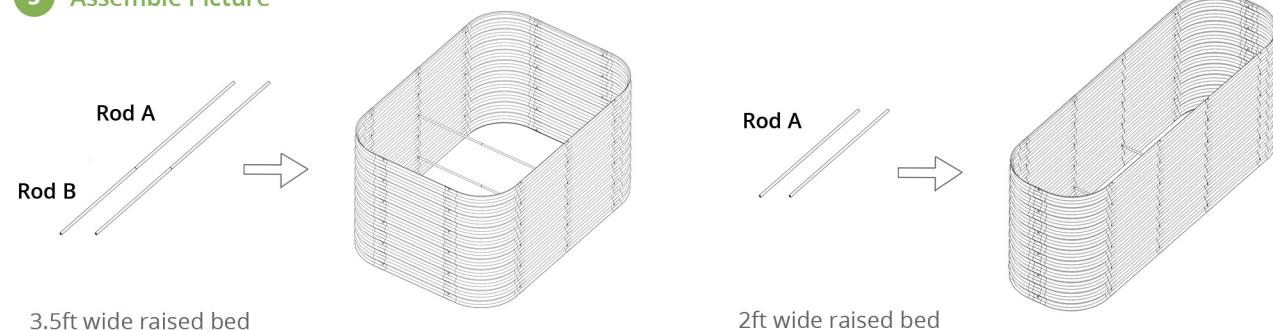


3.5ft wide raised bed

2ft wide raised bed


# Assembly Guide

## 1 Step One

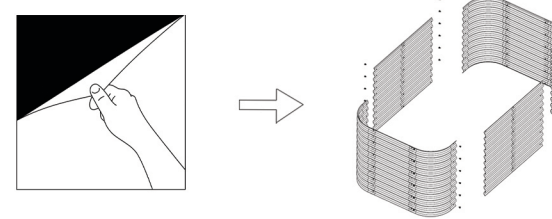


Remove protective films from all panels, and lay panels on a flat surface according to the chosen configuration.

## 2 Step Two

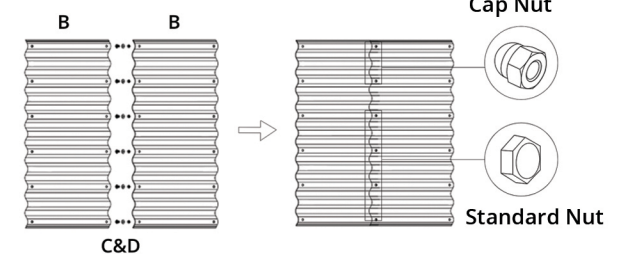


Cap nuts are used for top two rows, standard nuts are used for lower 4 rows. Assemble all straight panels: initially attach all bolts, washers and nuts loosely, and then tighten up using the wrench tool (as supplied) with a screwdriver/cordless drill.

## 3 Step Three

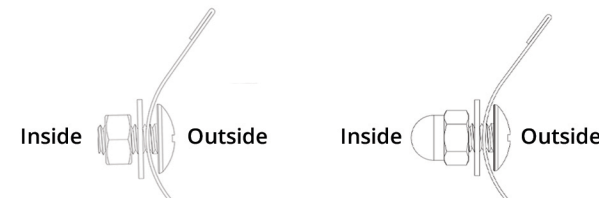

Make sure to tighten each nut and bolt for reinforcement of garden raised bed.

## 4 Step Four

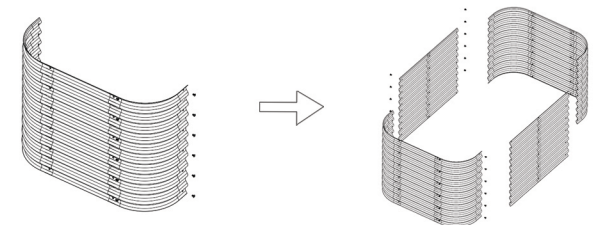


After straight panels are assembled, attach corner panels with straight panels using the same method. Make sure corner panels are attached outside of the straight panels.

## 5 Step Five



Push the safety rubber edging to the top rolled steel edge and cut the extra length off. Make sure edging is attached securely.

## 6 Step Six

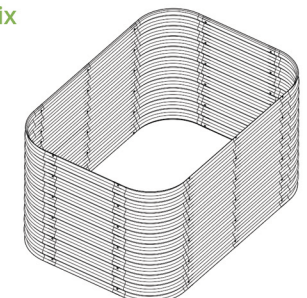

Congratulations on completing the assembly! We are sure there are more configurations that you can do with your great imagination!