


1: Glue the mooring gear onto the top piece of the landing craft.

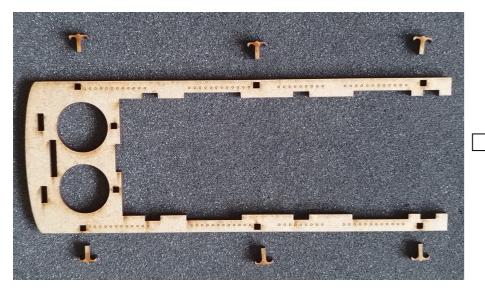





2: Glue together shown pieces for the bow visor.

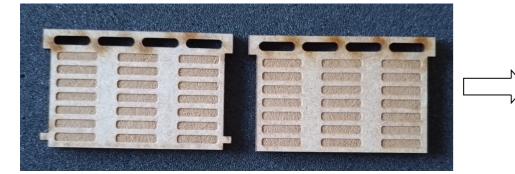


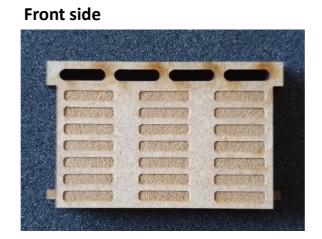

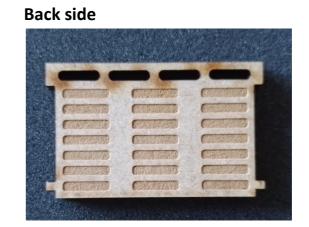


3: Glue shown pieses onto sides of the landing craft, covering the holes for the bow visor taps.

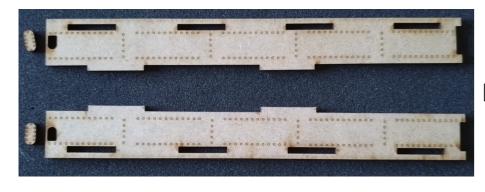

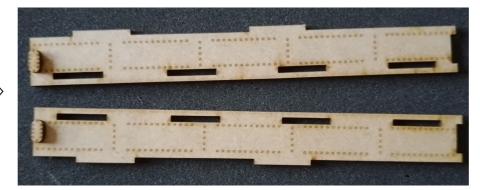

4: Glue together shown pieces for the two 30 Cal. Guns.

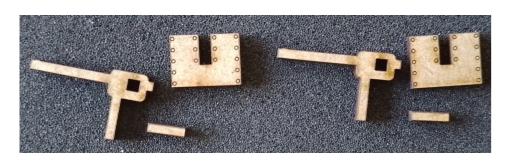






5: Glue together shown pieces (sandwich).









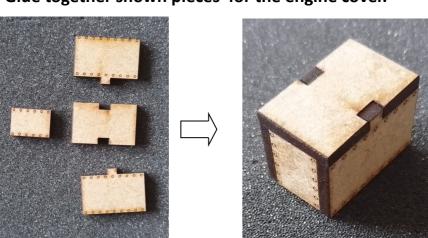


6: Glue together shown pieces for the Coxwains steering position.

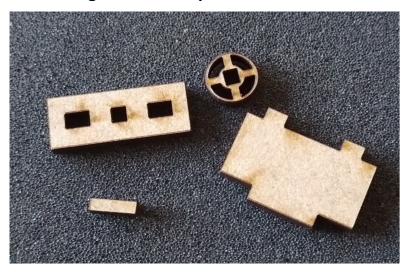

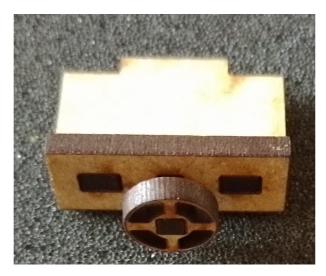

8: Glue together shown pieces for the ship frame. The taps on the bow visor goes into the holes in the front of the sides. Place the bow visor with the taps facing inwards. (Green circles) DO NOT glue the bow visor.

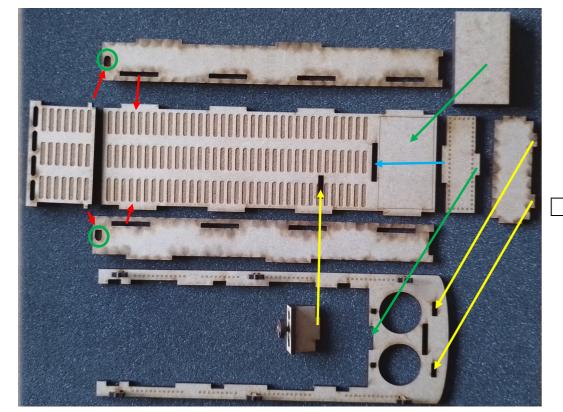



9: Glue last pieces onto the ship frame.



