




Assembly Instructions for "Middle Eastern House with Courtyard"




1: Glue windows onto wall pieces. Also glue piece A into wall piece B (Yellow circle). Make sure piece A is centered in wall.

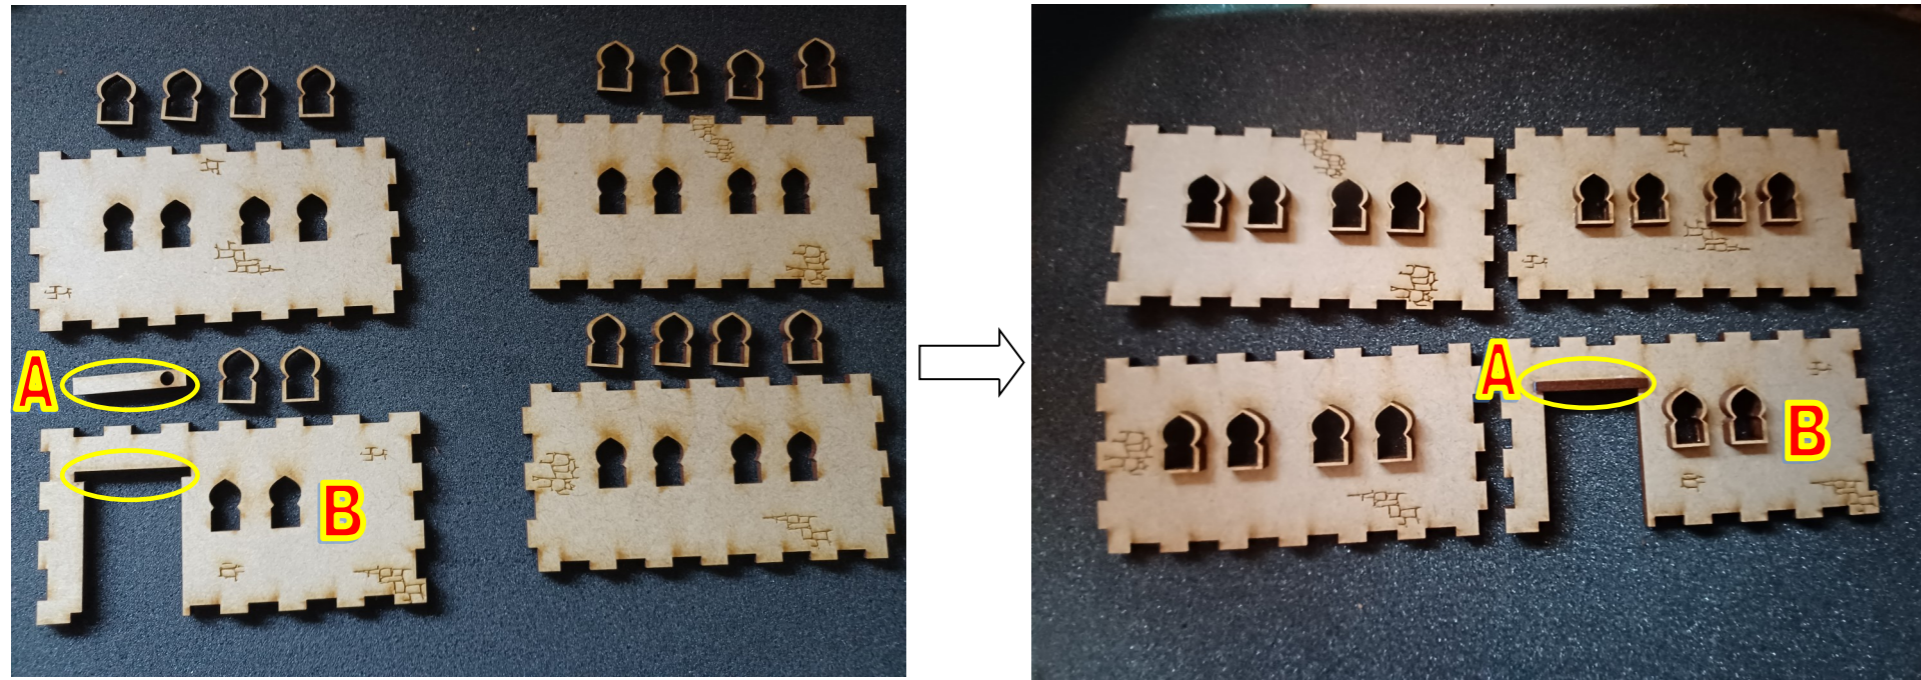

3: Glue together shown pieces for the courtyard walls. (Sandwich)

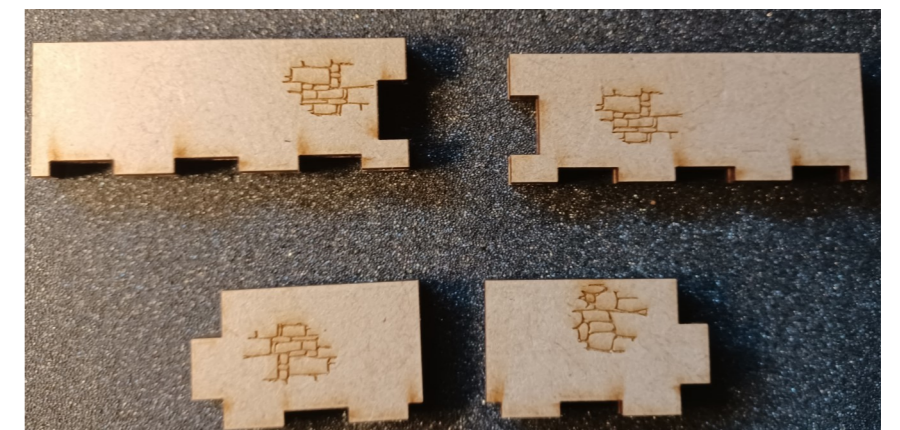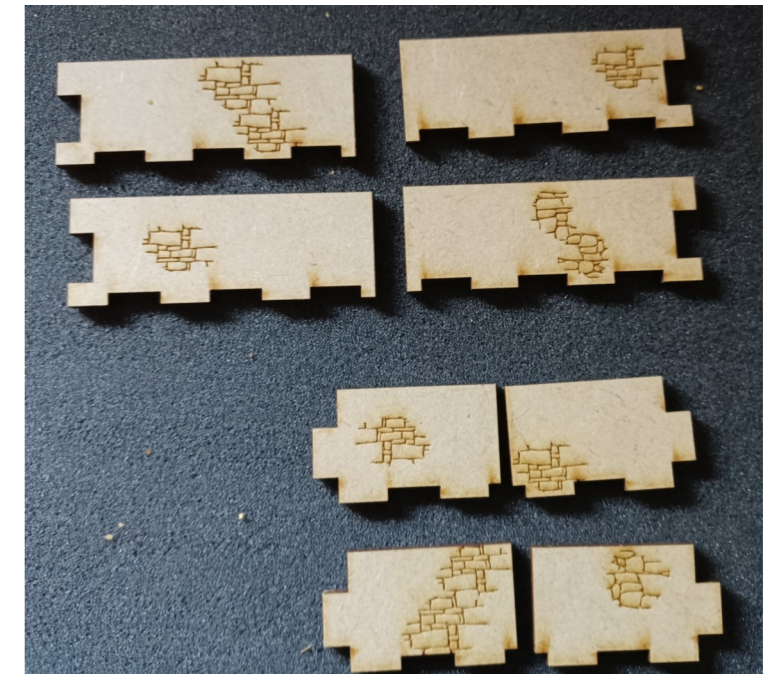


2: Glue together shown pieces for the door.

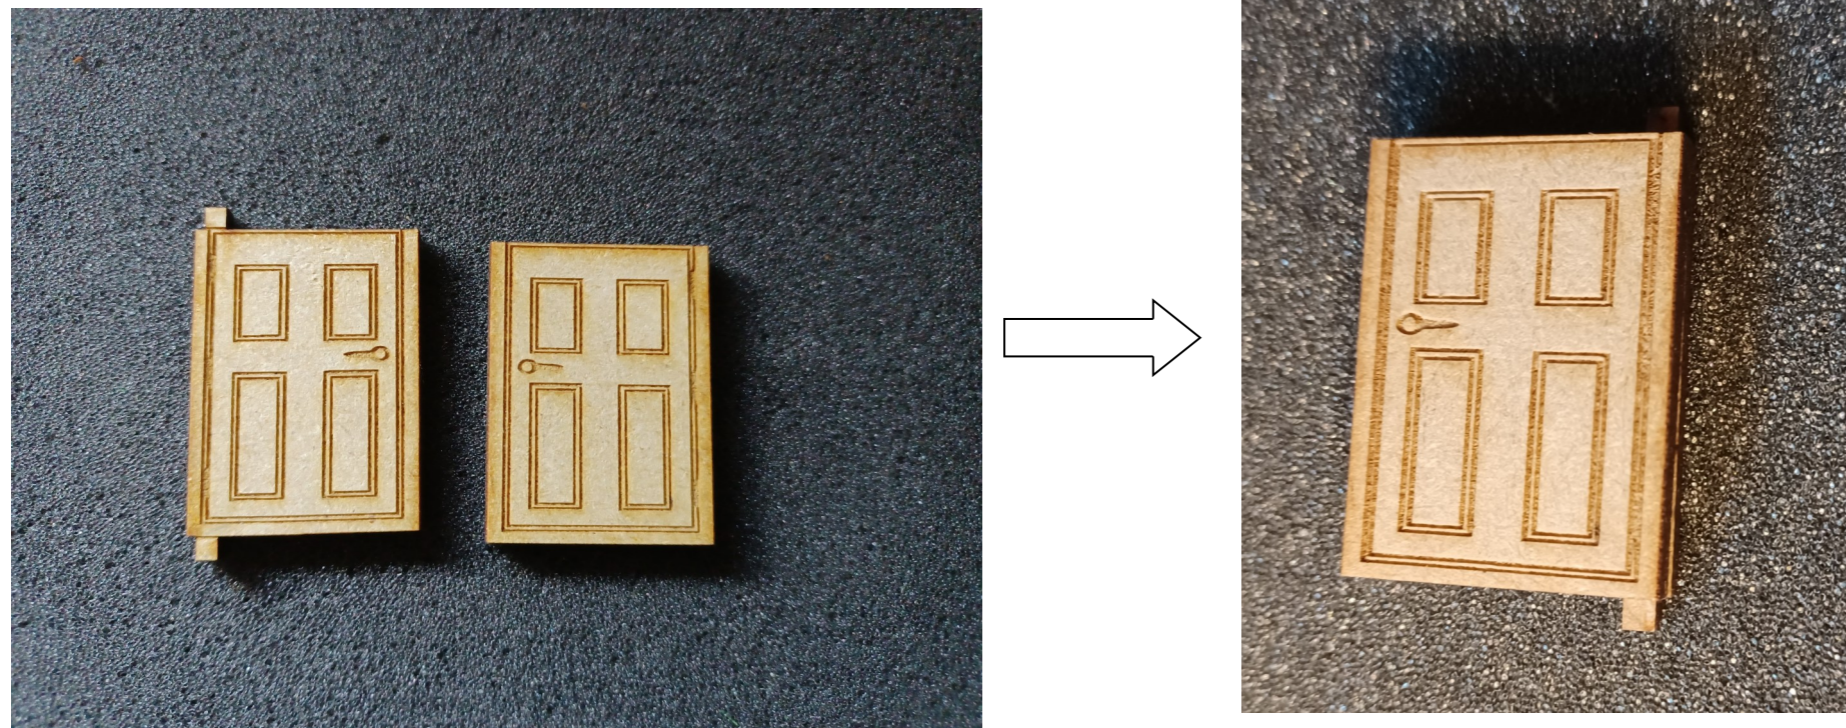


Assembly Instructions for "Middle Eastern House with Courtyard"



4: Glue together shown pieces for the roof.

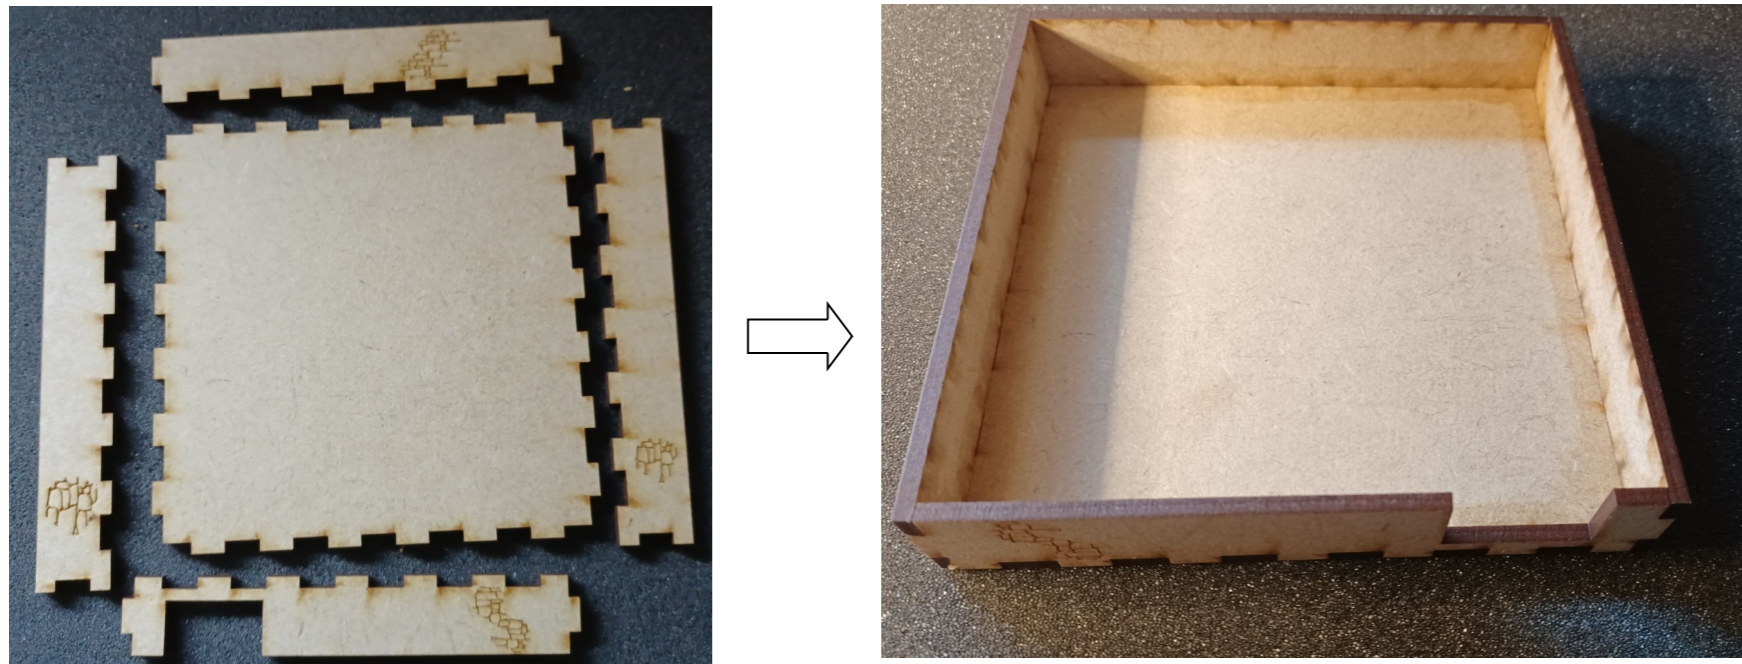


5: Glue wall piece B (with added door) onto the ground floor. The taps on the door goes into the holes (Yellow circles.) Do NOT glue door.

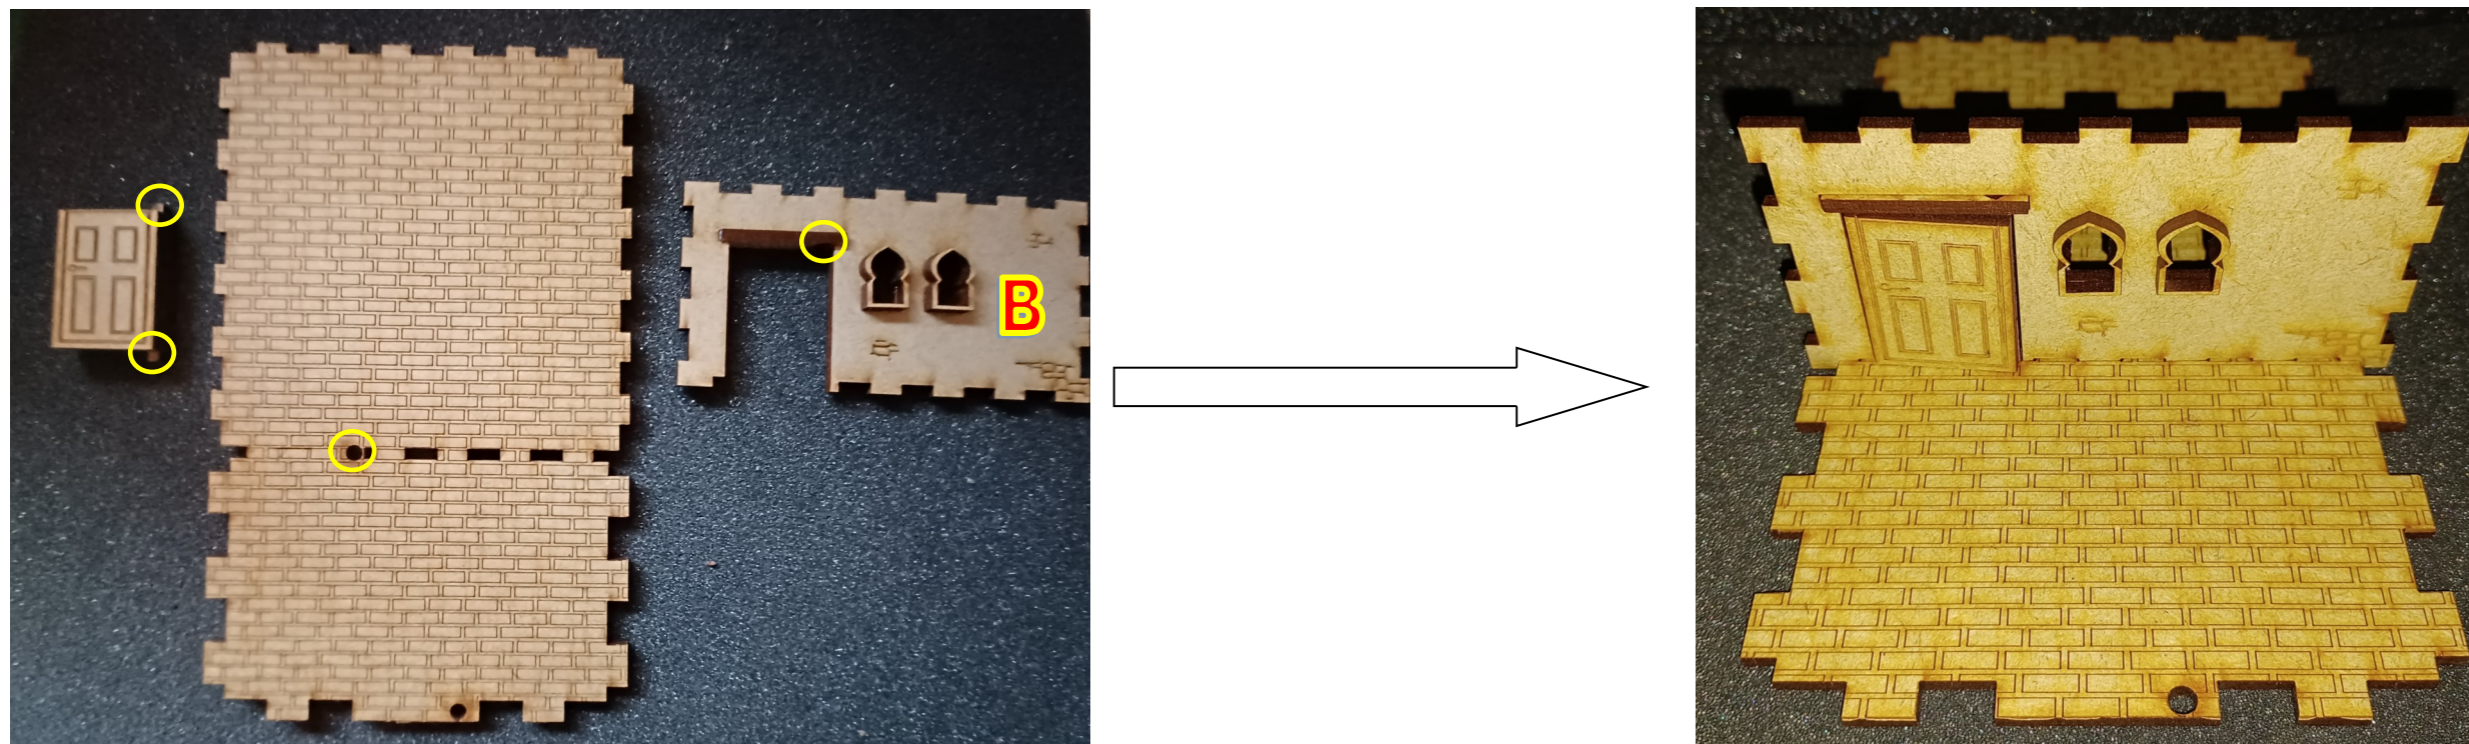


Assembly Instructions for "Middle Eastern House with Courtyard"



6: Glue the rest of the wall pieces onto the groundfloor. Glue top (C) onto top of wall pieces.

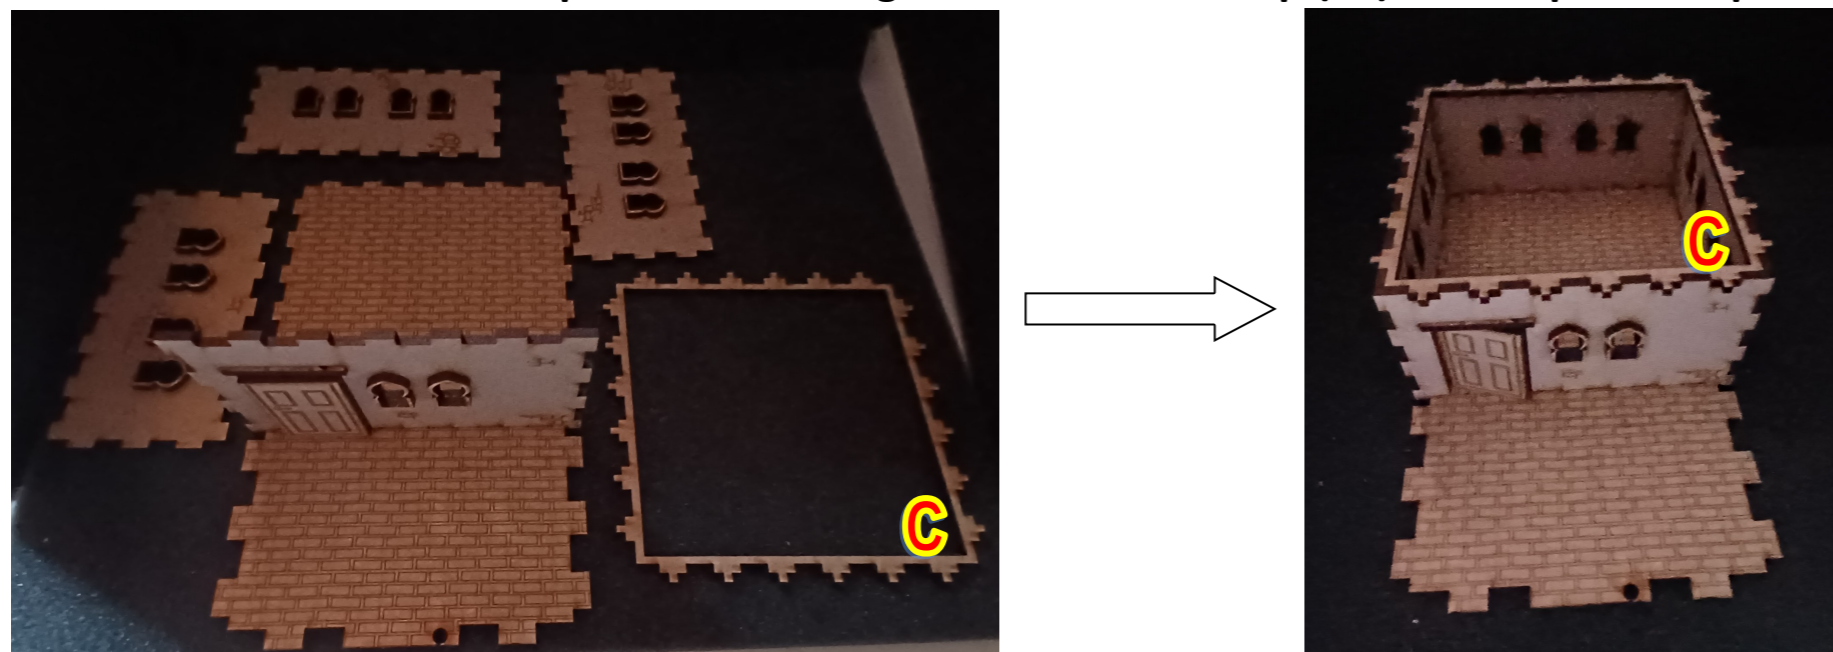


7: Glue shown pieces (walls for courtyard) onto ground floor.

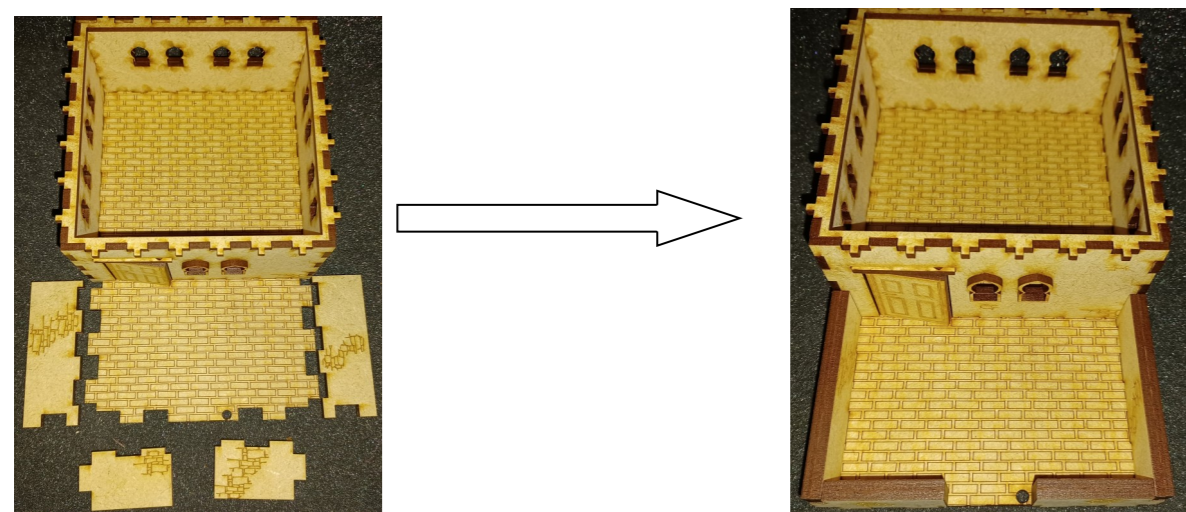


9: Glue shown piece onto courtyard wall.


The taps on the gate goes into the holes on ground floor and piece D (Yellow circles.) Do NOT glue gate. Pieces E goes on top of wall. Be careful not to accidentally glue gate (Tap and Hole), when you add piece E to cover the hole on piece D. Finally glue ladder to wall.

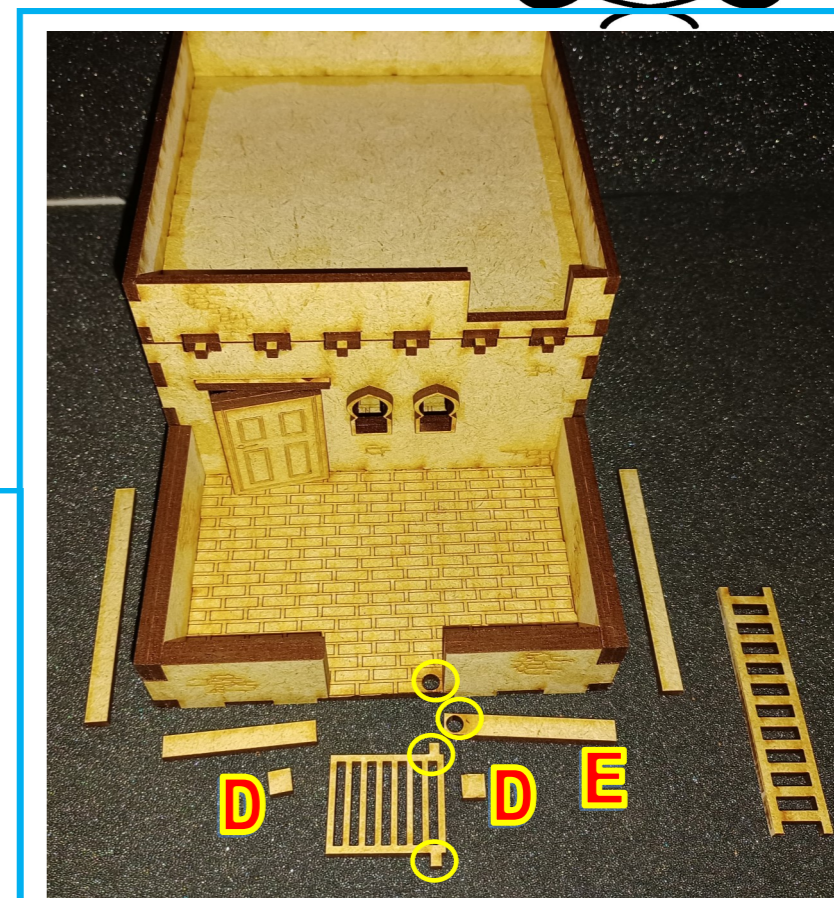


8: Glue shown piece onto bottom of the roof. Make sure piece is centered.

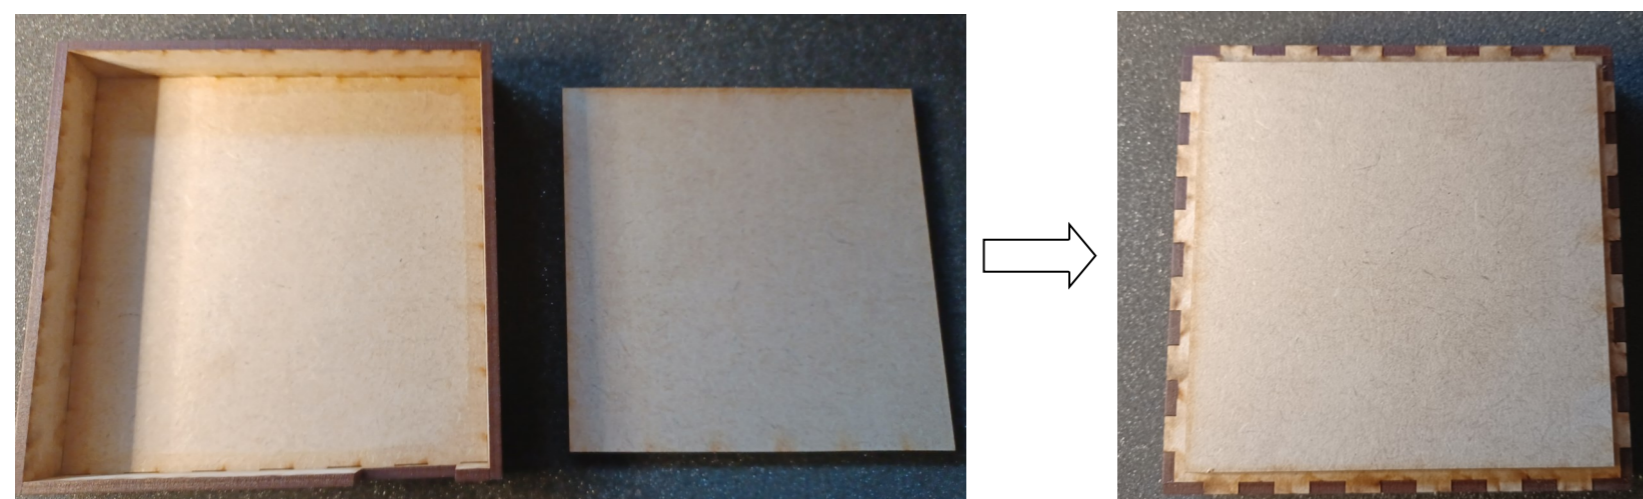

N.B. If you want to make the model as explained on the following pages. It is easier to glue on ladder after that process.

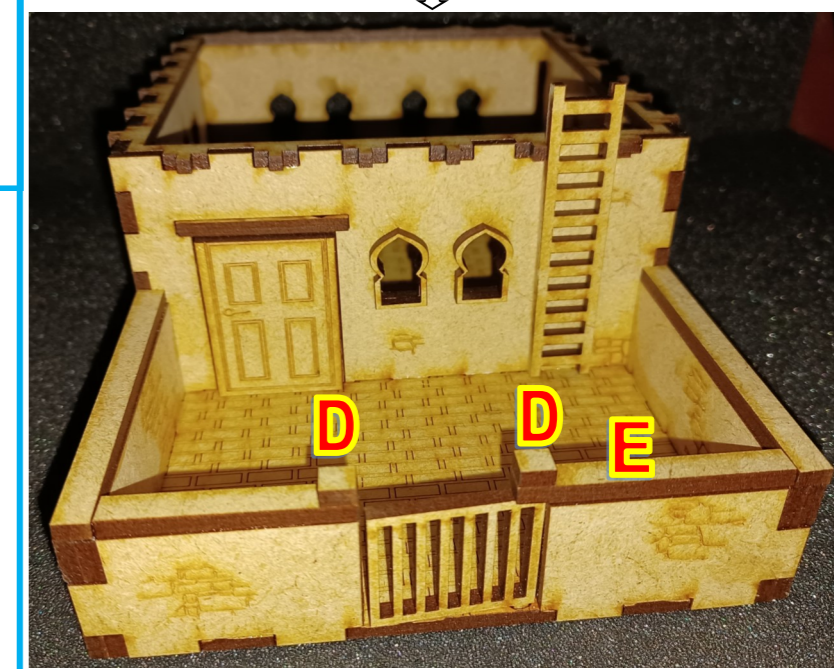

Assembly Instructions for "Middle Eastern House with Courtyard"

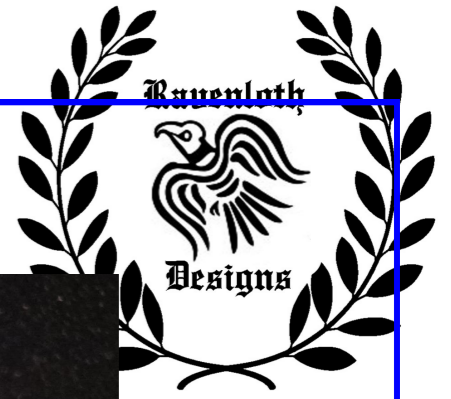

Optional: If you want the model to look even cooler, here is a suggestion.

1: Smear PVA glue onto the building, but NOT on the spots that has engravings. (Red circles).




2: Sprinkle on fine sand, and let it dry.



Assembly Instructions for "Middle Eastern House with Courtyard"



3: When dry, paint sand with white, off white or khaki. (I used The Army Painter Desert Yellow) Paint engraved spots, and stone floor on ground floor with dark grey and highlight (Drybrush) with light grey. (I used The Army Painter Uniform Grey and Vallejo Sky Grey.)

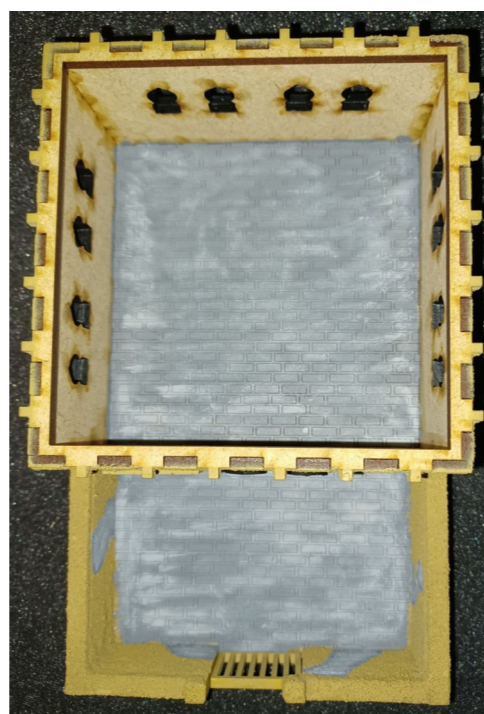

4: When the paint is dry, use wash. I used Vallejo Grey on the Desert Yellow parts and The Army Painter—Strong Tone on the grey parts and all wood parts. Paint ladder for roof and gate in a metal colour, and then add rusty colours. (Alternatively in brown



Assembly Instructions for "Middle Eastern House with Courtyard"

