

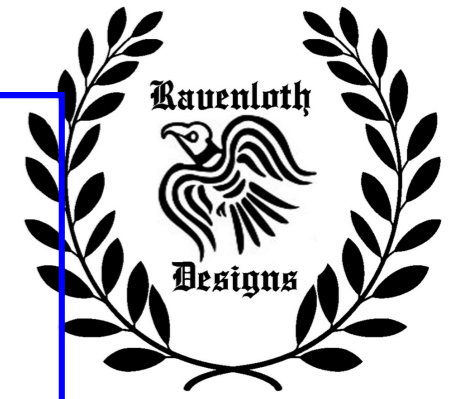





Assembly Instructions for "Normandy Banque"

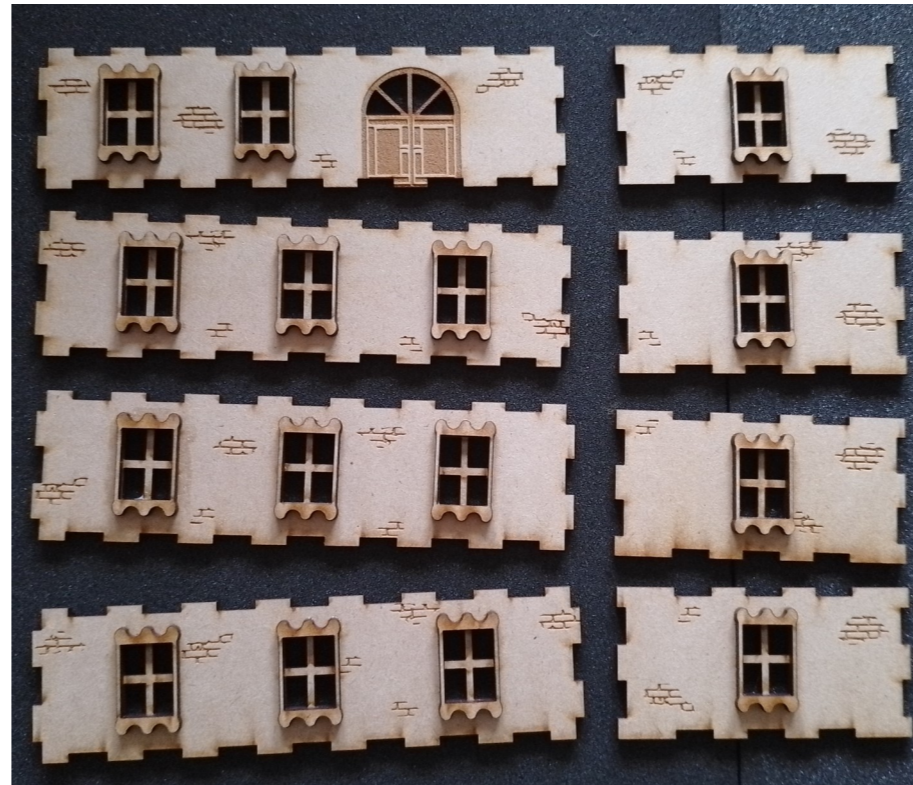

1: Glue window frames onto wall pieces.

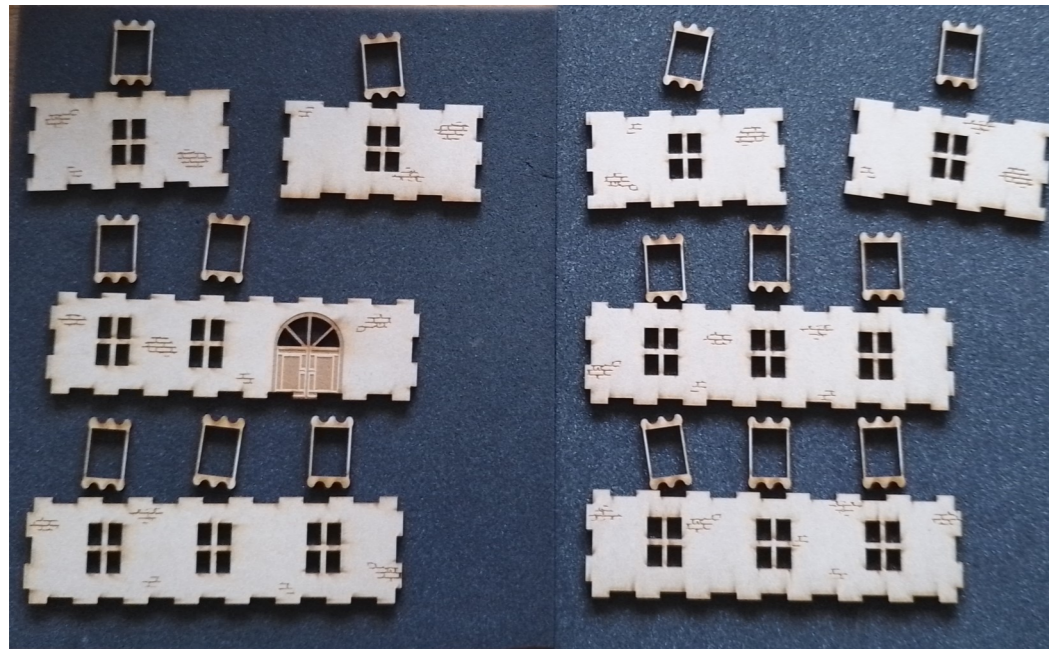



2: Glue pieces A to the bottom of piece B and C. Make sure piece A is centered on B and C. You can use pieces D to better align piece A on B and C. Do NOT glue piece D.

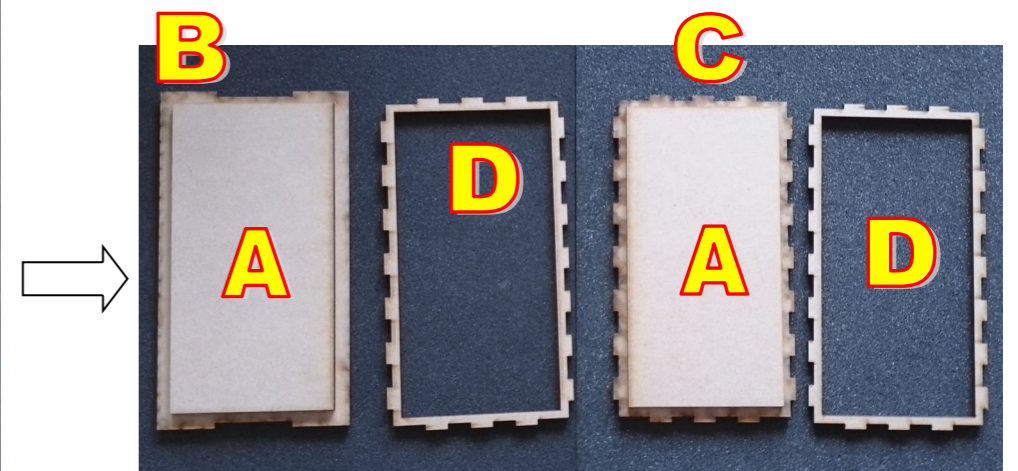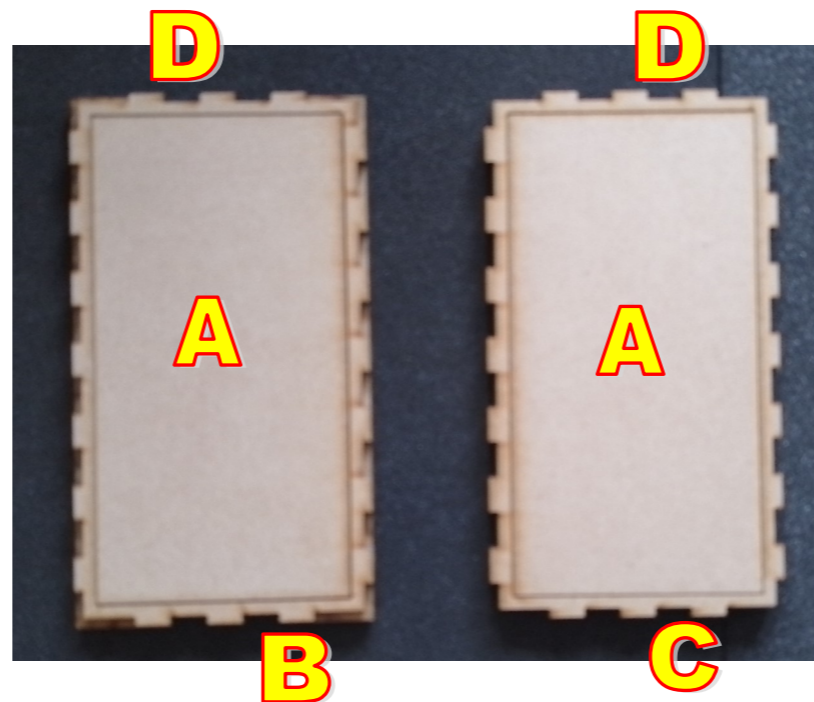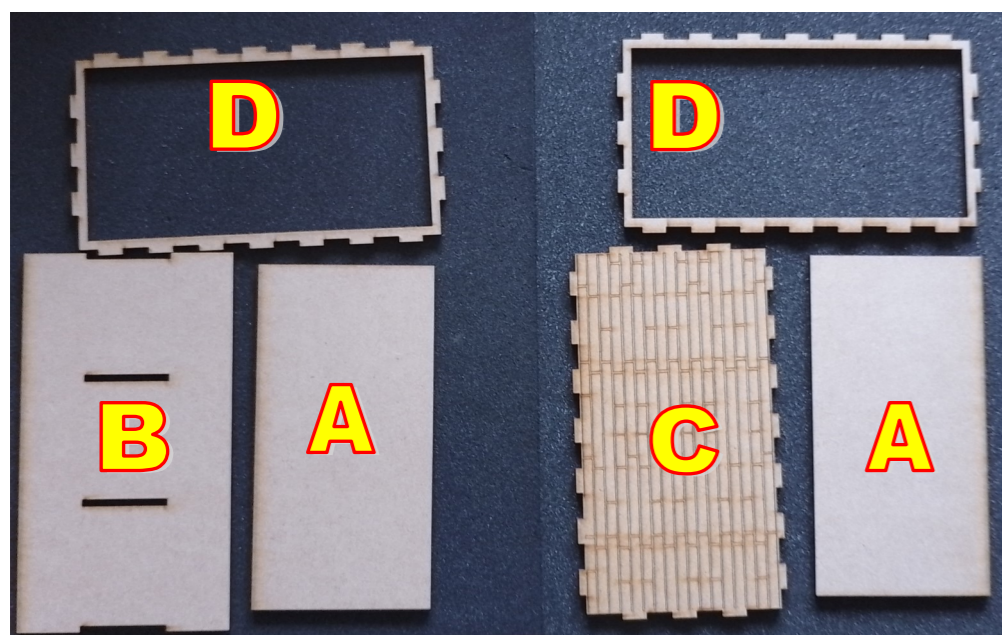



Assembly Instructions for "Normandy Banque"




3: Glue together shown pieces for the ground floor. Add a rubberband until glue is dry.

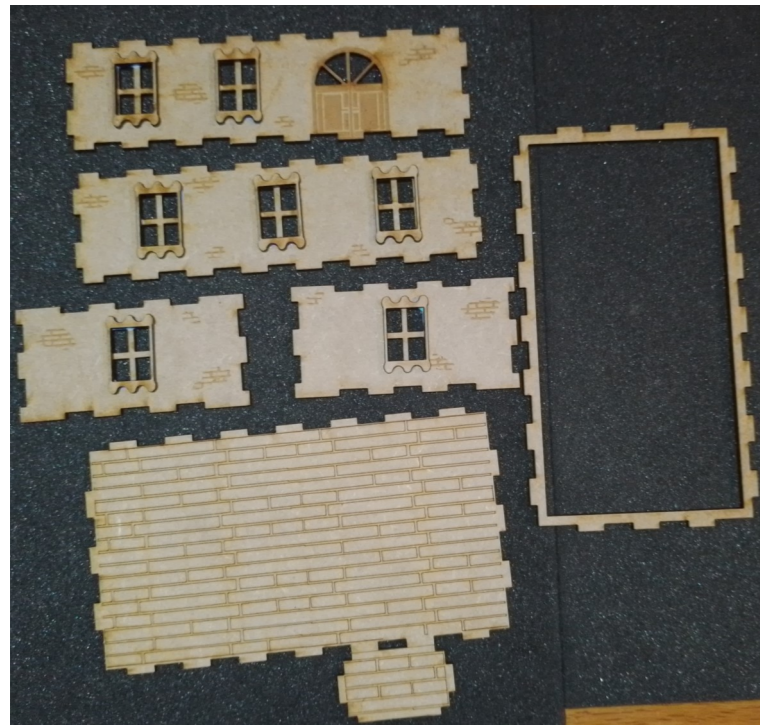




4: Glue together shown pieces for the 1st floor. Add a rubberband until glue is dry.

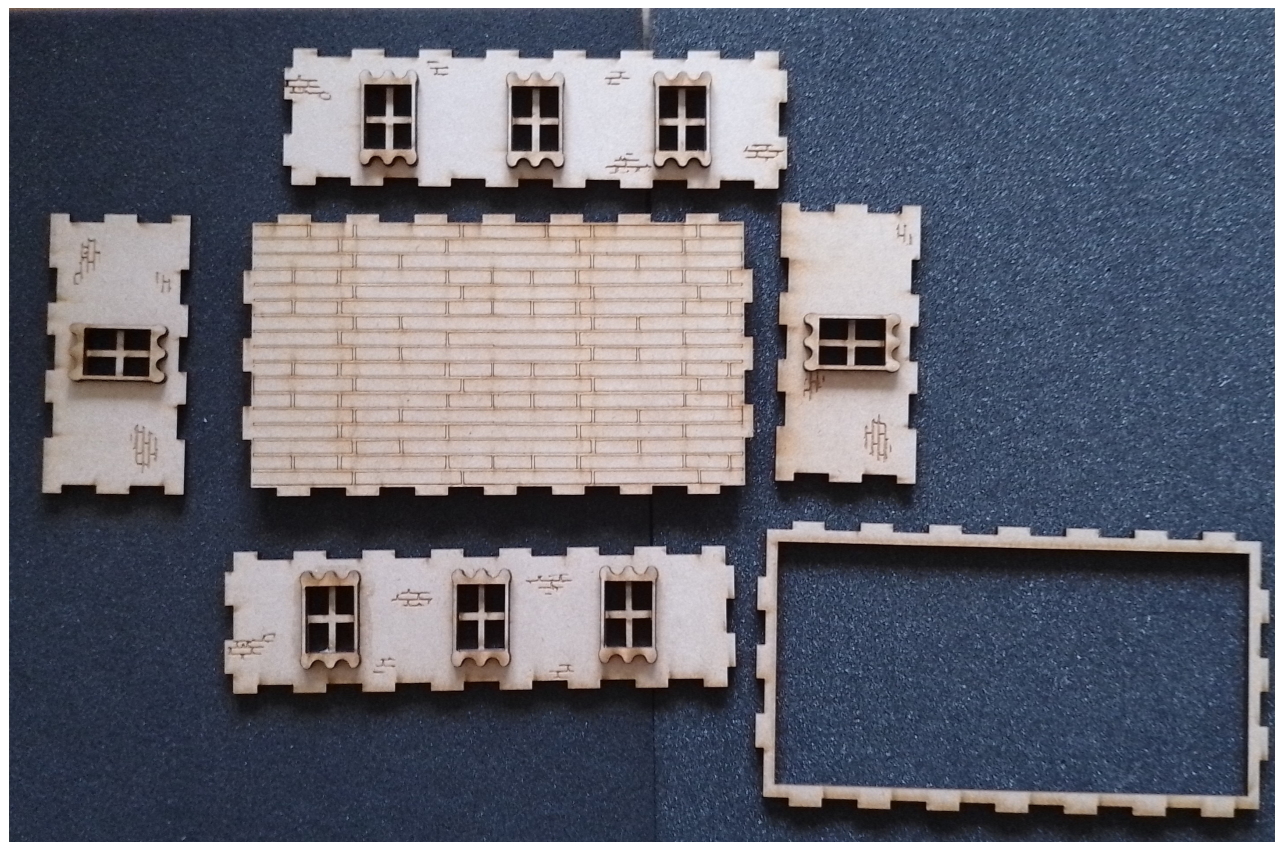




Assembly Instructions for "Normandy Banque"

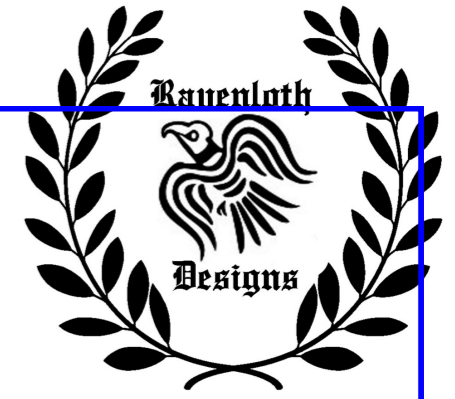




5: Glue together shown pieces for the Banque entrance.

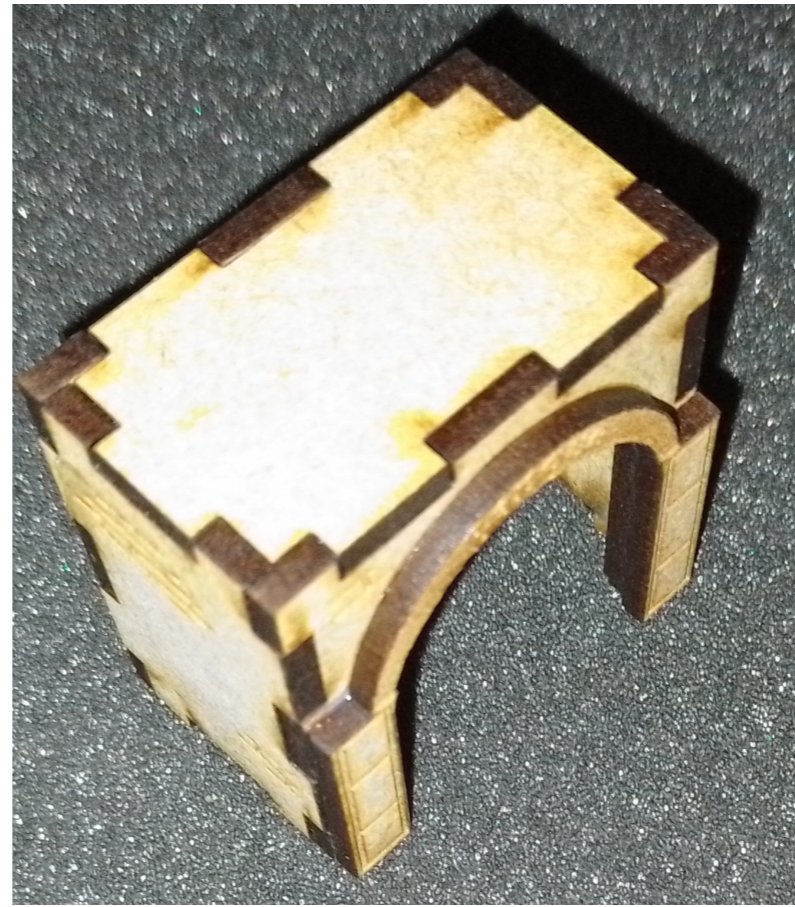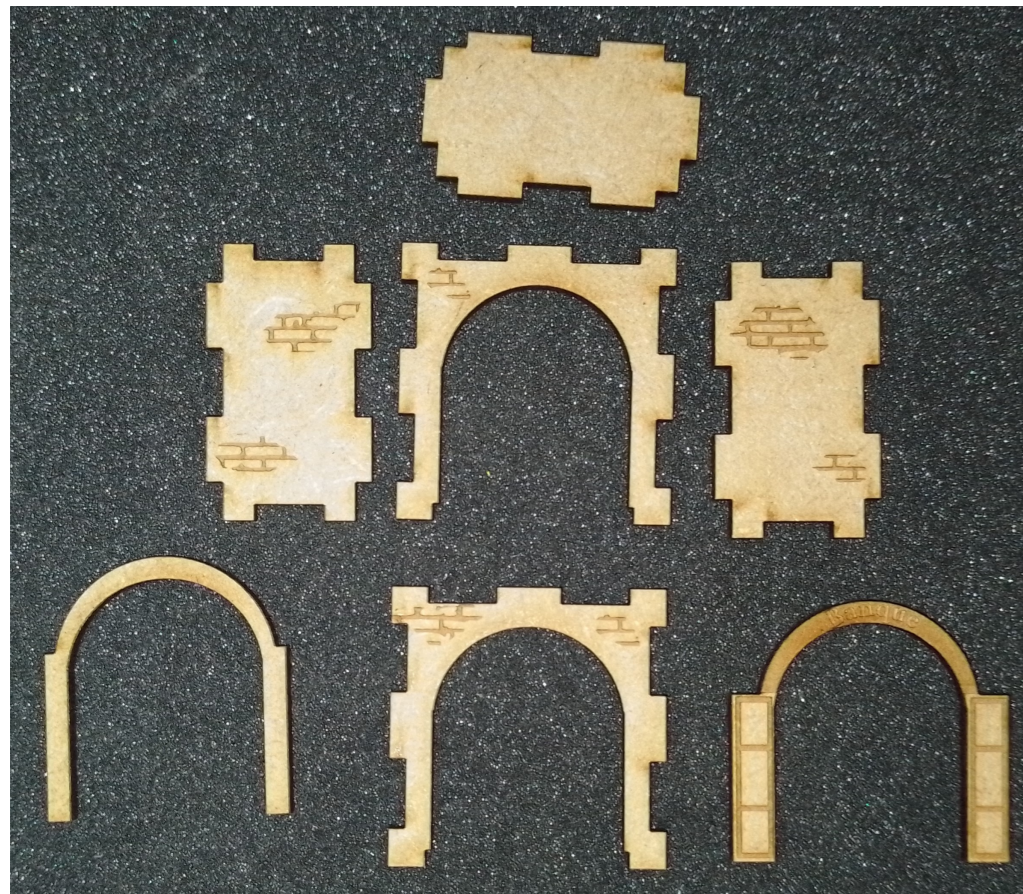

6: Glue together shown pieces for the roof.

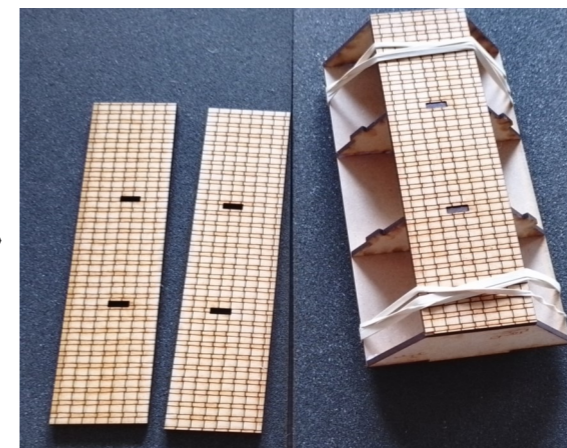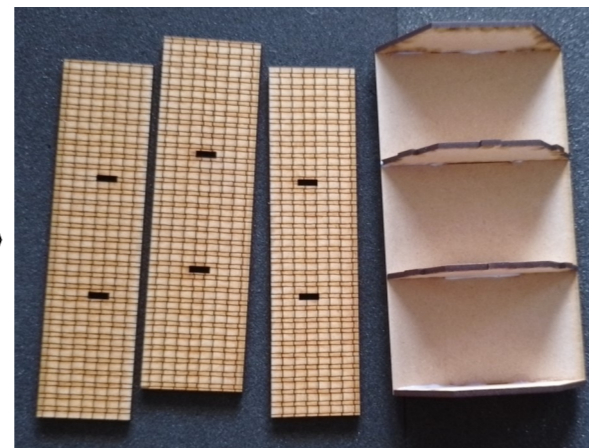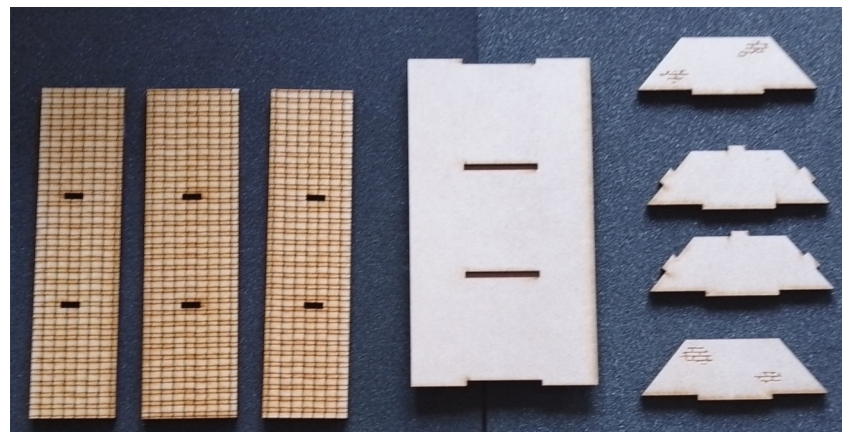





8: Glue on the last two pieces, add rubberband and let glue dry.

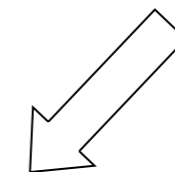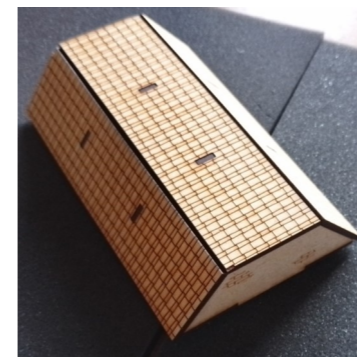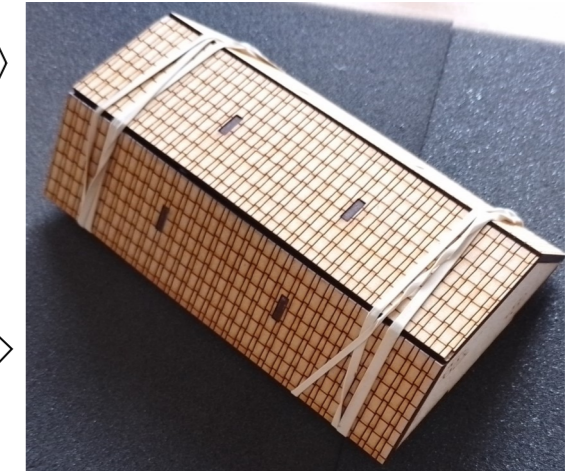

Assembly Instructions for "Normandy Banque"



9: Glue entrance onto the groundfloor. Add rubberband until glue is dry. Glue on roof for entrance.

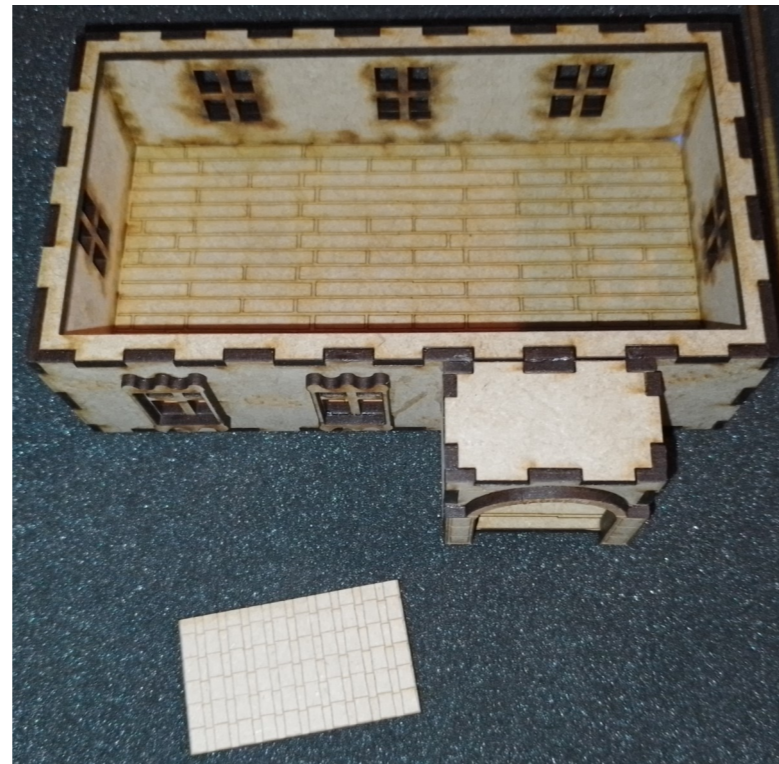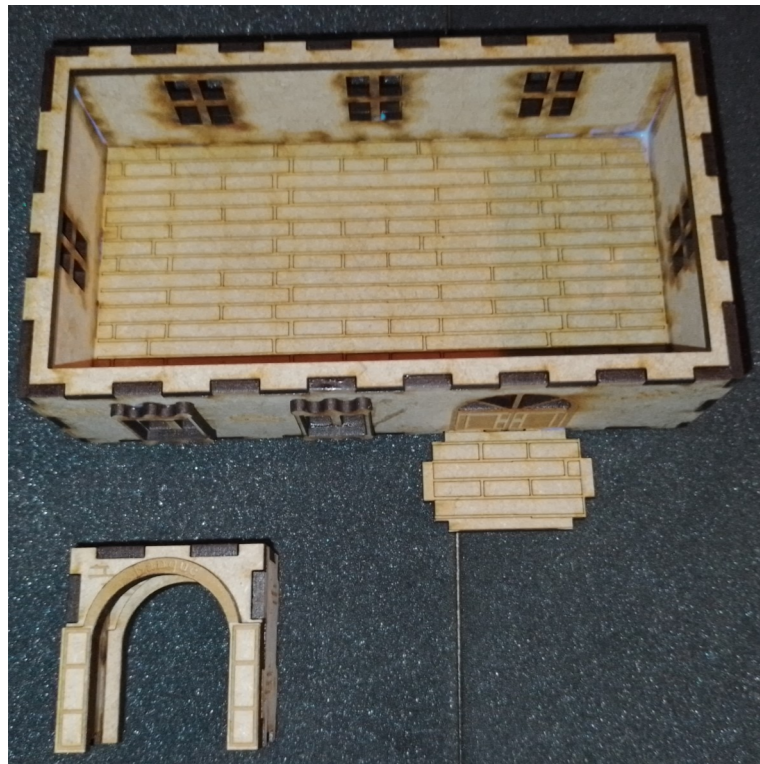

Assembly Instructions for "Normandy Banque"

