





Assembly Instructions for "Western Bank"

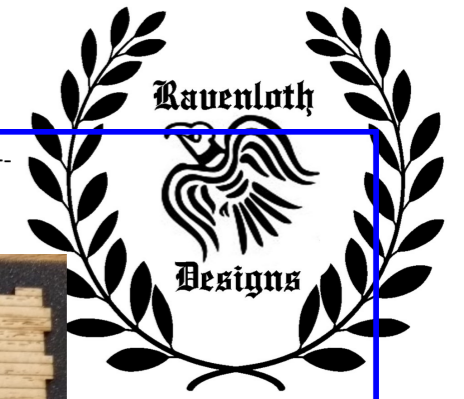


Optional: When you've cut out the pieces for the model, it's easier to paint parts before assembly.

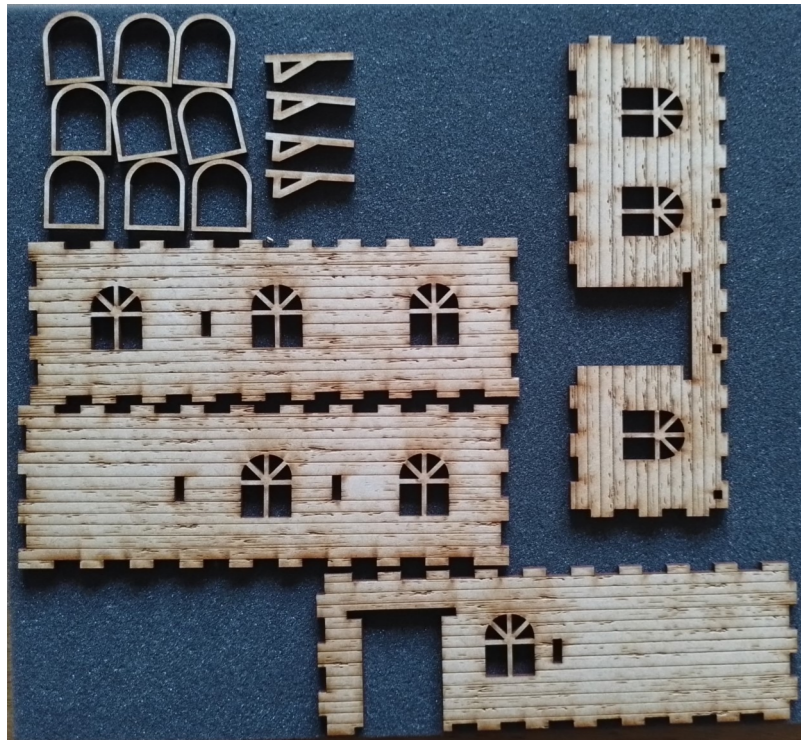

I'd paint windows, window frames and roof holders in a darker brown before assembly.

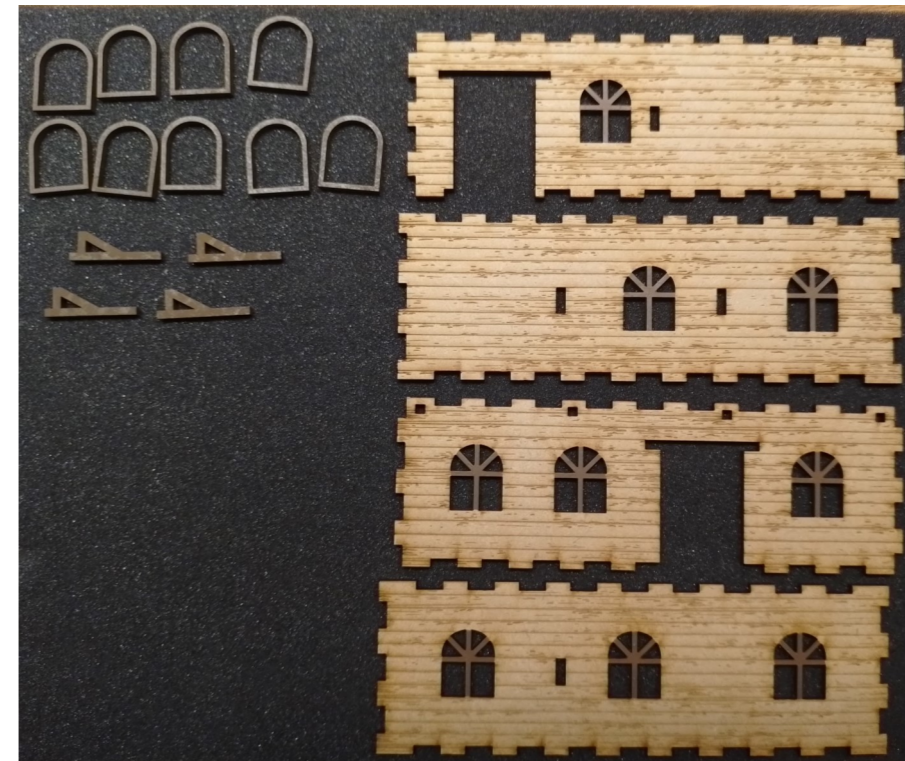

I'd paint signs, parts on doors and shown pieces black before assembly.

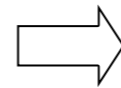

Assembly Instructions for "Western Bank"





1: Glue window frames onto wall pieces.

2: Glue handle onto vault door.

3: Glue frame onto bank sign.

4: Glue pieces A onto wall pieces. Make sure hole in piece A is placed as shown. Also make sure piece A is centered in wall piece.

5: Glue together cashier windows and frame, and then glue into wall piece. Make sure windows are centered in wall piece.

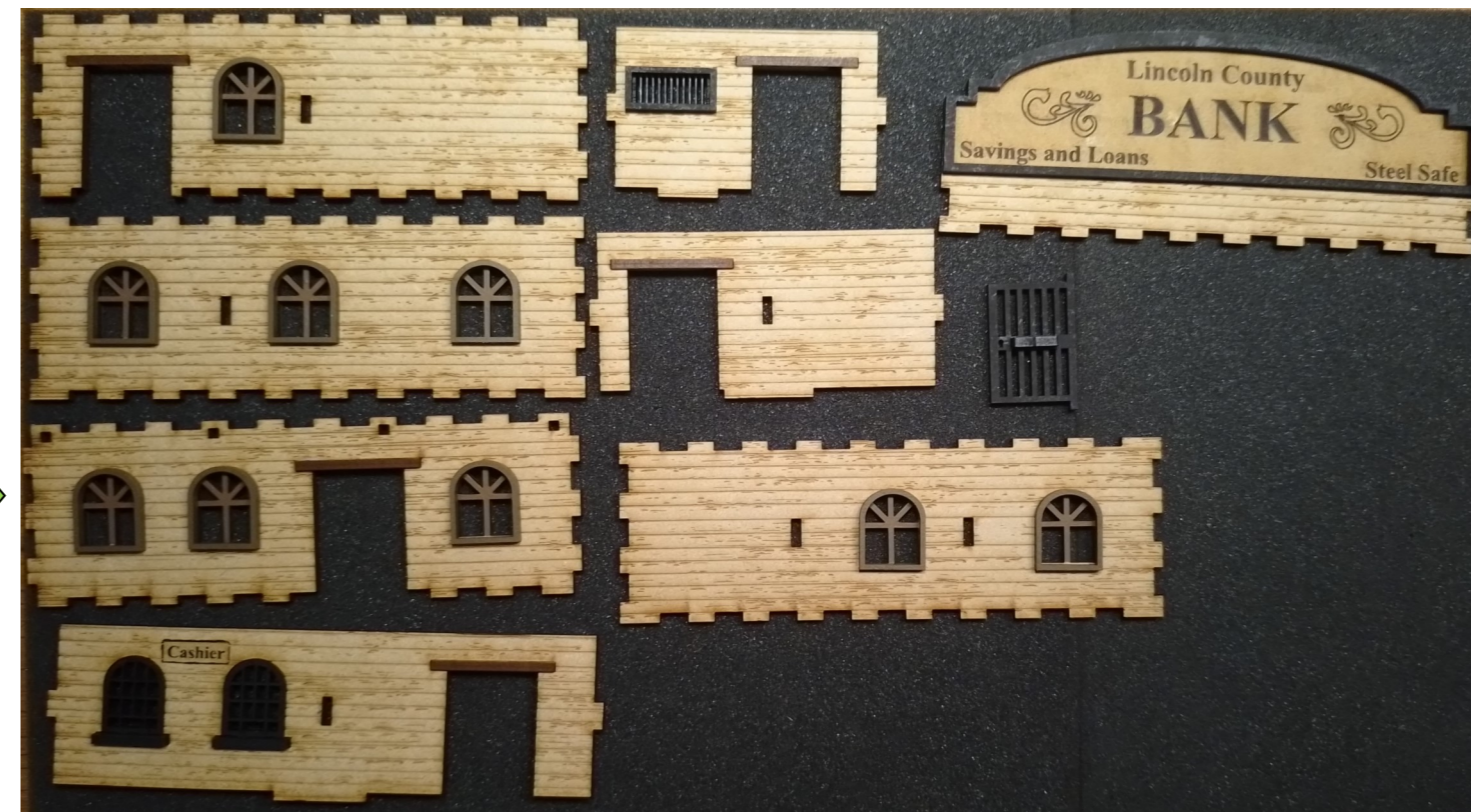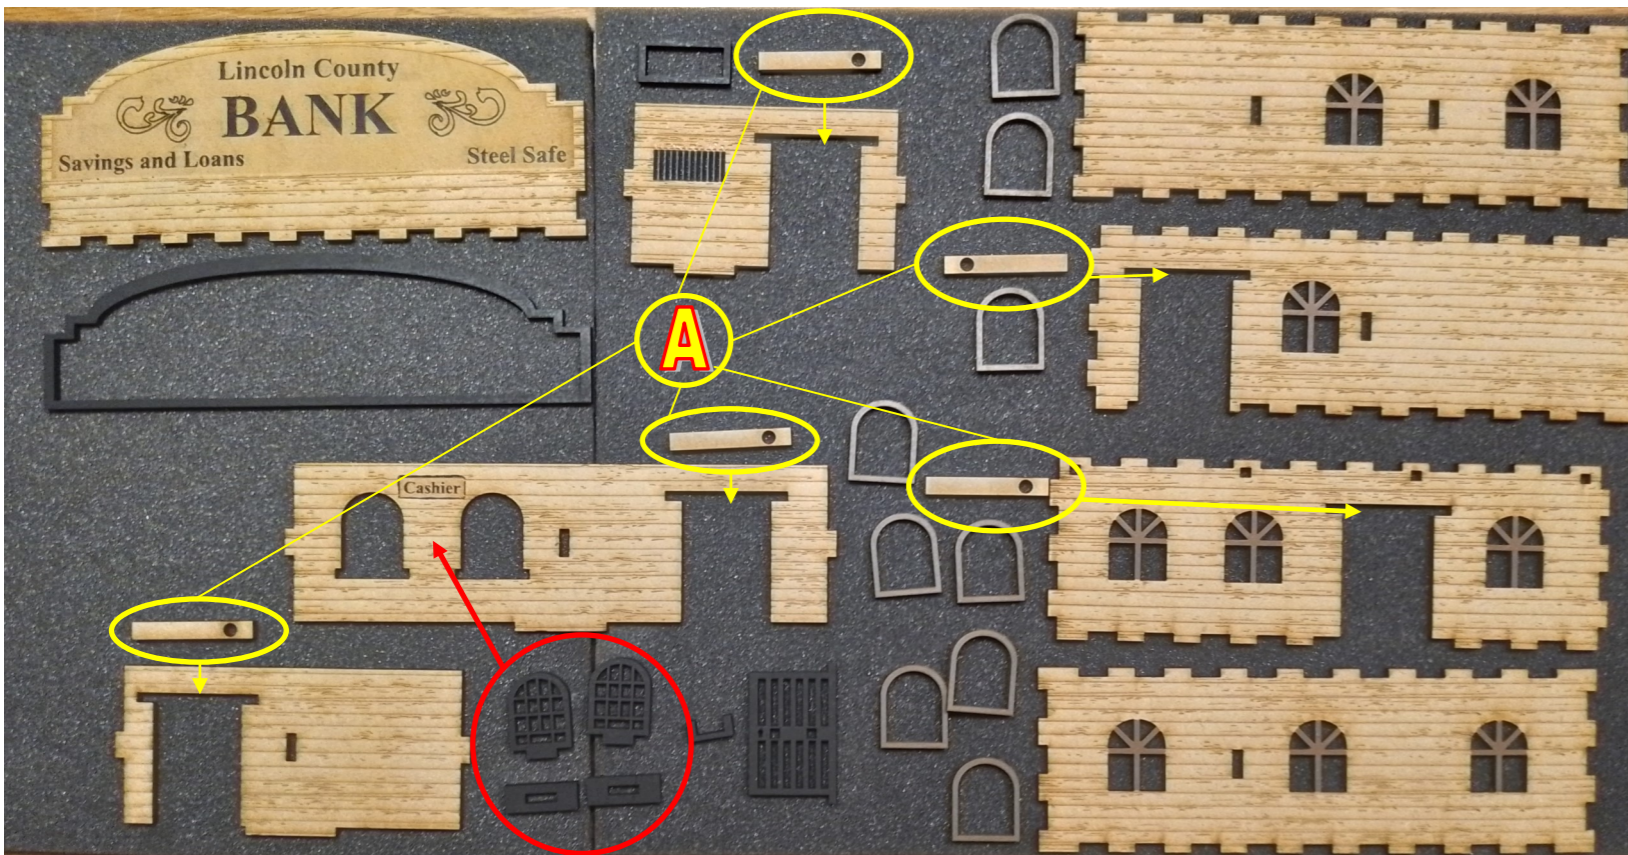

Assembly Instructions for "Western Bank"



Optional: Before assembly, I'd use wash to add further detail to the model. I used "The Army Painter" Light Tone for the signs, and Mid Brown for the floor.



Assembly Instructions for "Western Bank"





6: Glue shown wall pieces onto the floor piece. Taps on doors goes into holes in piece A in walls and holes in floor piece. Do NOT glue door.

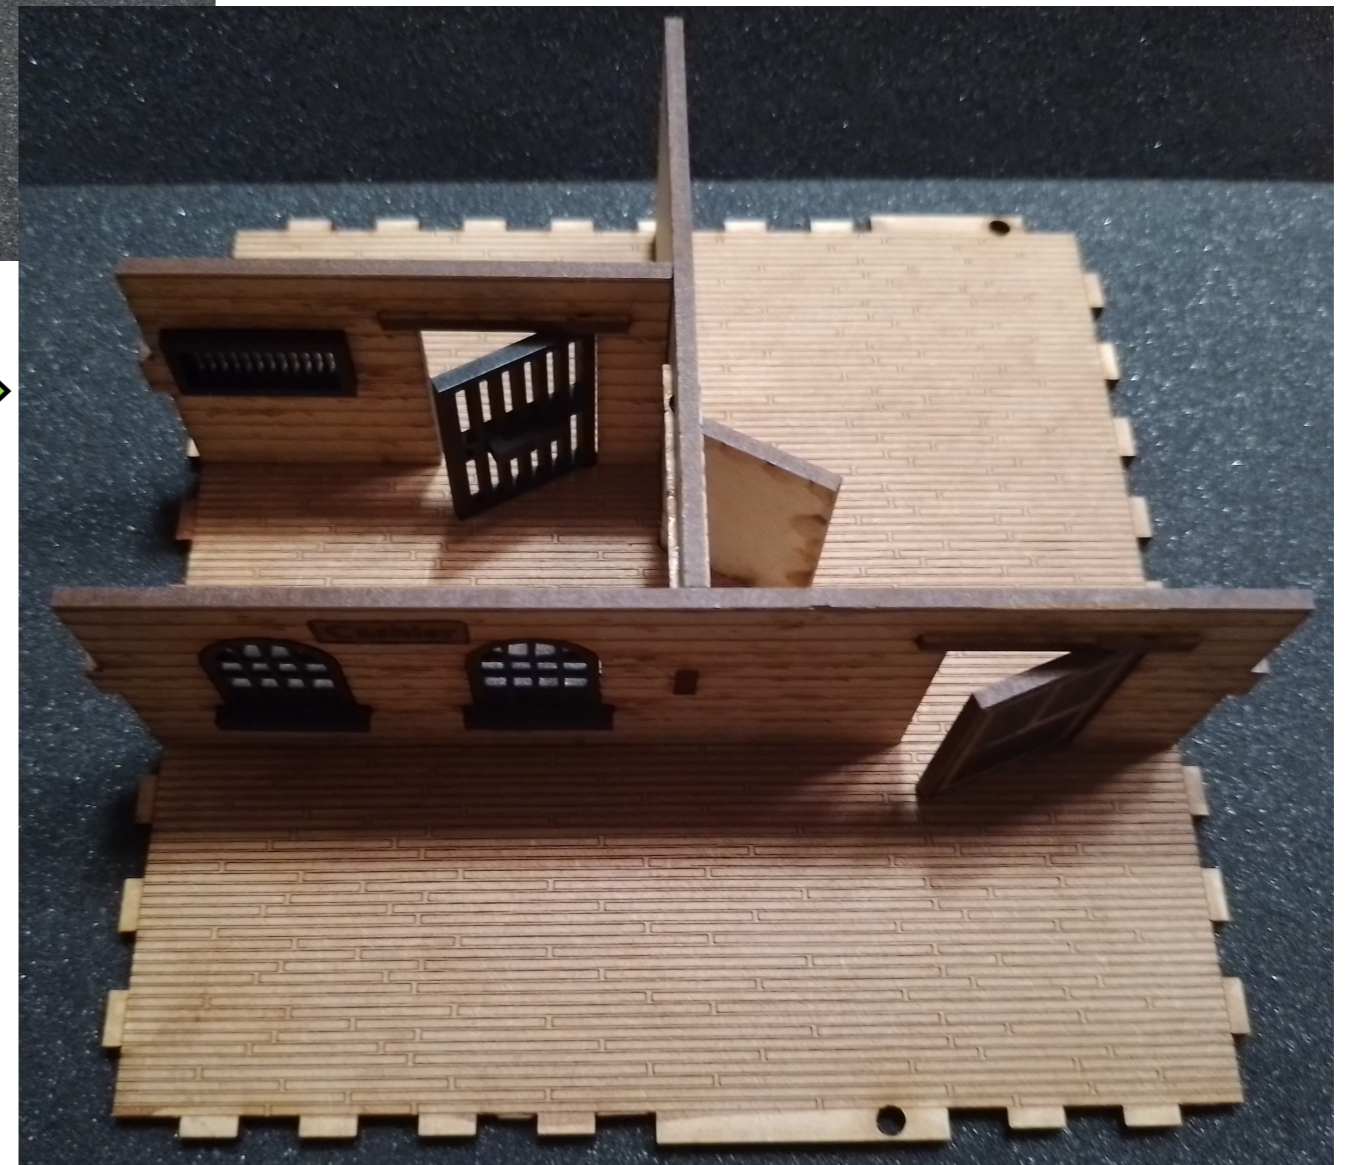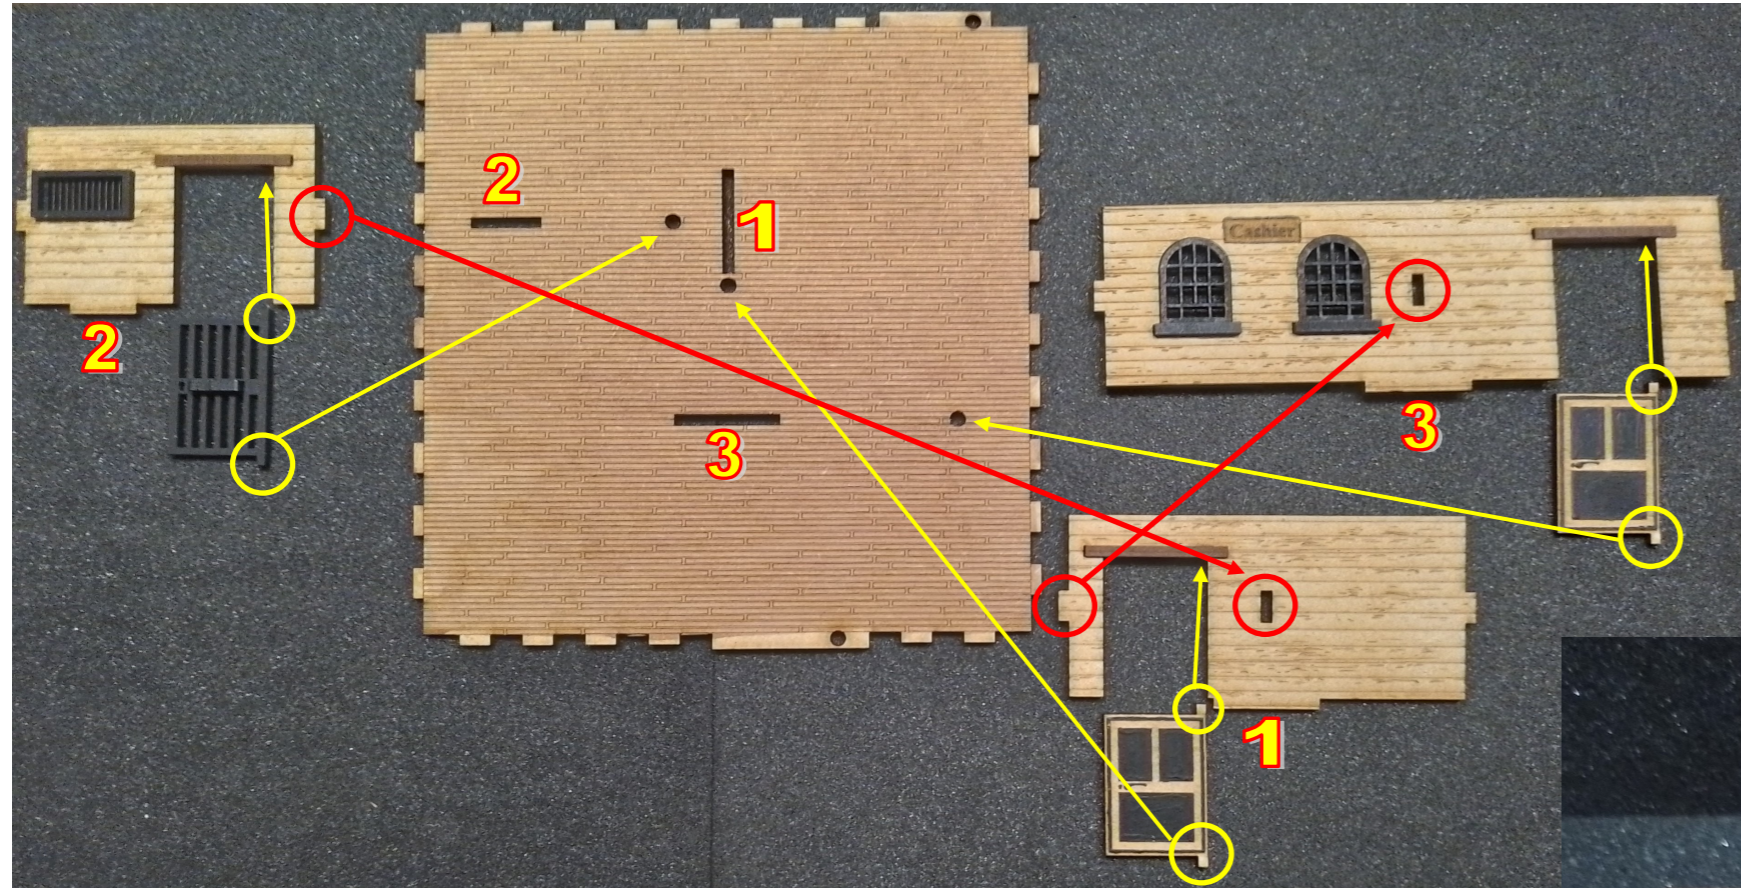


Assembly Instructions for "Western Bank"




7: Glue outer walls onto the floor piece. Use same procedure as earlier for doors. Add a rubberband until glue is dry.

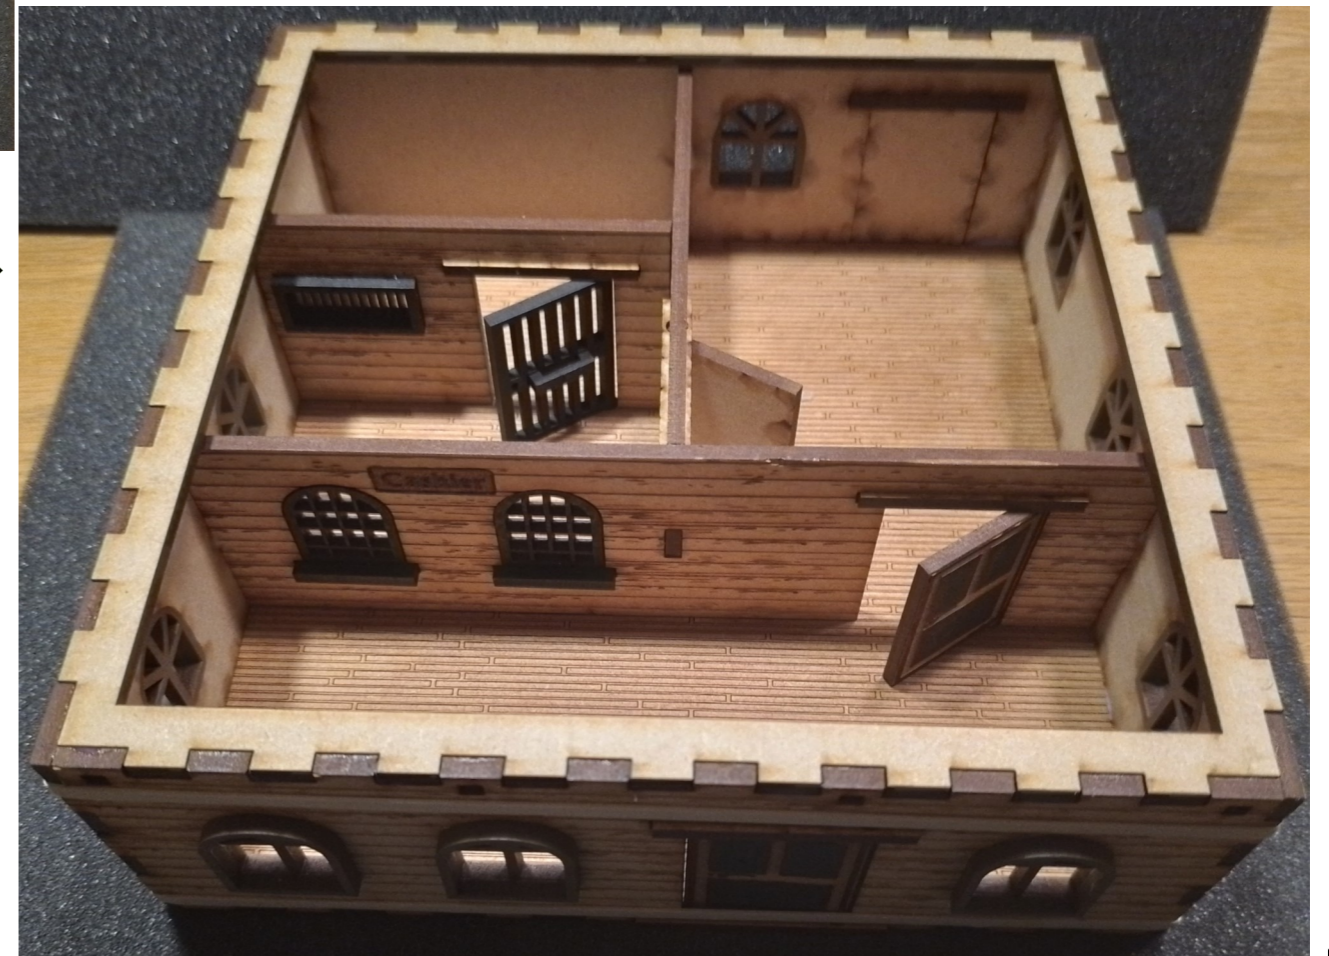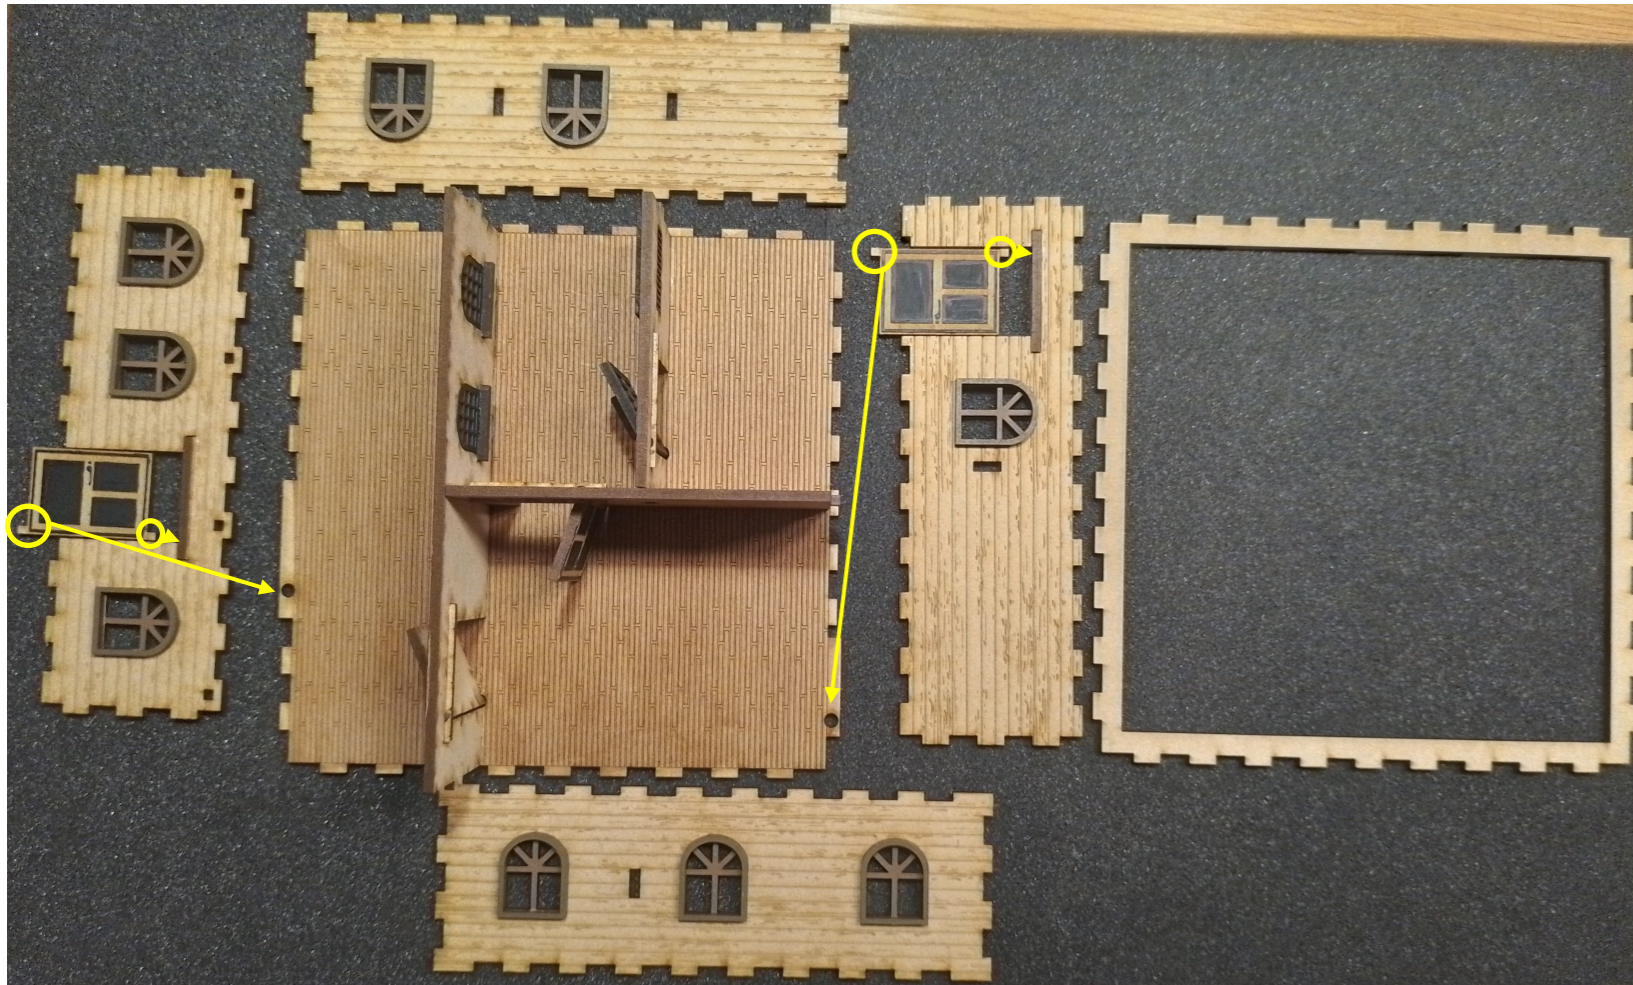


Assembly Instructions for "Western Bank"

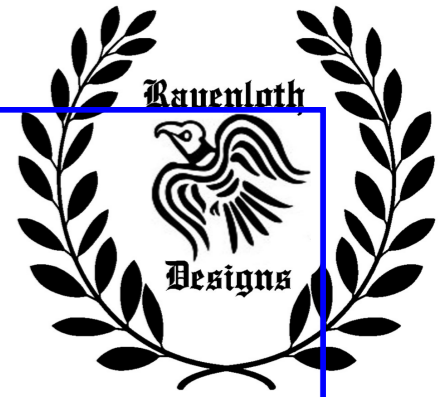

8: Glue shown piece onto backside of roof piece. Make sure piece is centered.

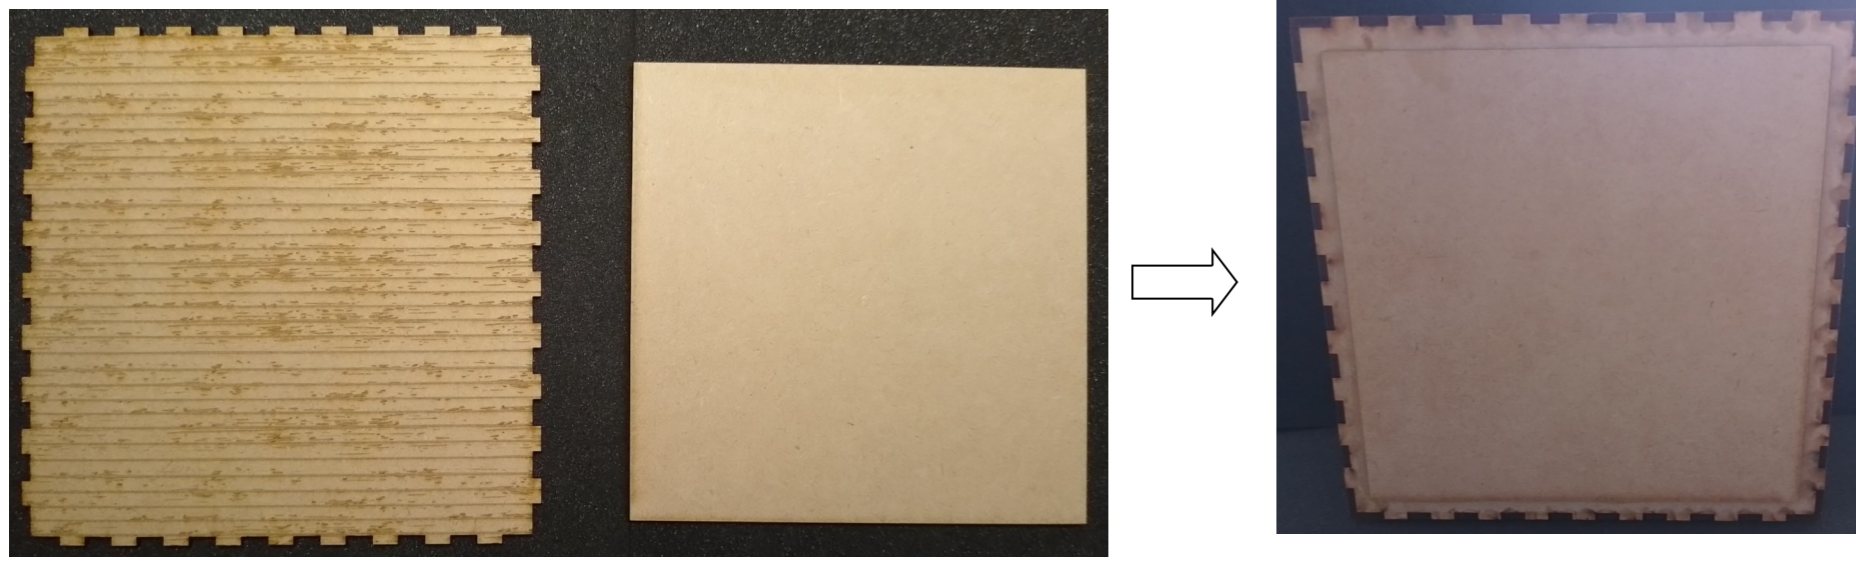

9: Glue together shown pieces for the roof.

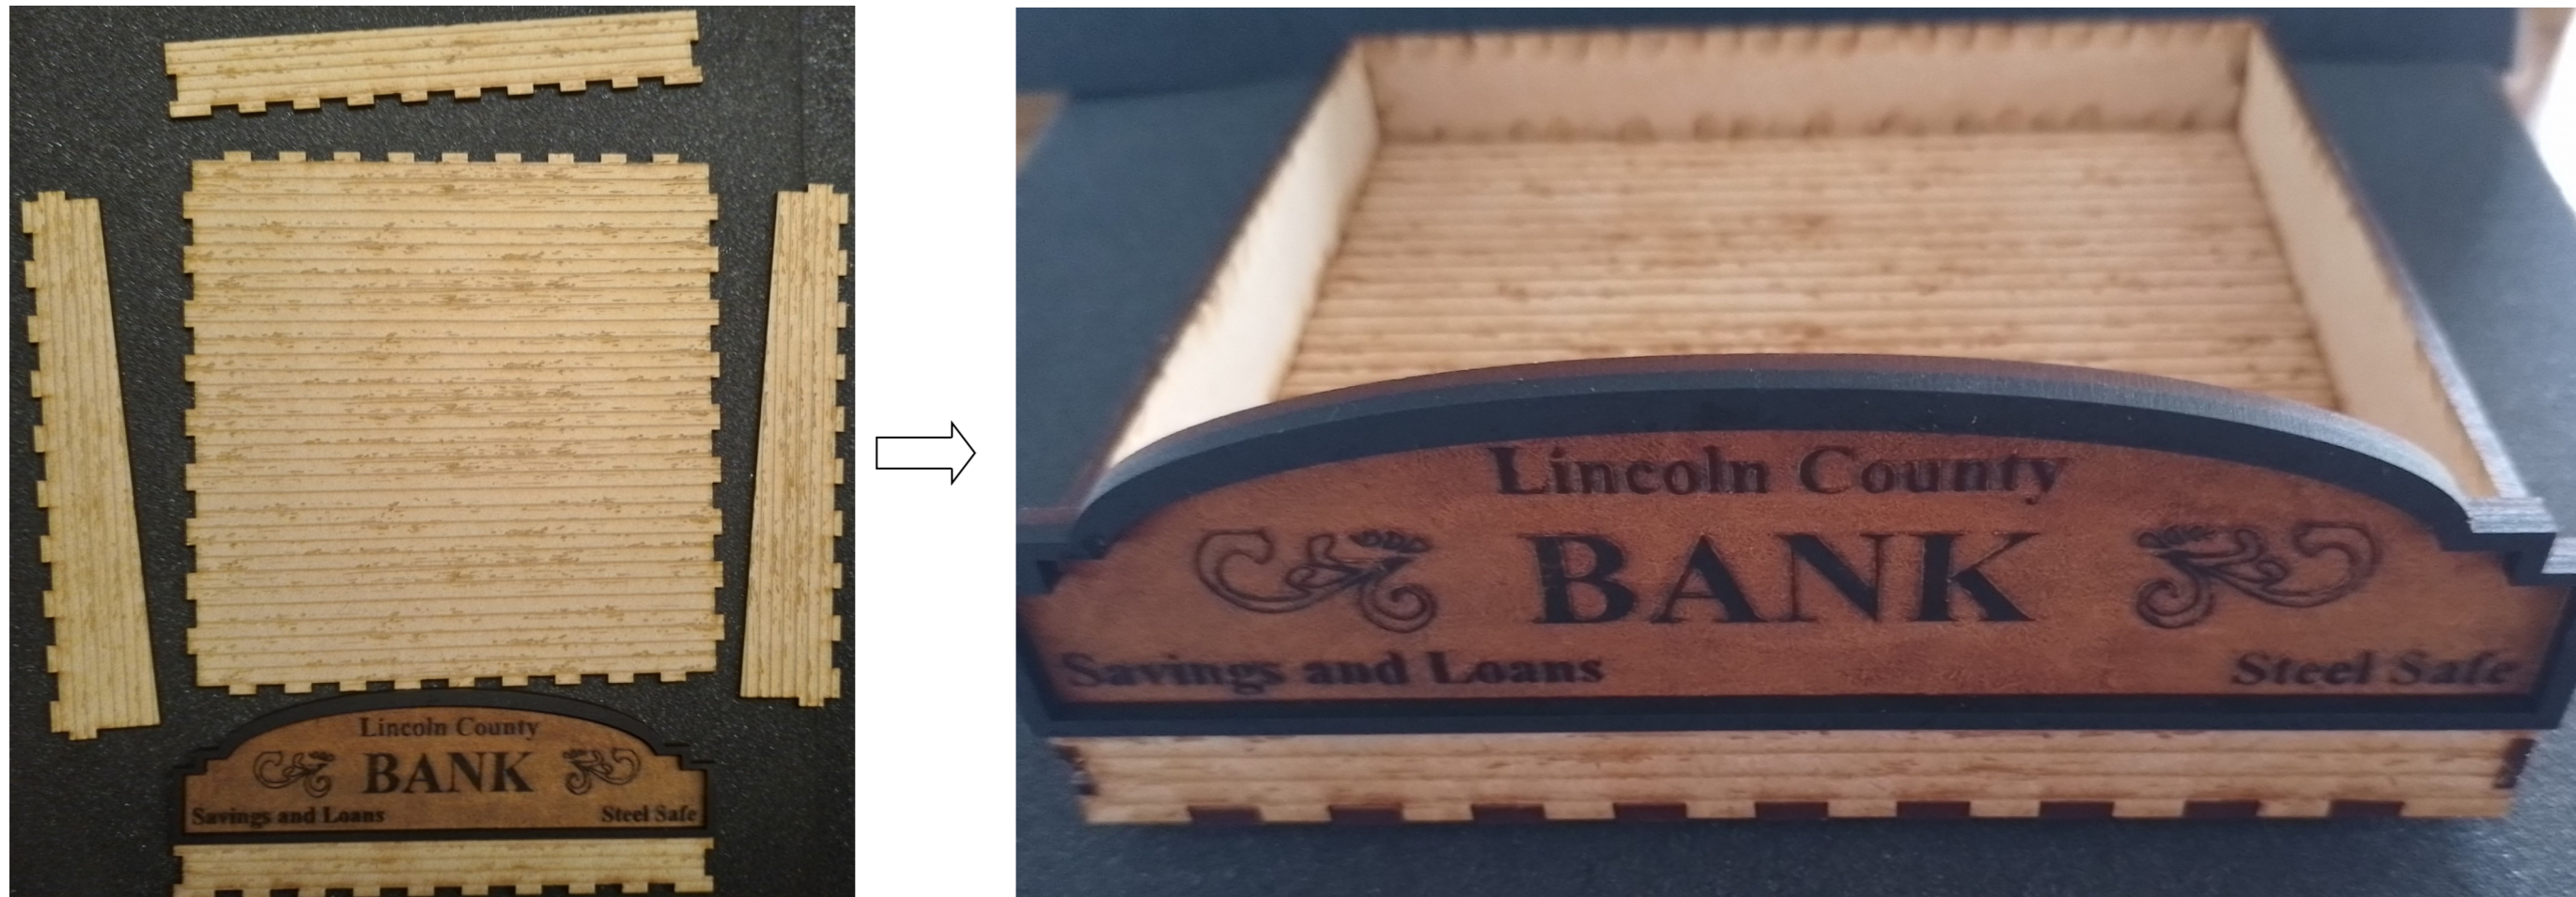

Assembly Instructions for "Western Bank"



10: Glue roof holders and roof onto the front of the bank..



11: Glue together shown pieces for the steel safe.

