



Assembly Instructions for "Military Camp—Office Building"




1: Glue together shown pieces for the posts under the bottom of the building. (6x2)

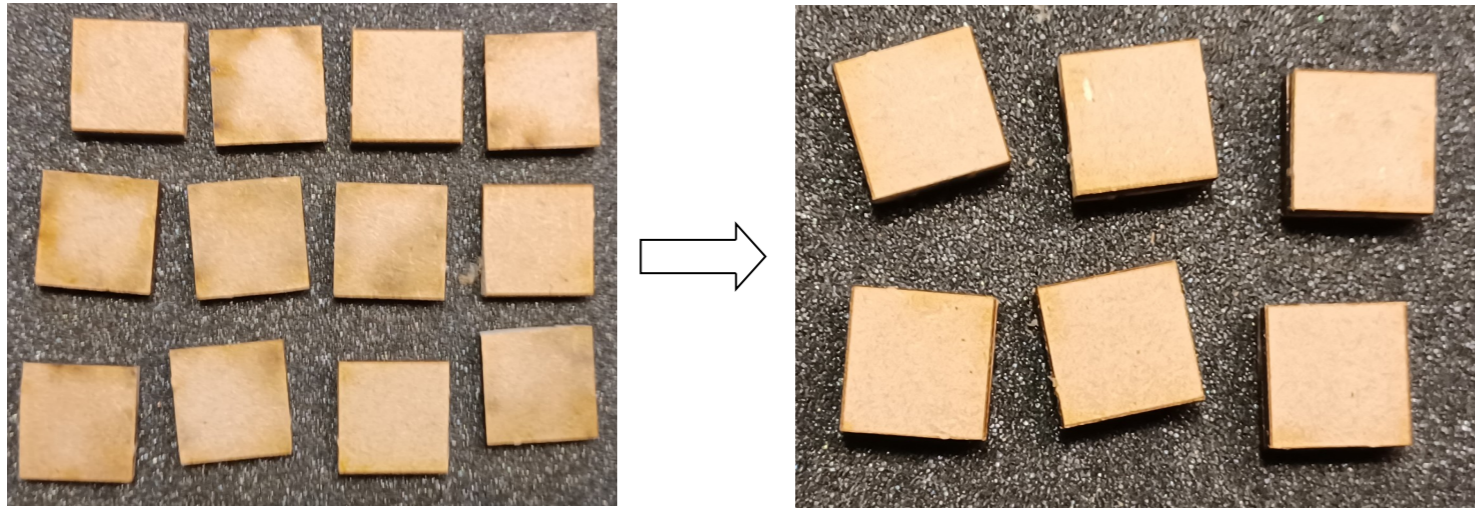

2 A: Glue together shown pieces to make the chimney for the building.

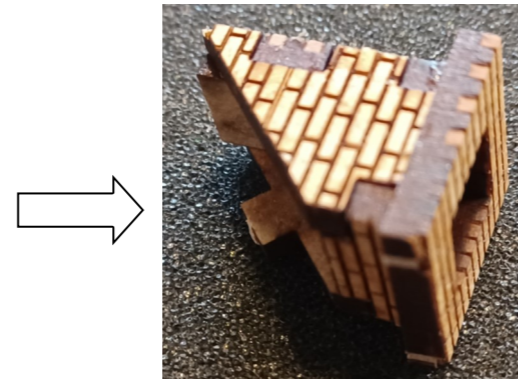

2 B: Cut the bottom diagonally on the chimneys front side. (Yellow circle).

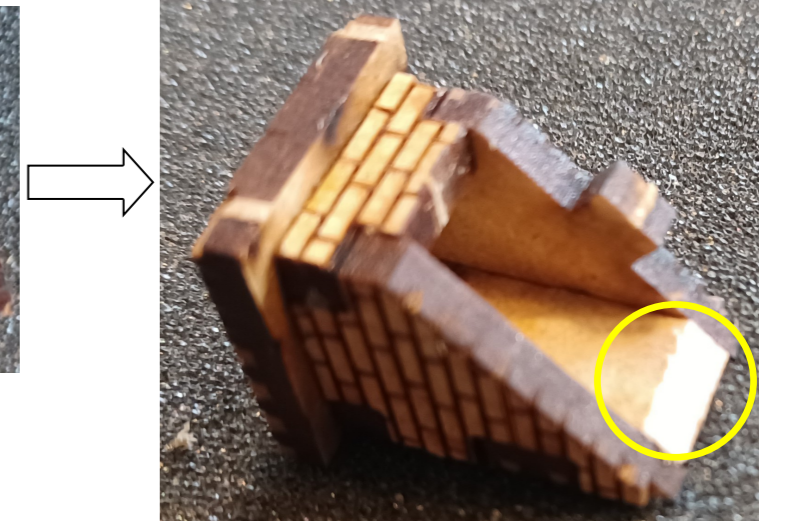




3: Glue window frames on to the 4 building parts .






Assembly Instructions for "Military Camp—Office Building"






4: Glue together shown pieces for the stairs.

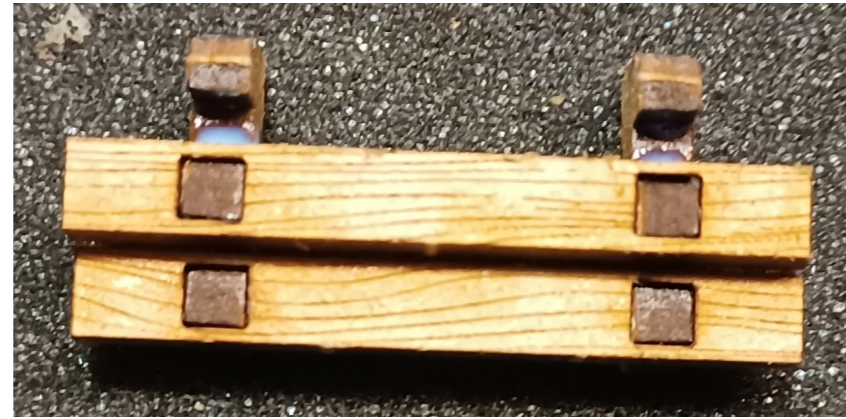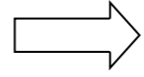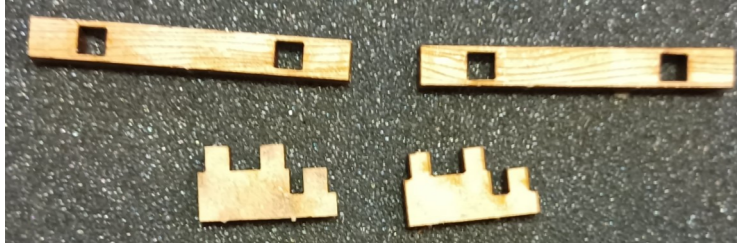

5: Glue together shown pieces for the roof.

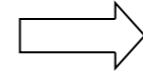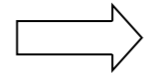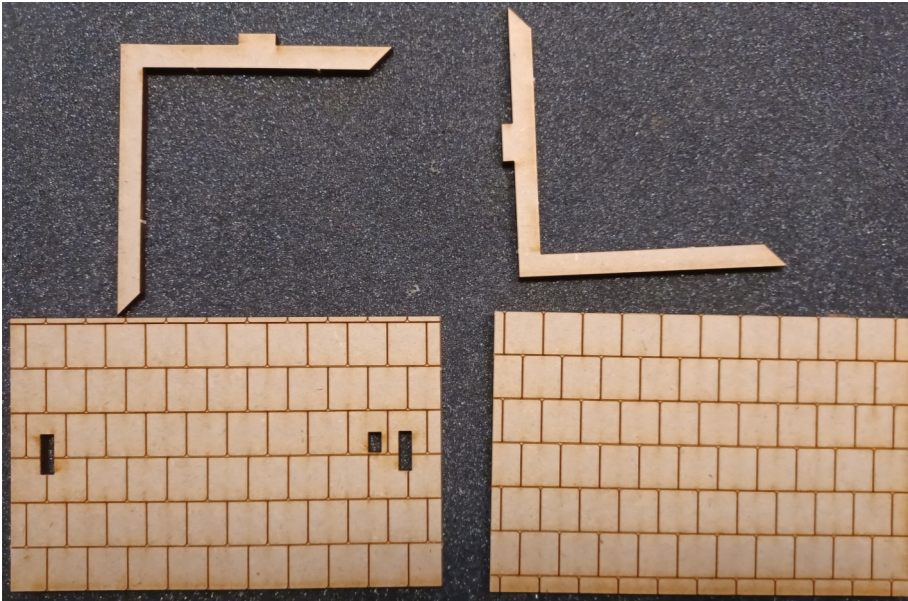


6: Glue chimney on to the roof.

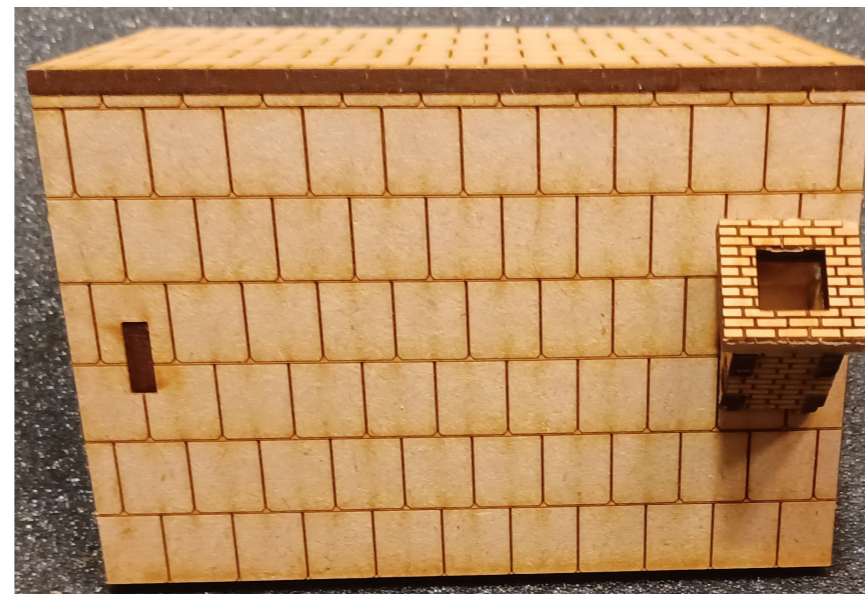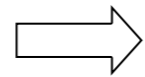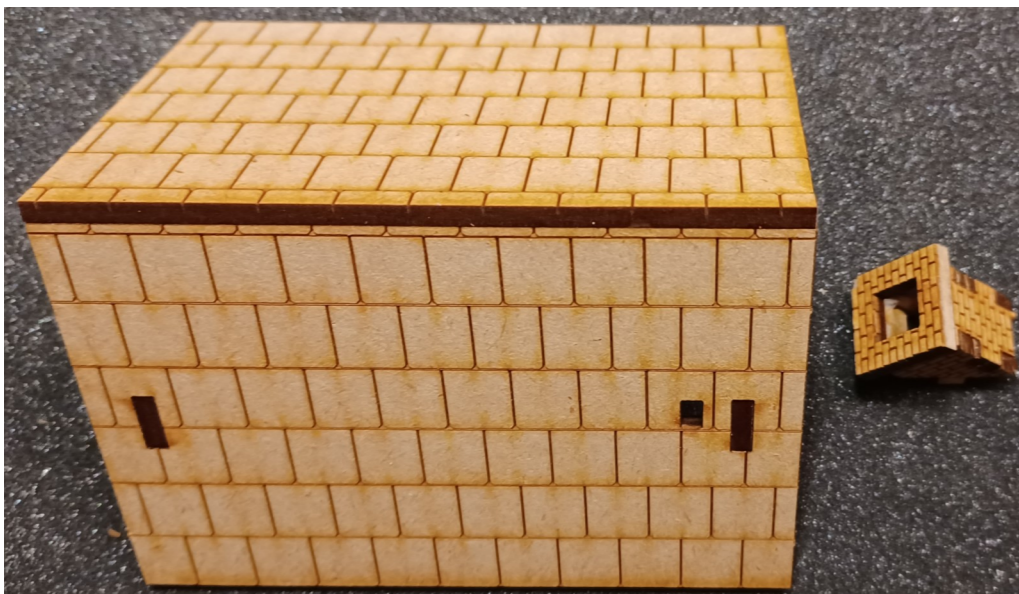



Assembly Instructions for "Military Camp—Office Building"






7: Glue together shown pieces for the wooden barrack.

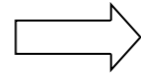

10: Glue door frame (C) on to the front of the building. Then glue pieces A and B onto the porch of the building.

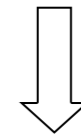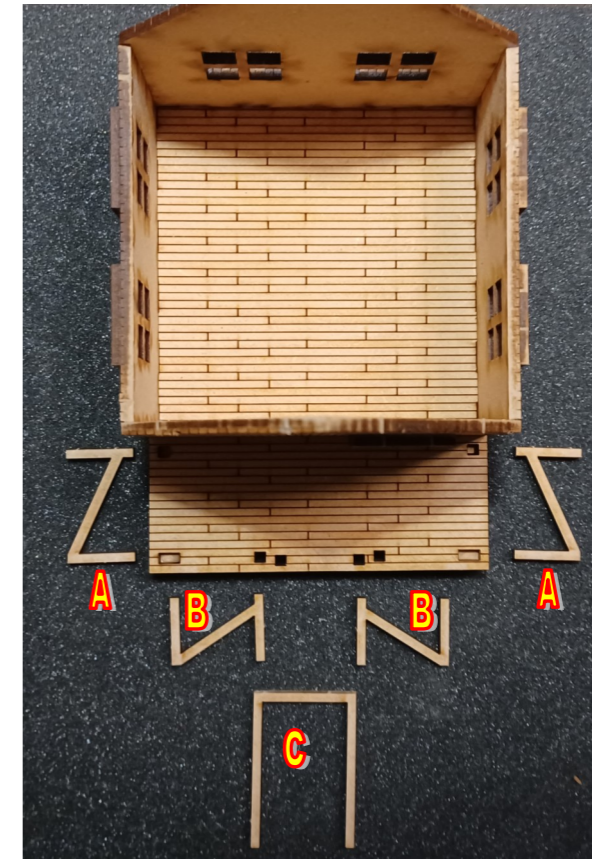

8: Glue the posts under the bottom of the building.

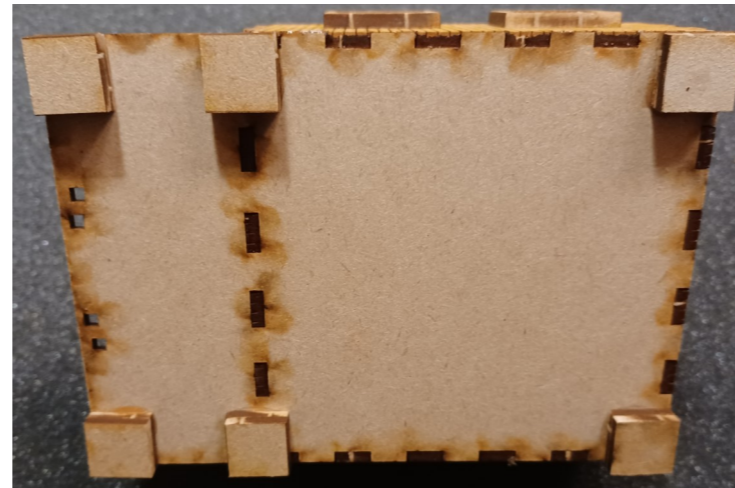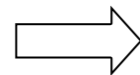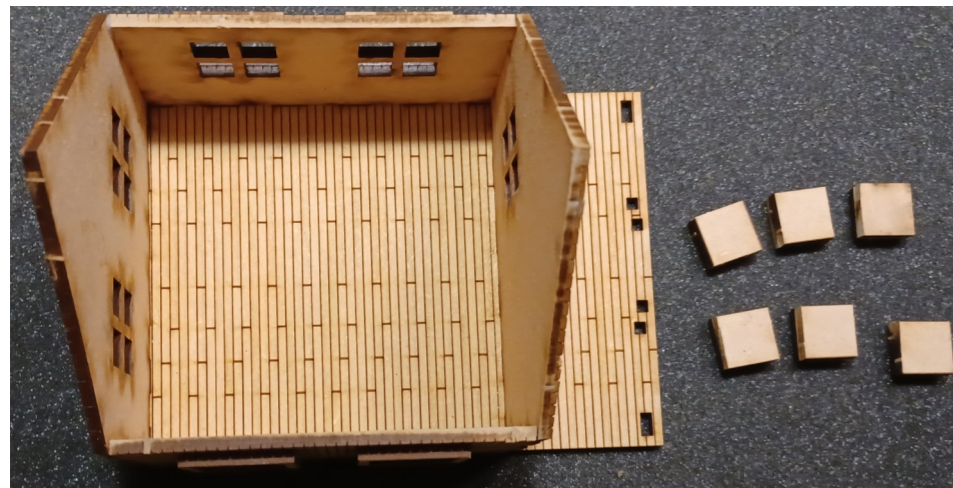


Assembly Instructions for "Military Camp—Office Building"




11: Glue stairs on to the porch.



11: Glue board pieces on to the porch.

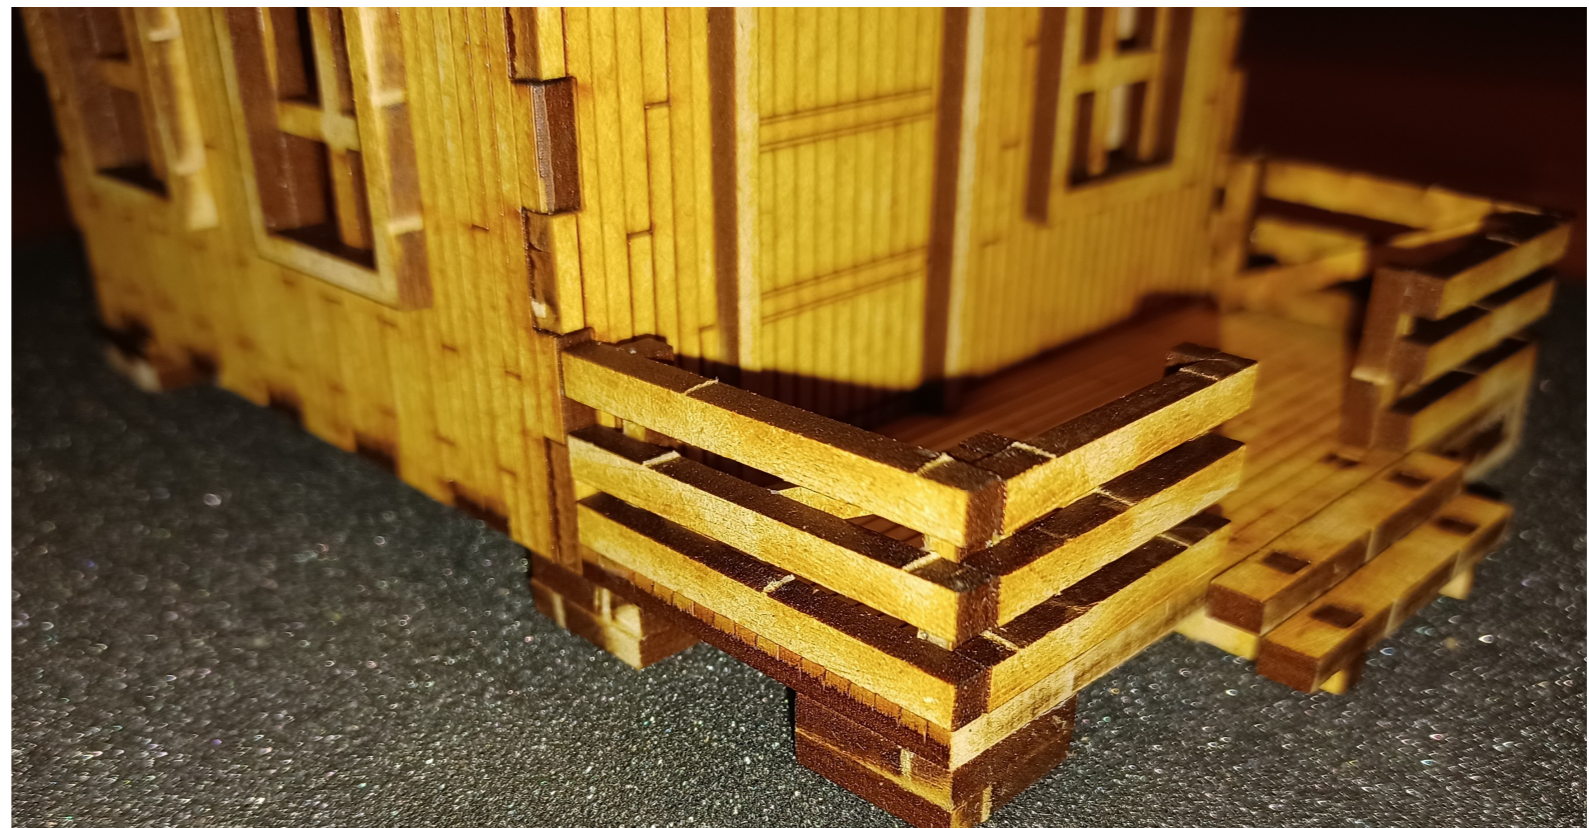

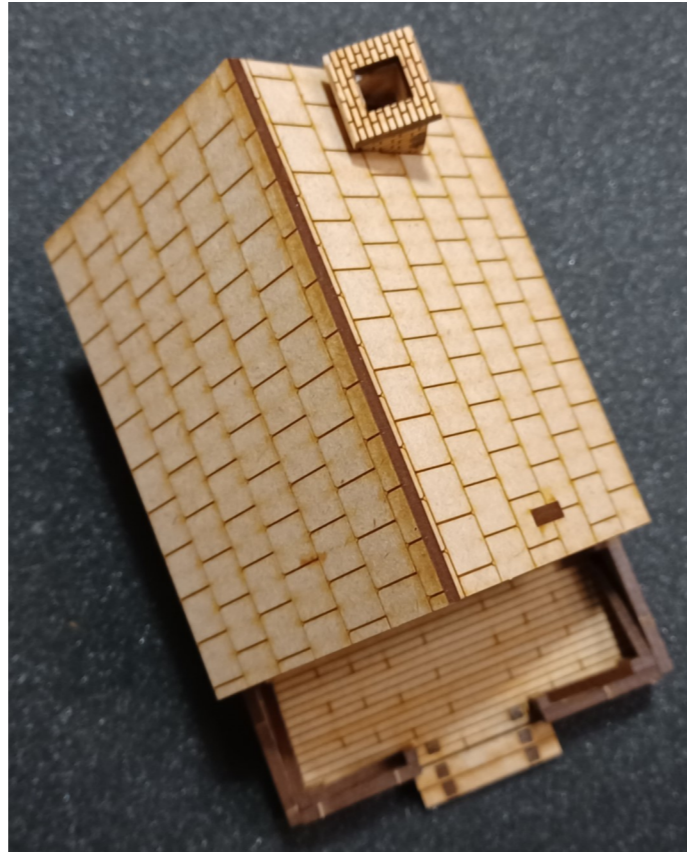

European version.

Pacific Island version.



Assembly Instructions for "Military Camp—Office Building"




OPTIONAL: If you want the building to look more like a Pacific Island wooden jungle hut, then follow these instructions to alter the look of the roof.

1: Cover the hole in the roof for the chimney with a piece of tape.



2: Smear the roof with PVA glue.

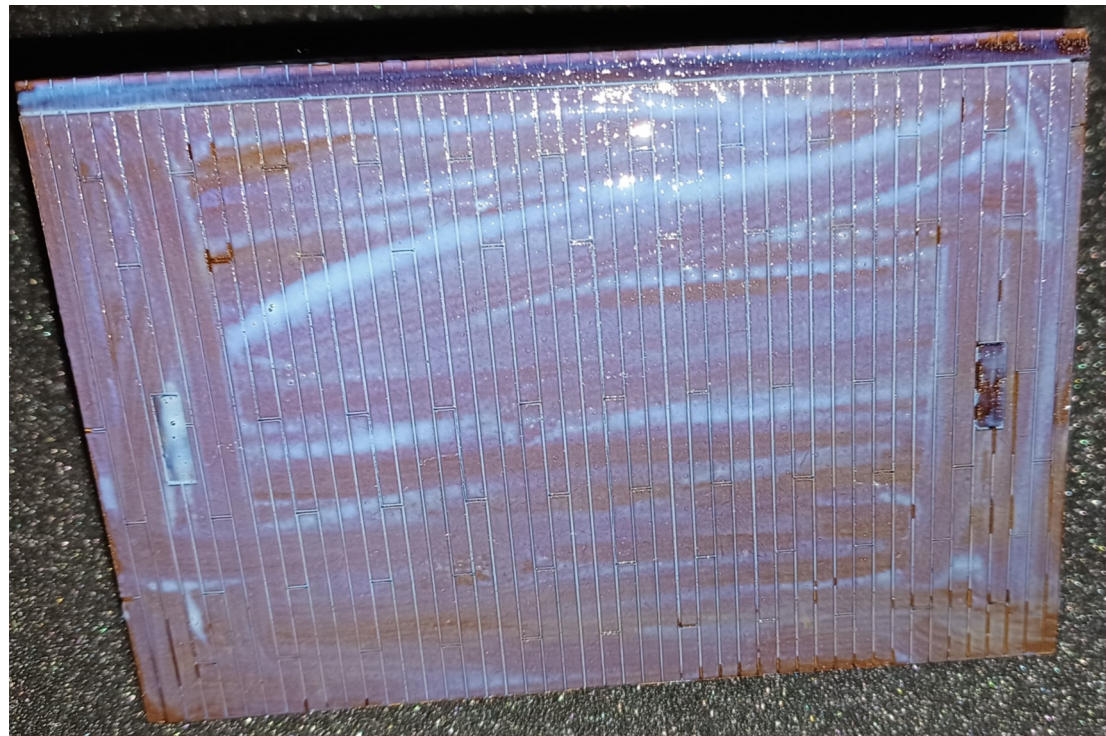

3. Sprinkle on fine sand.



4. When dry, paint it in kakhi, army green and brown colours. Let paint dry, and add PVA glue on various parts of the roof, and then sprinkle on static grass, and let it dry.

