
## **Installation Overview**

Refer To User Manual For Detailed Instructions

STEPS **1&2** 

**Outside Antenna** 

place 6 in. away from windows, including sunroofs & 12 in. away from other antennas

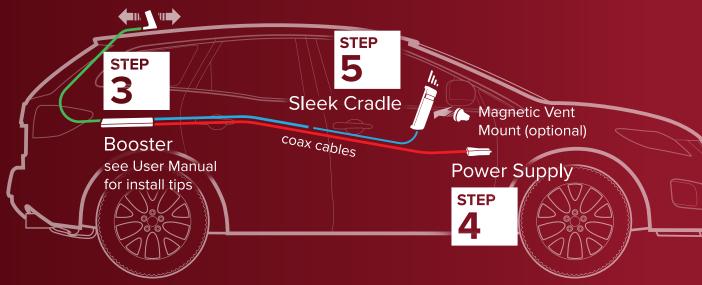

**STEPS** 

1&2

Mount Antenna.

Route & connect cable to 'L ANTENNA' booster port.

**STEP** 

3

Place booster in back of vehicle & route cable to front. STEP

4

Connect to 12V CLA port & connect to booster (12V only).

STEP

5

Insert phone into cradle, connect cradle to cable from booster & ENJOY!





