



CATSMODE INSTRUCTIONS WALL STEPS



WWW.CATS-MODE.COM


CAT FACE or DECAGON SHAPE

Take the back panel and place it on the wall to mark 3 holes using a pencil. Drill holes and insert dowels.





Screw together step and bottom pieces together with the smalles screws. Stick felt to the step.

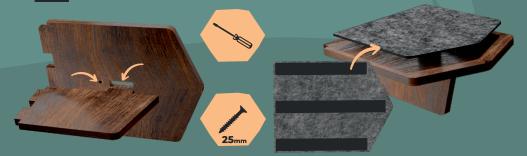

Screw the step with bottom piece to the back panel with three smallest screws from the back side.



Use screwdriver to connect the step to the wall. Use the longest three screws to drill step into dowels in wall.




STANDARD SHAPE

Take the back panel and place it on the wall to mark 4 holes using a pencil. Drill holes and insert dowels.





Screw together step and bottom pieces together with smallest screw. Stick felt to the step.

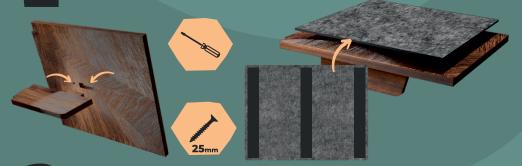

Screw the step with bottom piece to the back panel with five smallest screws from the back side.

