

# modbox | Mailbox Number Installation

## Step 1 – Gather Supplies


Vinyl mailbox numbers, tape, ruler, and squeegee (plastic spatula or credit card).

## Step 2 – Clean Surface

Window cleaner or denatured alcohol works best, as it will leave little residue.

## Step 3 – Measure & Place “Guide Tape”

Use masking tape or blue painter’s tape as a guide for number placement.

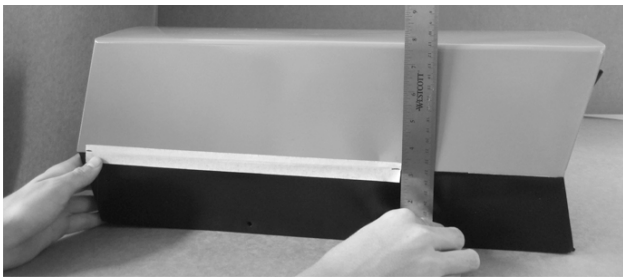


## Step 4 – Mark Starting Positions

Draw a vertical line on the transfer film just before the first number. Also, mark the first number position on the Guide Tape. Align.



## Step 5 – Peel of Backing

Peel the transfer film with vinyl numbers away from the smooth white backing. The numbers and transfer film are sticky.

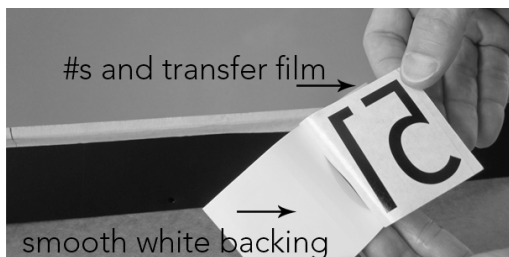


## Step 6 – Apply Numbers

Hold two corners of the transfer film and align the bottom of the numbers with the top of the Guide Tape. Align the starting number position. Apply the transfer film with numbers to the mailbox.



## Step 7 – Smooth & Press Numbers

Using a plastic squeegee, starting from the center smooth to the left edge. Then starting from the middle smooth to the right edge. Repeat 4-5 times. Try to avoid wrinkles or bubbles. Press firmly.

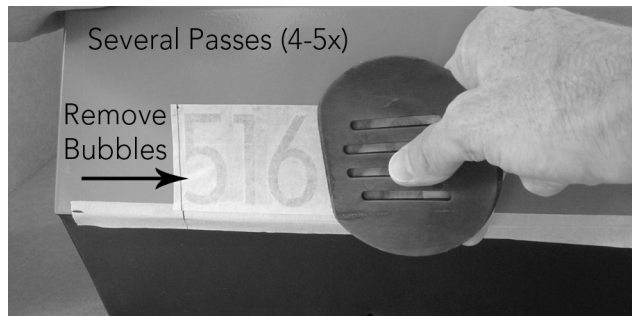

## Step 8 – Remove Transfer Film

Slowly remove the transfer film by pulling back at a sharp angle. Make sure the vinyl numbers have adhered to the mailbox!

